

LAWN-BOY®

Silver Series® Lawnmower

Model No. 10361—21000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing, Handle Bracket And Wheel Assembly	3	Engine-LEV115-350180E	10
Gear Case Assembly No. 104-7671	4	Engine-LEV115-350180E	11
Rear Axle Assembly	5	Engine-LEV115-350180E	12
Engine And Blade Assembly	6	Electric Starter No. 35709	13
Handle And Controls Assembly	7	Recoil Starter No. 590737	14
Battery And Harness Assembly	8	Recoil Starter No. 590694 (Optional)	15
Carburetor No. 640273	9		


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	89817	Leaf Shredder Kit	89860
Rear Bagging Kit	89906(100-6363)	Leaf Bag Kit with Chute	89811
Leaf Bag	89804		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

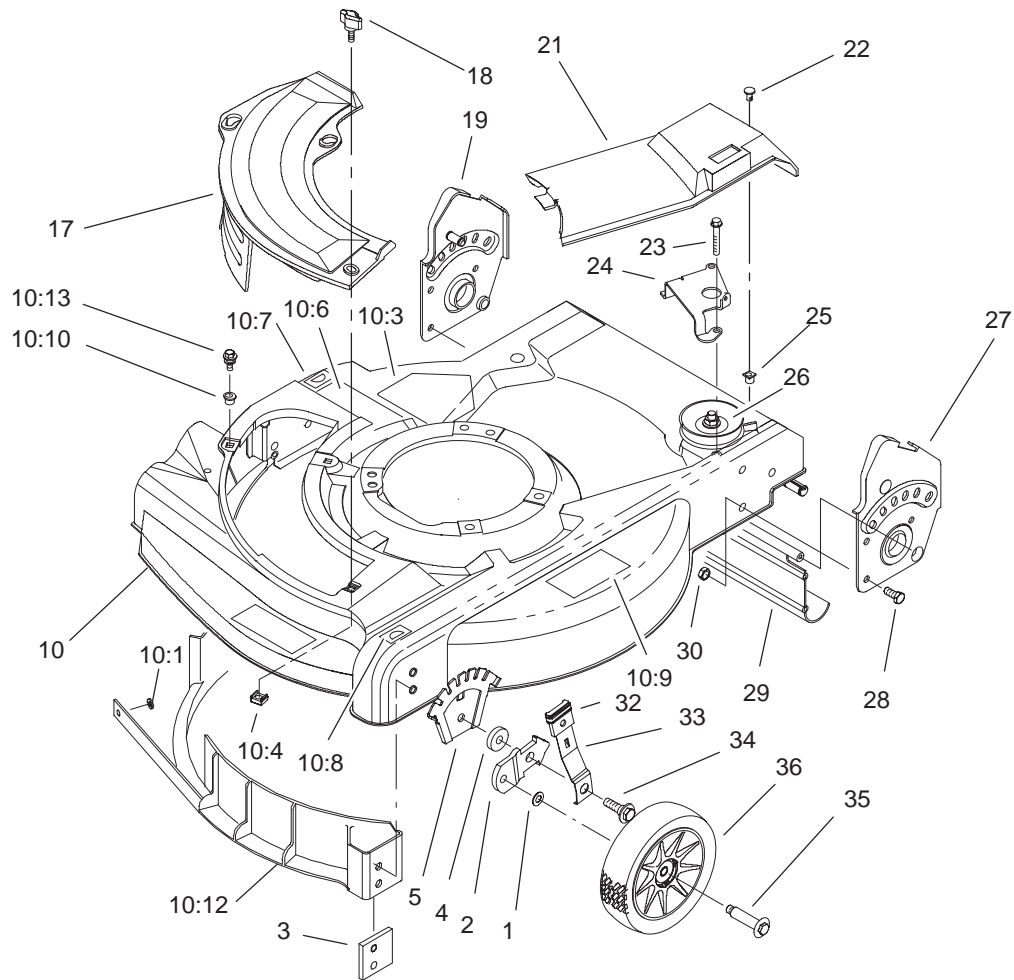


Sheet No.:2

Housing, Handle Bracket And Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	40-1940	2	Washer
2	95-7403-03	2	Bracket-Wheel Height Adjustment
3	92-7731	2	Plate - Baffle
4	92-4890	2	Washer - Wheel
5	92-4881-03	2	Plate - Height Adjustment
10	98-4477	1	Deck ASM
10:1	3269-26	1	Washer-Flat
10:3	43-8480	1	Decal-Danger
10:4	613765	1	Nut-Cage
10:6	99-6018	1	Decal - Warning
10:7	92-2914	1	Decal - HOC, RH
10:8	92-2915	1	Decal - HOC, LH
10:9	93-7250	1	Decal-Warning
10:10	94-1610	2	Grommet - Plastic
10:12	92-7719	2	Insert - Housing
10:13	614677	2	Screw- Sems
17	92-8630	1	Plate-Mulch
18	98-8332	1	Knob
19	92-7723	1	Handle Bracket ASM-RH
21	95-7068	1	Cover - Drive
22	92-9665	1	Screw
23	65-5221	2	Screw-HWHTF
24	92-7728-03	1	Guide - Transmission

Ref. No.	Part No.	Qty.	Description
25	605120	1	Grommet
26	104-7671	1	Gear Case ASM
27	92-7724	1	Handle Bracket ASM-LH
28	322-3	6	Screw-HH
29	92-8647	1	Shield - Trailing
30	3296-29	6	Nut-Lock
32	92-1008	2	Knob-Lever, Height Adjustment
33	614687	2	Arm-Front Spring
34	614672	2	Bolt-Shoulder
35	92-1099	2	Bolt-Shoulder
36	684776	2	Wheel & Tire ASM
*	95-7052	1	Plate - Chute Opening

* Not illustrated

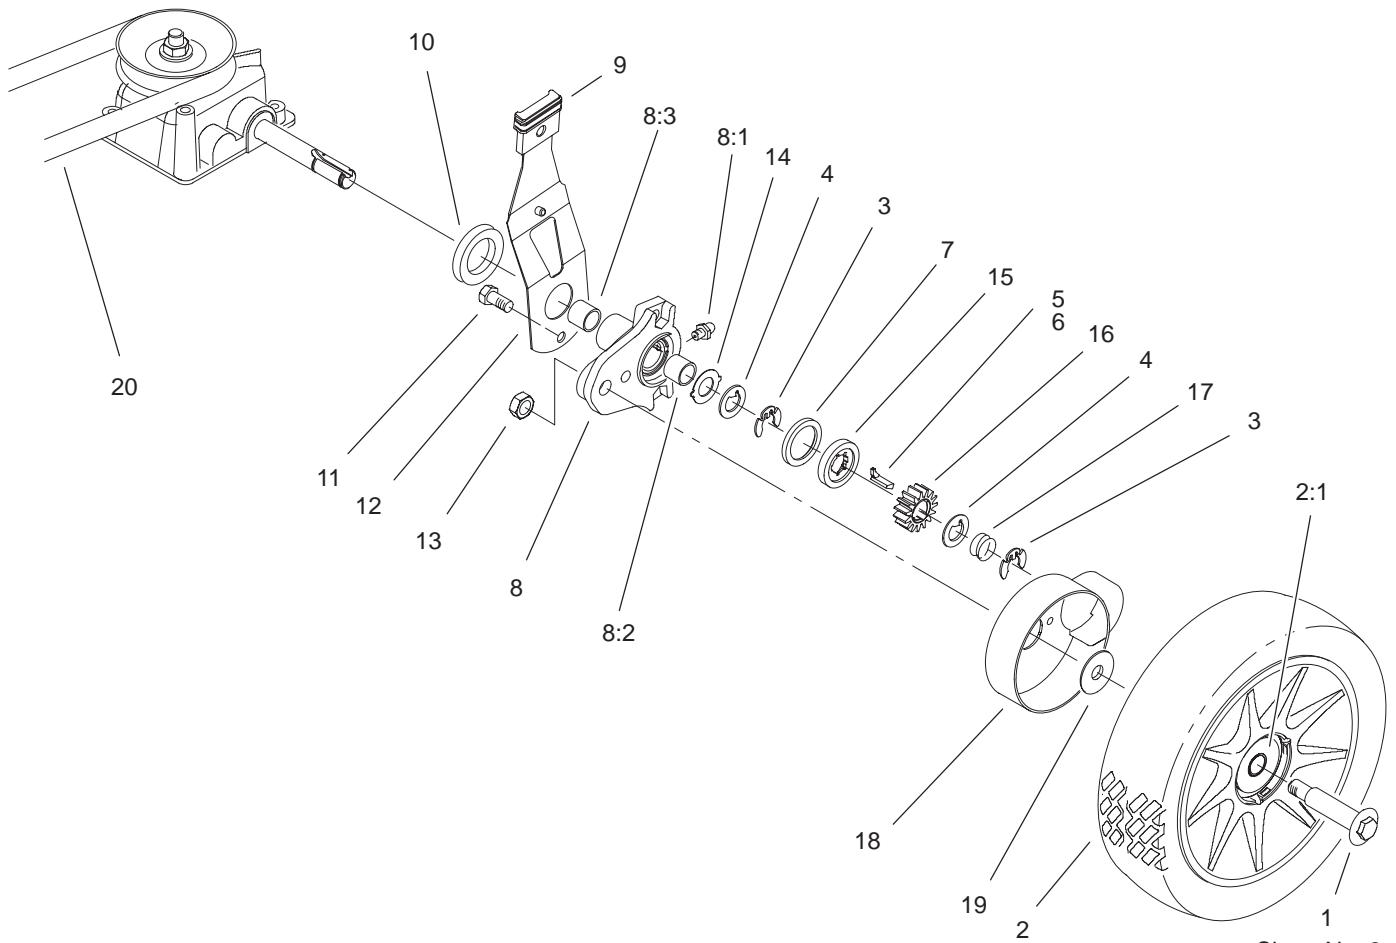


Sheet No.:3

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	Wheel & Tire ASM
2:1	27-6250	2	Bushing
3	65-2720	4	Ring-Klip
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
*6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Arm ASM-Rear Height Adjustment
8:1	302-56	1	Fitting-Zerk
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
9	92-1008	2	Knob-Lever, Height Adjustment
10	614447	2	Spacer-Axle Shaft
11	32144-85	2	Screw-HH
12	92-1004	2	Rear Spring Arm ASM
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel

Ref. No.	Part No.	Qty.	Description
19	614426	2	Washer-Stepped
20	93-7381	1	V-Belt

* Not illustrated

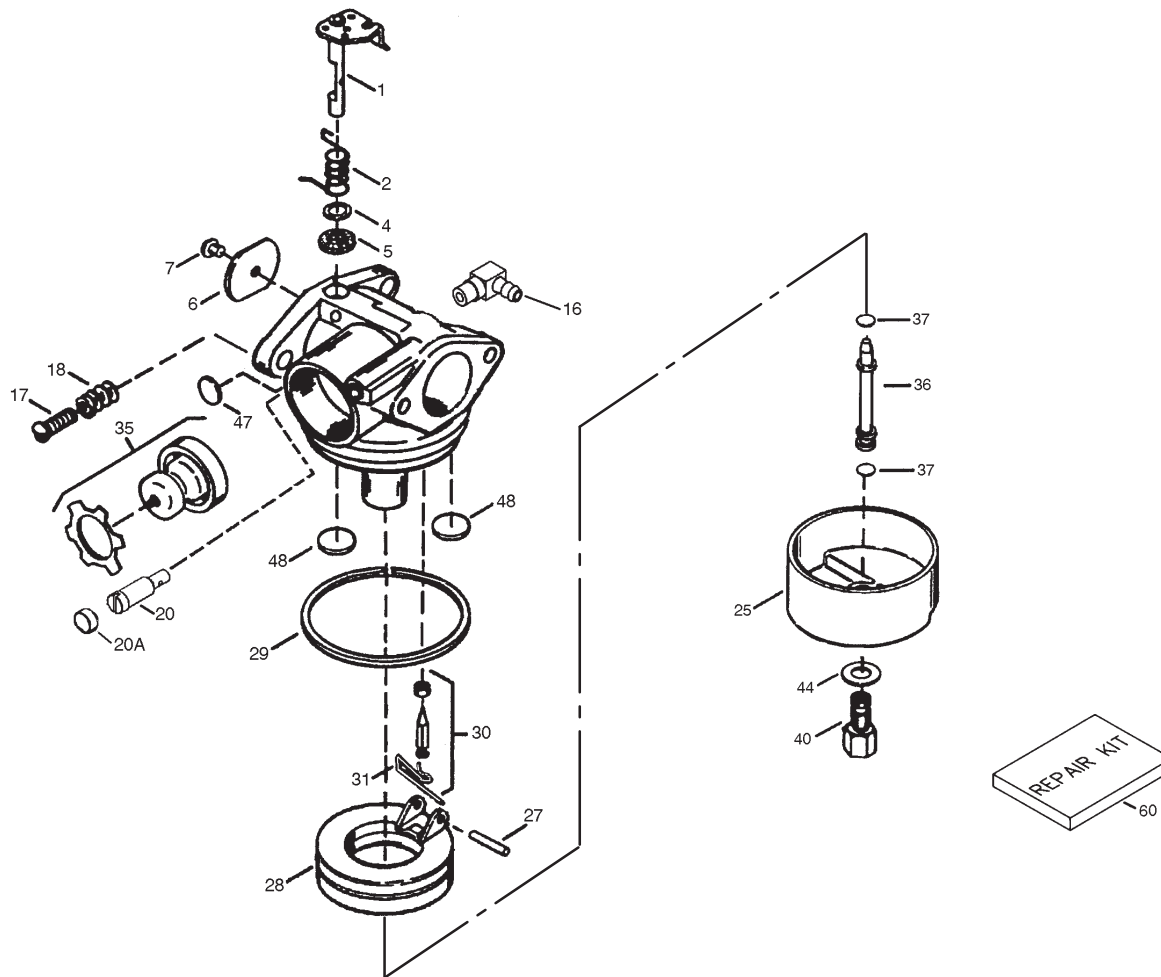


Carburetor No. 640273

Ref. No.	Part No.	Qty.	Description
1	631615	1	Throttle Shaft & Lever Assembly
2	631767	1	Throttle Return Spring
4	631184	1	Dust Seal Washer
5	631183	1	Dust Seal (Throttle)
6	640070	1	Throttle Shutter
7	650506	1	Shutter Screw
16	631807	1	Fuel Fitting
17	651025	1	Throttle Crack Screw/Idle Speed Screw
18	630766	1	Tension Spring
20	640027	1	Idle Restrictor Screw
20A	640200	1	Idle Restrictor Screw Cap
25	631867	1	Float Bowl
27	631024	1	Float Shaft
28	632765	1	Float
29	631028	1	Float Bowl "O" Ring
30	631021	1	Inlet Needle, Seat, & Clip (Incl. 31)
31	631022	1	Spring Clip
35	640259	1	Primer Bulb/Retainer Ring
36	640080	1	Main Nozzle Tube

Ref. No.	Part No.	Qty.	Description
37	632547	2	O-Ring, Main Nozzle Tube
40	632746	1	High Speed Bowl Nut
44	27110A	1	Bowl Nut Washer
47	630748	1	Welch Plug, Idle Mixture Well
48	631027	1	Welch Plug, Atmospheric Vent
60	632760B	1	Repair Kit

Obtain parts from local Tecumseh dealer

Engine-LEV115-350180E

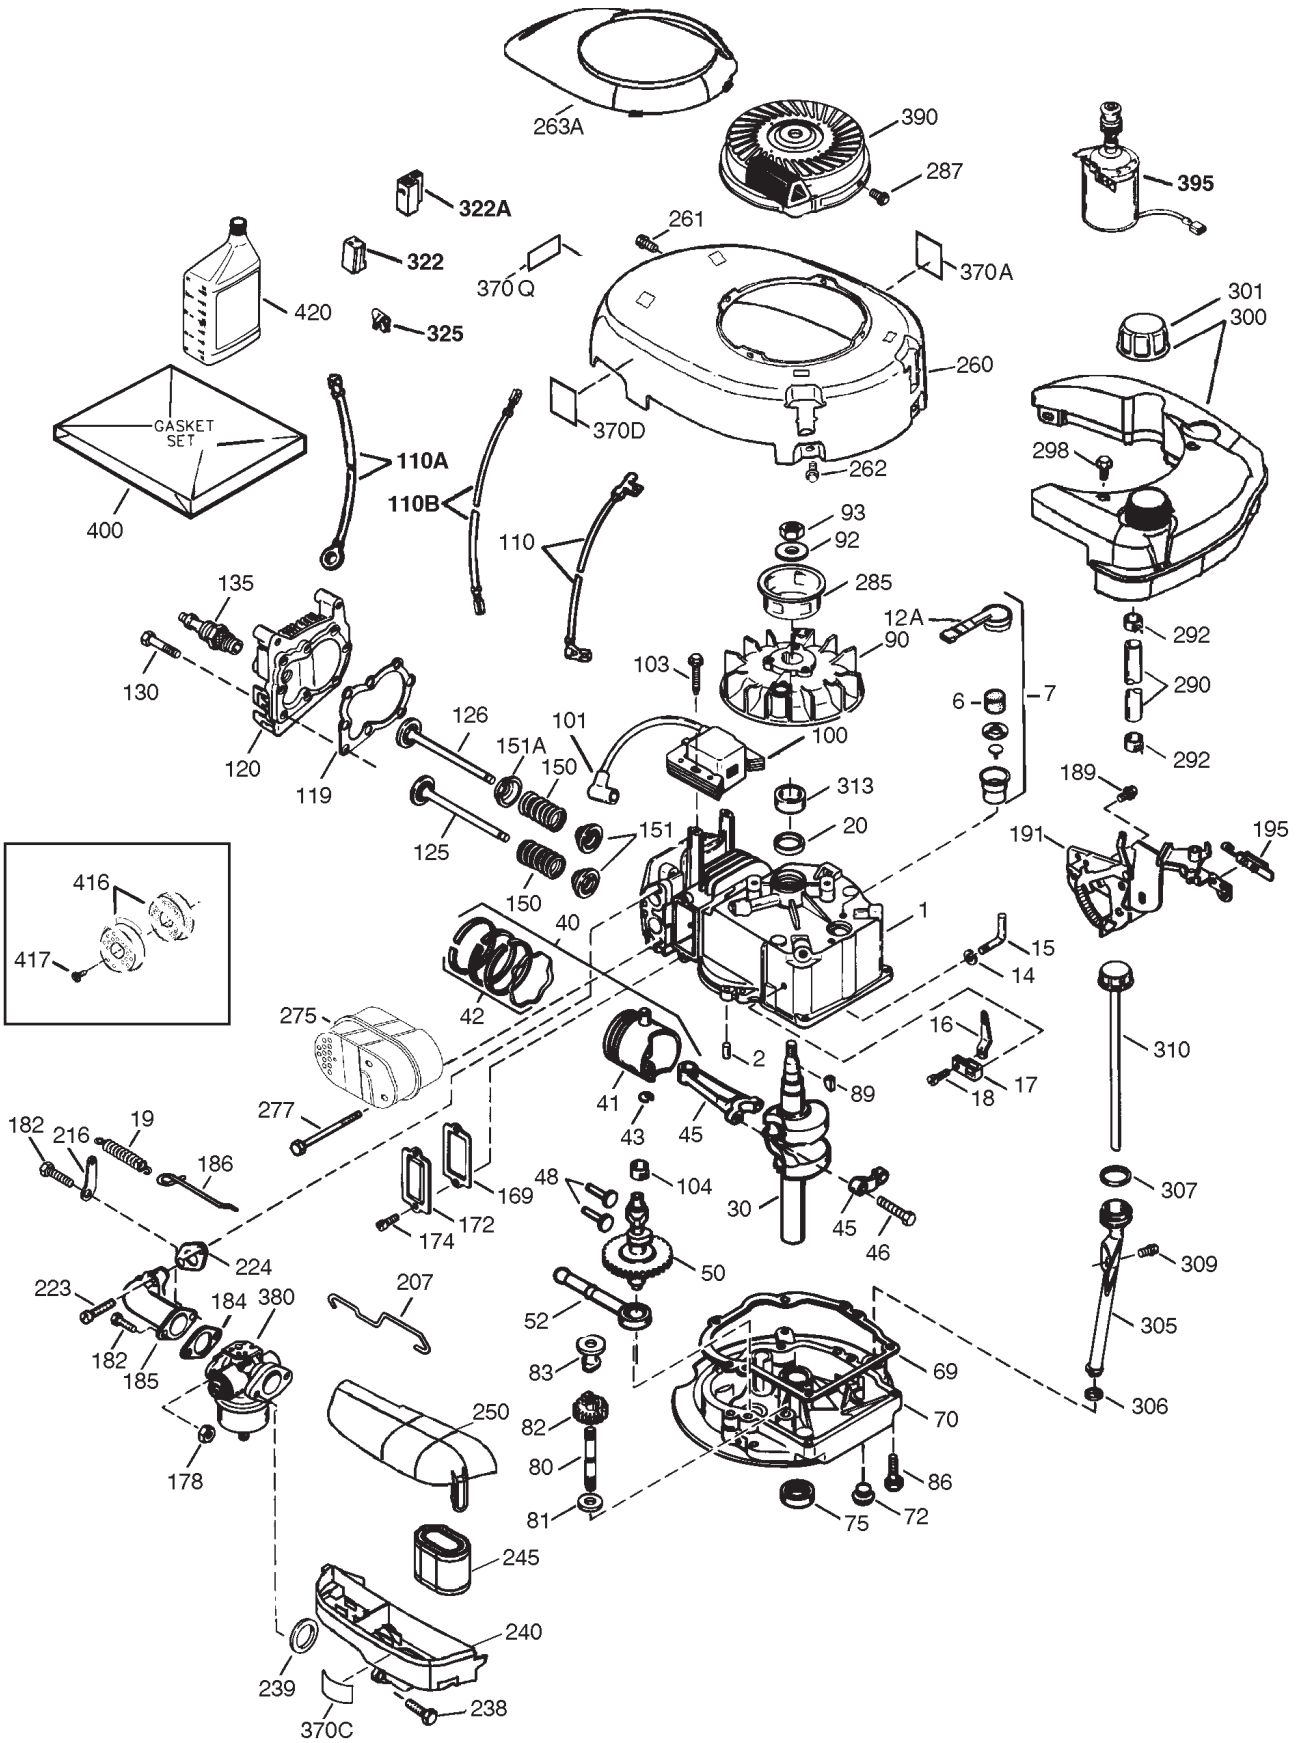

Engine-LEV115-350180E

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	37266	1	Cylinder (Incl. 2,20 & 150)	120	36825	1	Cylinder Head
2	26727	2	Dowel Pin	125	37288	1	Exhaust Valve (Std.) (Incl. 151)
6	33734	1	Breather Element	126	37289	1	Intake Valve (Std.) (Incl. 151)
7	36557	1	Breather Body ASM (Incl. 6 & 12A)	130	6021A	6	Screw
12A	36558	1	Breather Cover & Tube	135	35395	1	Resistor Spark Plug (RJ19LM)
14	28277	1	Washer	150	31672	2	Valve Spring
15	30589	1	Governor Rod (Incl. 14)	151	31673	2	Valve Spring Cap
16	34839A	1	Governor Lever	151A	40017	1	Intake Valve Seal
17	31335	1	Governor Lever Clamp	169	36783	1	Valve Cover Gasket
18	651018	1	Screw, Torx T-15	172	36784	1	Valve Cover
19	36281	1	Extension Spring	174	30200	2	Screw
20	32600	1	Oil Seal	178	29752	2	Nut & Lock Washer
30	37616	1	Crankshaft	182	6201	2	Screw
40	40004	1	Piston, Pin & Ring Set (Std.)	184	26756	1	Carburetor To Intake Pipe Gasket
40	40005	1	Piston, Pin & Ring Set (.010" OS)	185	36785	1	Intake Pipe
41	36070	1	Piston & Pin ASM (Std.) (Incl. 43)	186	32653	1	Governor Link
41	36071	1	Piston & Pin ASM (.010" OS) (Incl. 43)	189	650839	2	Screw
42	40006	1	Ring Set (Std.)	191	36559A	1	S.E. Brake Bracket (Incl. 195)
42	40007	1	Ring Set (.010" OS)	195	610973	1	Terminal
43	20381	2	Piston Pin Retaining Ring	207	34336	1	Throttle Link
45	36777	1	Connecting Rod ASM (Incl. 46)	216	33086	1	R.P.M. Adjusting Lever
46	32610A	2	Connecting Rod Bolt	223	650451	2	Screw
48	27241	2	Valve Lifter	224	36786	1	Intake Pipe Gasket
50	37460	1	Camshaft	238	650806	2	Screw
52	29914	1	Oil Pump ASM	239	34338	1	Air Cleaner Gasket
69	37130	1	Mounting Flange Gasket	240	36743	1	Air Cleaner Body
70	34311E	1	Mounting Flange (Incl. 72 thru 83, 306)	245	36745	1	Air Cleaner Filter
72	36083	1	Oil Drain Plug	250	36744	1	Air Cleaner Cover
75	27897	1	Oil Seal	260	36800	1	Blower Housing
80	30574A	1	Governor Shaft	261	30200	2	Screw
81	30590A	1	Washer	262	650831	2	Screw
82	30591	1	Governor Gear ASM (Incl. 81)	263A	36758	1	Starter Grill
83	30588A	1	Governor Spool	275	37462	1	Muffler
86	650488	6	Screw	277	650988	2	Screw
89	611004	1	Flywheel Key	285	35000A	1	Starter Cup
90	611044	1	Flywheel	287	650926	2	Screw
92	650815	1	Belleville Washer	290	34357	1	Fuel Line
93	650816	1	Flywheel Nut	292	26460	2	Fuel Line Clamp
100	34443B	1	Solid State Ignition	298	28763	3	Screw
101	610118	1	Spark Plug Cover	300	36757	1	Fuel Tank (Incl. 292 & 301)
103	651007	2	Screw, Torx T-15	301	36246	1	Fuel Cap
104	37480	1	Cam Bushing	305	35577	1	Oil Fill Tube
110	37047	1	Ground Wire	306	36996	1	"O"-Ring
110A	36953	1	Wiire ASM	307	35499	1	"O"-Ring
110B	36954	1	Wiire ASM	309	650562	1	Screw
119	36787	1	Cylinder Head Gasket	310	36801	1	Dipstick
				313	34080	1	Spacer
				322	35013	1	Body Connector
				322A	610885	1	Body Connector
				325	35249	1	Spring Clip
				370A	36261	1	Lubrication Decal
				370C	37318	1	Primer Decal (3X)

Obtain parts from local Tecumseh dealer

Engine-LEV115-350180E

Ref. No.	Part No.	Qty.	Description
370D	35977	1	Caution Decal
370Q	37548	1	Emissions Decal
380	640273	1	Carburetor (Incl. 184)
390	590737	1	Rewind Starter
400	36792B	1	Gasket Set
416	36085	1	Spark Arrestor Kit
417	650821	1	Screw
420	730225A	1	SAE30 4-Cycle Engine Oil (Quart)
*	750860	1	Shortblock

Ref. No.	Part No.	Qty.	Description

Obtain parts from local Tecumseh dealer

* Not illustrated

LAWN-BOY®