



Insight™ Gold Lawn Mower

Model No. 10696 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front End and Tunnel Assembly	 3	Top Cover Assembly Honda GCV160A RTL1	 18
Housing Assembly No. 108-9346	 4	Label Assembly Honda GCV160A RTL1	 19
Rear Axle and Transmission Assembly	 5	Oil Pan Assembly Honda GCV160A RTL1	 20
Transmission Assembly No. 107-3860	 6	Crankshaft Assembly Honda GCV160A RTL1	 21
Upper Handle Assembly	 7	Piston and Connecting Rod Assembly Honda GCV160A RTL1	 22
Lower Handle Assembly	 8	Camshaft Pulley Assembly Honda GCV160A RTL1	 23
Blade and Engine Assembly	 9	Recoil Starter Assembly Honda GCV160A RTL1	 24
Electrical Assembly	 10	Fan Cover Assembly Honda GCV160A RTL1	 25
Rear Bag Assembly	 11	Carburetor Assembly Honda GCV160A RTL1	 26
Cylinder Barrel Assembly Honda GCV160A RTL1	 12	Air Cleaner Assembly Honda GCV160A RTL1	 27
Muffler Assembly Honda GCV160A RTL1	 13	Attachments and Accessories List	 28
Flywheel Assembly Honda GCV160A RTL1	 14		
Starter Motor Assembly Honda GCV160A RTL1	 15		
Control Assembly Honda GCV160A RTL1	 16		
Choke Base Assembly Honda GCV160A RTL1	 17		

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❸ Obtain from your local Honda dealer

- ❷ Not serviced separately

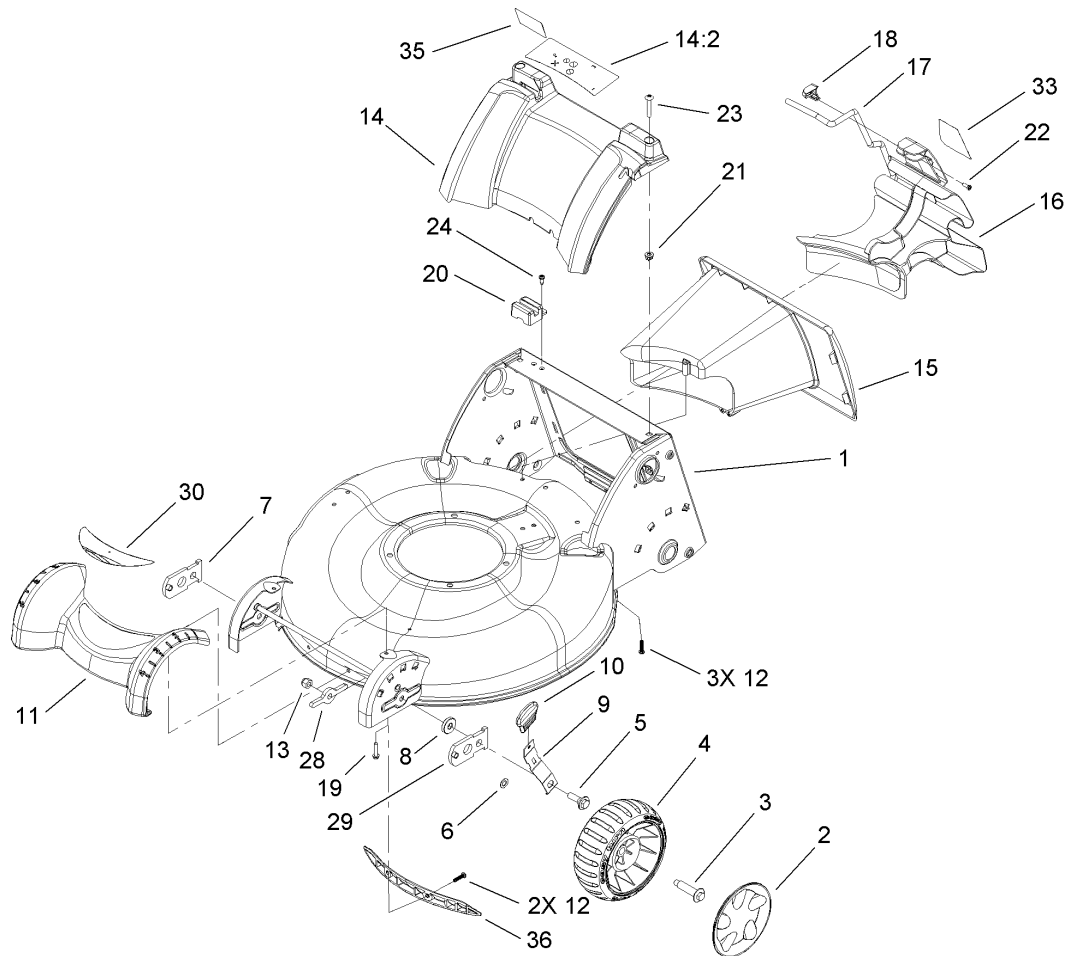


Front End and Tunnel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	108-9346	1	Housing ASM	24	105-6849	2	Screw-Thread Forming
2	107-3886	2	Cover-Wheel, 7 Inch	28	108-1048	2	Washer-Support, Front
3	614650	2	Bolt-Shoulder	29	108-1044	1	Arm-Pivot, LH
4	107-3891	2	7 Inch Wheel ASM	30	108-7453	1	Decal
5	614672	2	Bolt-Shoulder	33	108-7461	1	Decal
6	40-1940	2	Washer	35	107-1938	1	Decal-Bag Attachment
7	107-3877	1	Arm-Pivot, RH	36	108-7502	1	Insert-Housing
8	92-4890	2	Washer	39	110-1751	1	Mulch Plug ASM
9	107-3878	2	Arm-Spring				
10	107-1904	2	Knob-Lever, HOC				
11	107-3926	1	Cover-Front				
12	108-7476	5	Screw-Plastite				
13	3296-39	2	Nut-Lock, NI				
14	108-9349	1	Cover-Rear				
14:2	107-3888	1	Decal-Safety				
15	107-3881	1	Tunnel				
16	107-3907	1	Plug-Chute				
17	108-1038	1	Latch-Plug				
18	108-0956	1	Retainer-Latch				
19	108-7475	2	Screw-Plastite				
20	108-0990	1	Module-Switch				
21	94-1610	2	Nut-Clip				
22	32144-111	1	Screw-PPH				
23	108-0965	2	Screw-PTH				

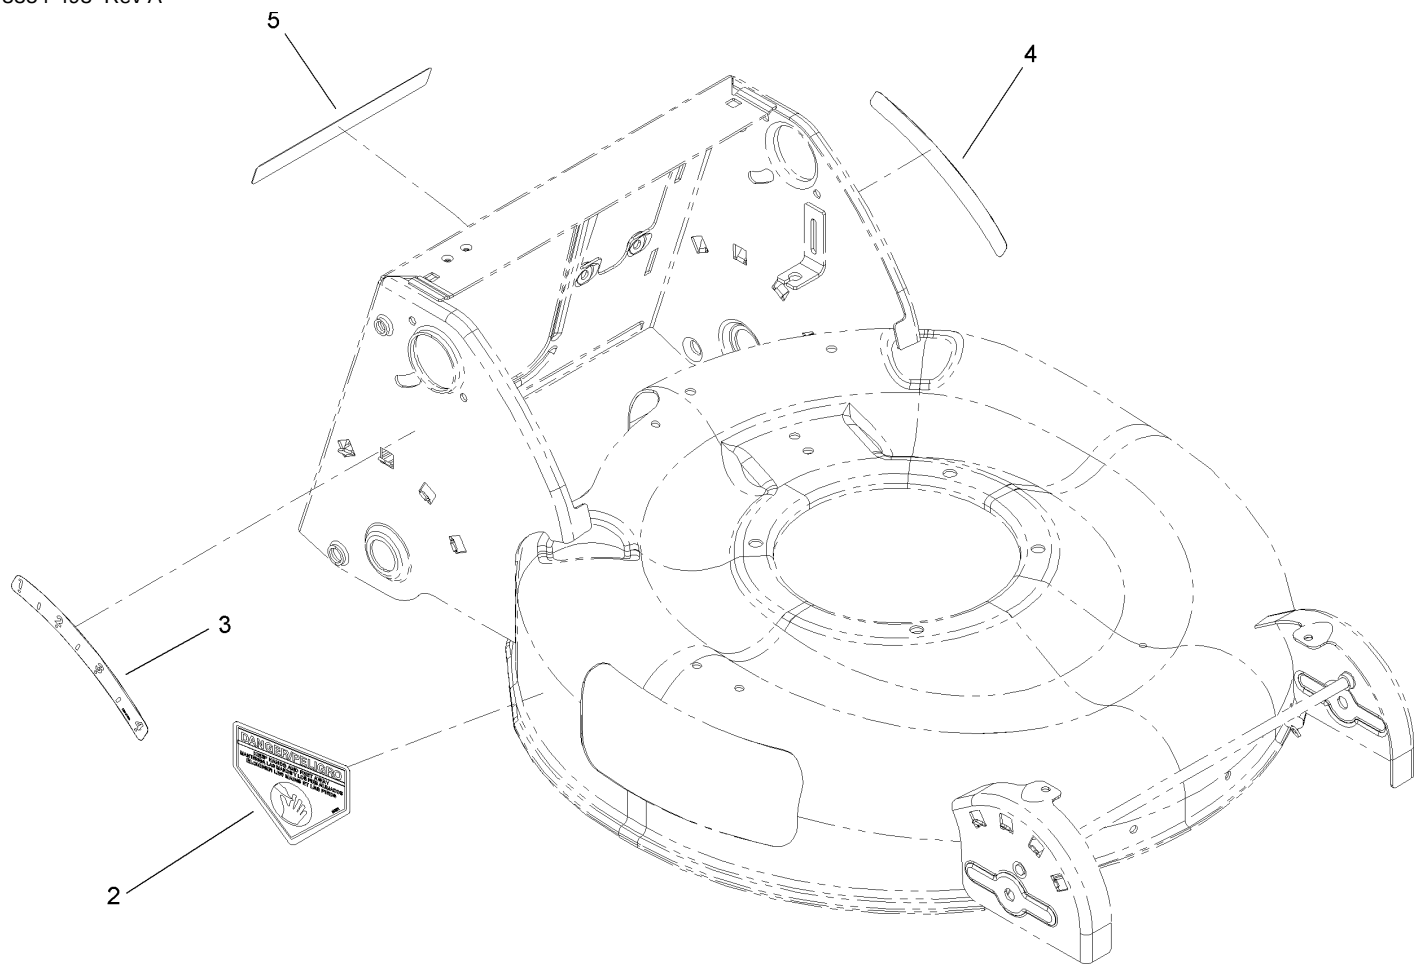 

Housing Assembly No. 108-9346


Ref	Part No.	Qty.	Description
2	94-8072	1	Decal-Danger
3	108-7450	1	Decal-HOC, RH
4	108-7451	1	Decal-HOC, LH
5	107-3889	1	Decal-Safety

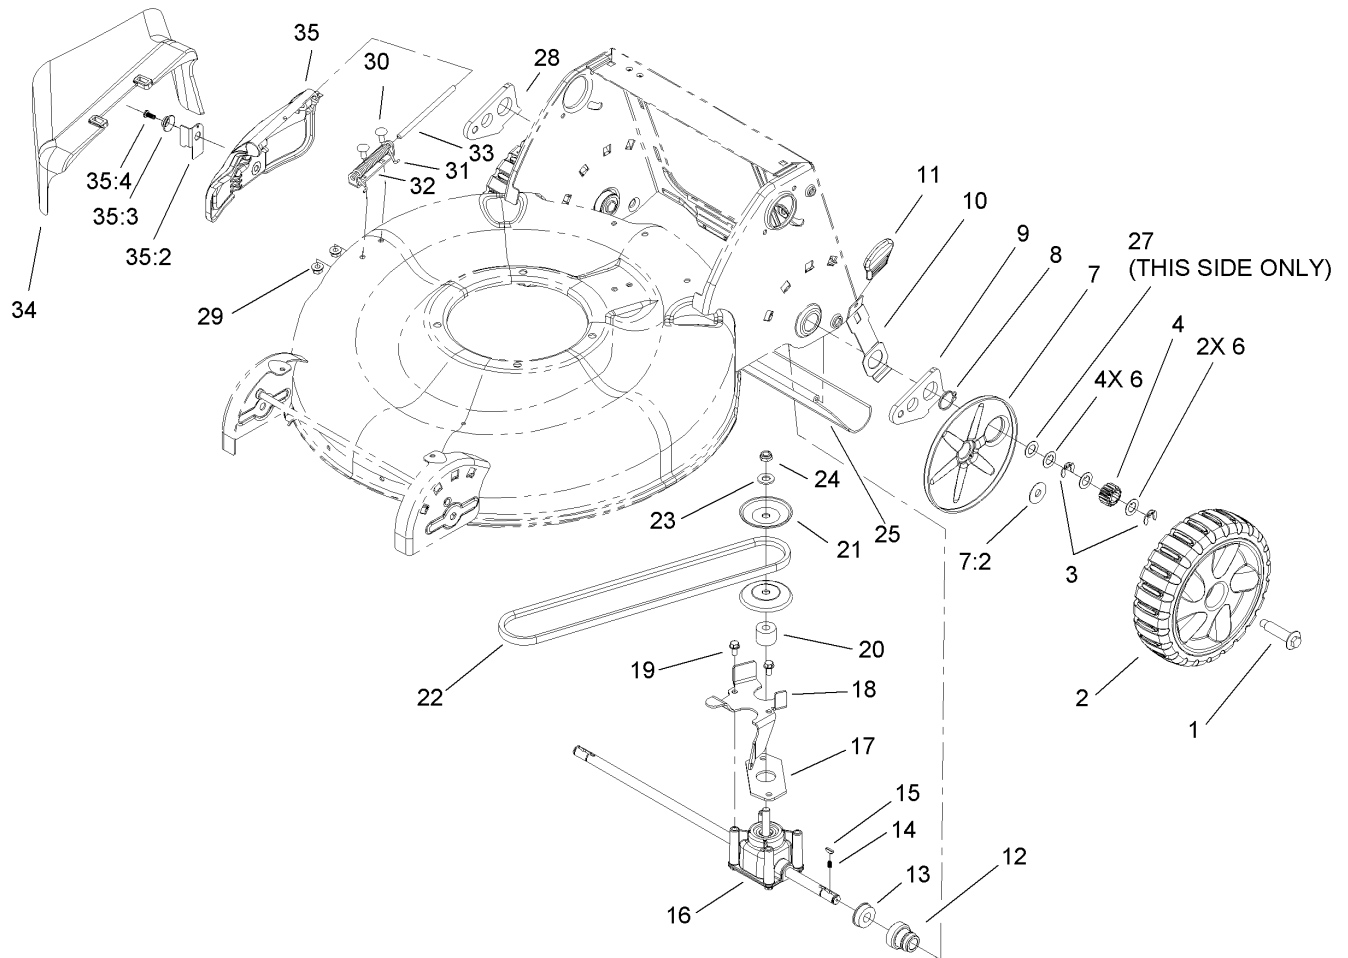 

Rear Axle and Transmission Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	107-3906	2	Rear Wheel ASM
3	65-2720	4	Klipring-Locking
4	105-3040	2	Gear-Pinion, 15T
6	105-6840	6	Washer-Thrust
7	110-1793	2	Wheel Cover ASM
1 2 7:1		1	Cover-Wheel
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	107-3880	2	Arm-Spring, Rear
11	107-1904	2	Knob-Lever, HOC
12	104-8698	2	Retainer-Bearing, HOC
13	104-8699	2	Bearing-Ball
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	107-3860	1	Transmission ASM
17	108-9756	1	Gasket-Gearbox
18	107-3884-03	1	Bracket-Transmission
19	32144-4	2	Screw-HWH
20	92-5791	1	Spacer
21	100-1176	2	Pulley-Half
22	91-2258	1	V-Belt
23	3256-24	1	Washer-Flat

Ref	Part No.	Qty.	Description
24	3296-5	1	Nut-Lock
25	107-3904	1	Shield-Trailing
27	36-4780	1	Washer
28	108-9343	1	Arm-Rear Pivot, RH
29	32128-32	2	Nut-HHF
30	3229-11	2	Screw-CARR
31	99-5293	1	Spring-Torsion
32	99-5292	1	Bracket-Cover
33	99-5291	1	Rod-Cover
34	105-3028	1	Chute-Discharge, Side
35	106-8376	1	Discharge Door ASM
35:2	107-0795	1	Latch-Door
35:3	107-7456	1	Cap-Door
35:4	107-7461	1	Screw-Plastite

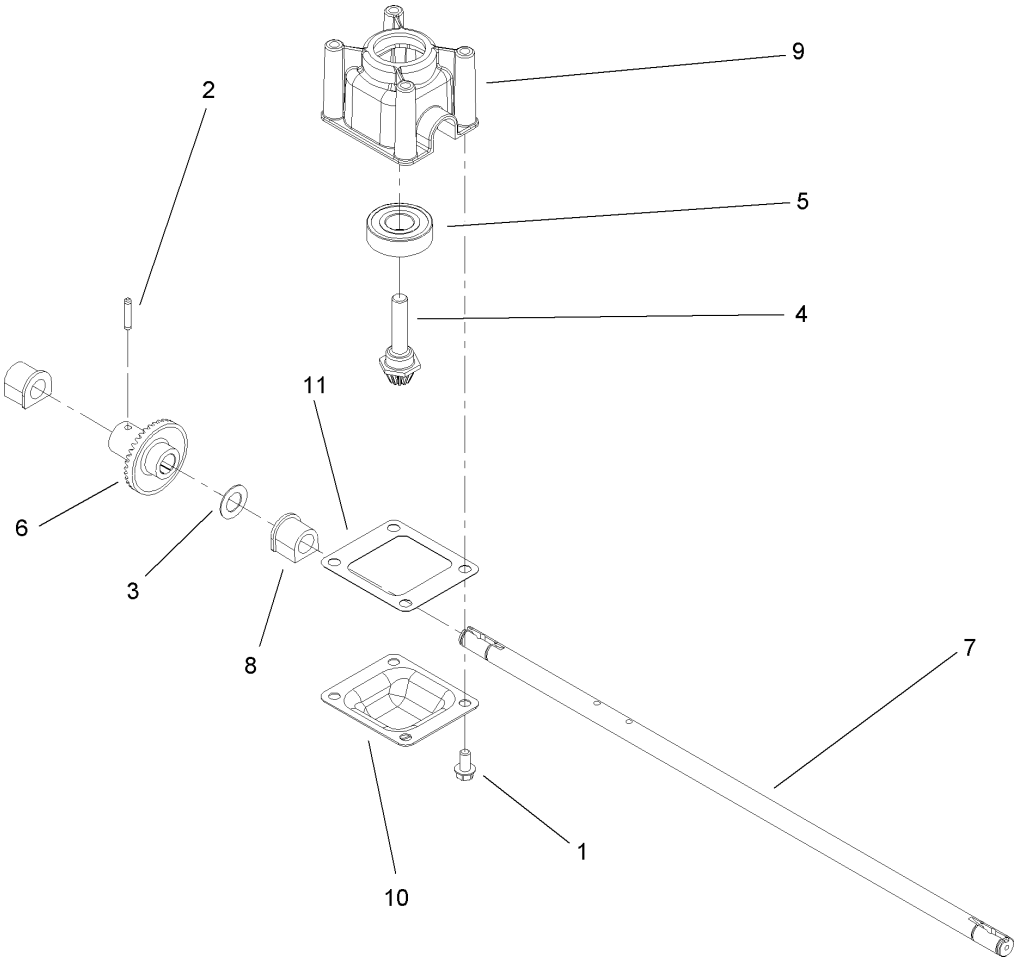 


Transmission Assembly No. 107-3860

Ref	Part No.	Qty.	Description				
1	32144-4	4	Screw-HWH				
2	3285-19	1	Pin-Groove				
3	36-4780	1	Washer				
4	92-5790	1	Pinion				
5	100-1048	1	Bearing-Ball				
6	104-8671	1	Gear-Bevel, 37T				
7	107-3861	1	Shaft-Output				
8	104-8673	2	Bushing-Shaft, Output				
9	104-8674	1	Gearcase-Upper				
10	104-8675-03	1	Cover-Gearcase				
11	105-6839	1	Gasket-Gearcase				

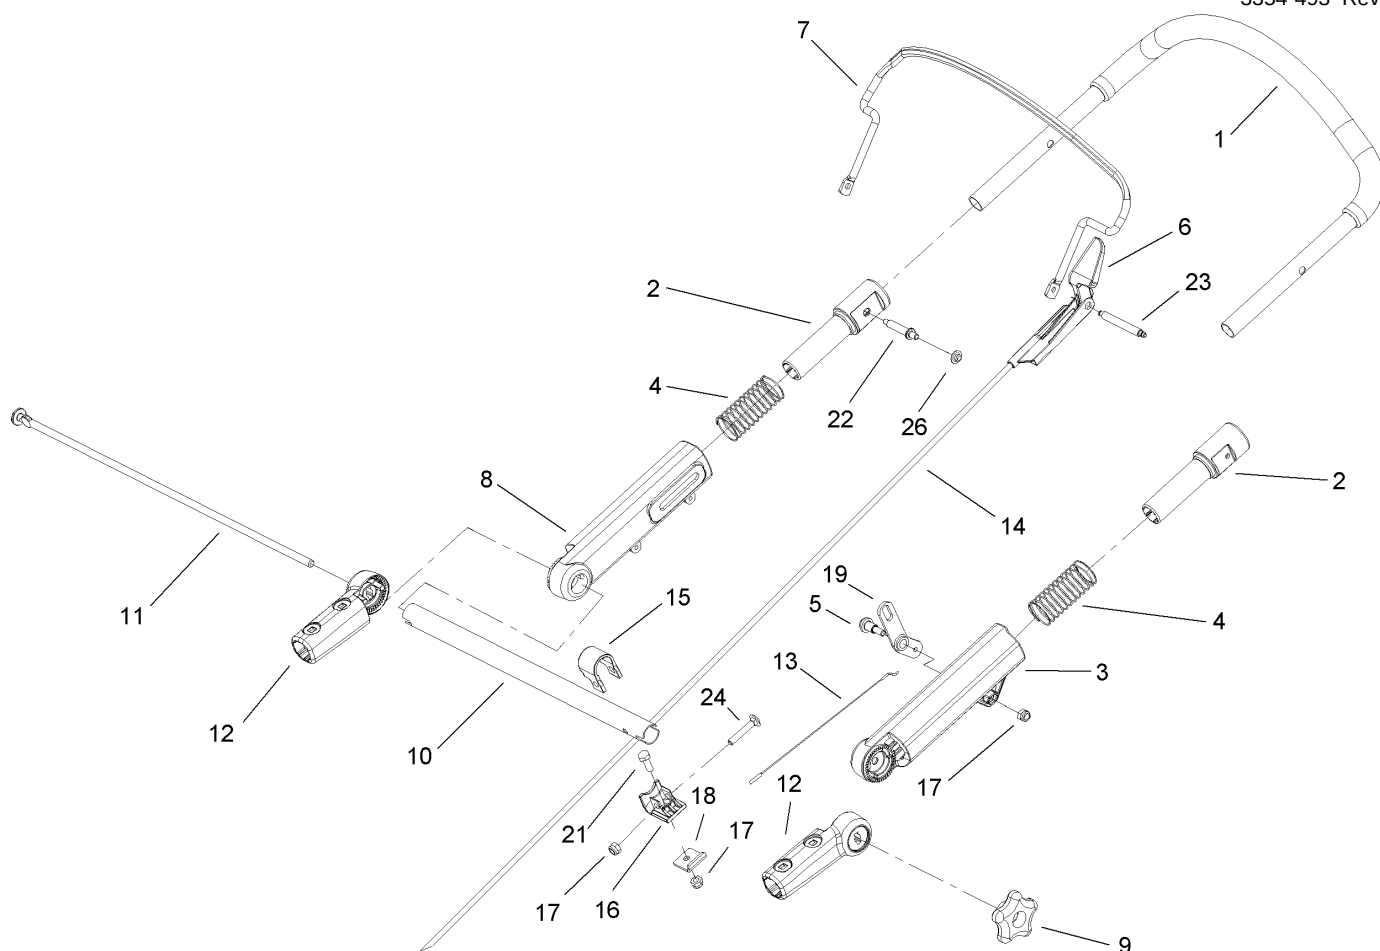 


Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0974	1	Upper Handle ASM				
2	107-3866	2	Sleeve-Handle				
3	110-1755	1	Slide-Top, LH				
4	107-3869	2	Spring-Compression				
5	104-0858	1	Bolt-Shoulder				
6	107-3943	1	Stop-Bail				
7	110-1819-03	1	Bail-Brake				
8	107-3863	1	Slide-Top, RH				
9	107-3937	1	Knob				
10	107-3867-03	1	Tube-Cross				
11	107-3871	1	Rod-Threaded				
12	107-3865	2	Mount-Handle, Lower				
13	107-3902	1	Cable-Traction				
14	107-3903	1	Cable-Brake				
15	108-1045	1	Support-Cable				
16	108-1046	1	Support-Guide, Cable				
17	3296-73	3	Nut-Lock, NI				
18	108-7454	1	Clamp-Cable				
19	107-3893	1	Lever-Traction				
21	321-4	1	Screw-HH				
22	108-0959	1	Pin-Handle				
23	108-1008	1	Pin-Bail, LH				
24	108-0988	1	Screw-CARR				
26	108-9378	1	Retainer-Push On				

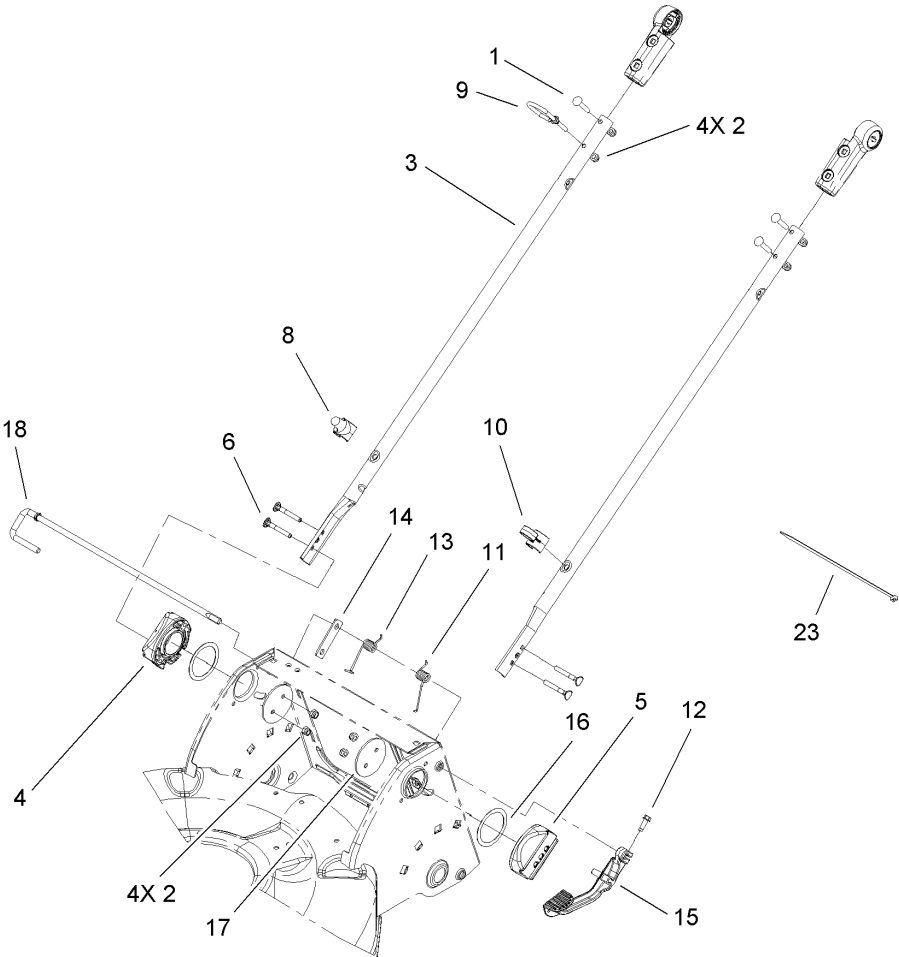 


Lower Handle Assembly

Ref	Part No.	Qty.	Description				
1	108-0988	3	Screw-CARR				
2	3296-73	8	Nut-Lock, NI				
3	107-3887-03	2	Tube-Lower				
4	108-9339-03	1	Mount-Handle, RH				
5	108-9340-03	1	Mount-Handle, LH				
6	95-4453	4	Screw				
8	108-0994	1	Guide-Rope, Lower				
9	107-3908	1	Guide-Rope, Upper				
10	106-6805	1	Guide-Cable				
11	108-0952	1	Spring-Torsion, LH				
12	49-2040	1	Screw-HWHTF				
13	108-0953	1	Spring-Torsion, RH				
14	107-3946	1	Plate-Lock, Handle				
15	110-1823-03	1	Lever-Release				
16	107-3947	2	Washer-Nylon				
17	107-3944-03	2	Plate				
18	110-1822	1	Rod-Handle Release				
23	614249	1	Strap-Tie				

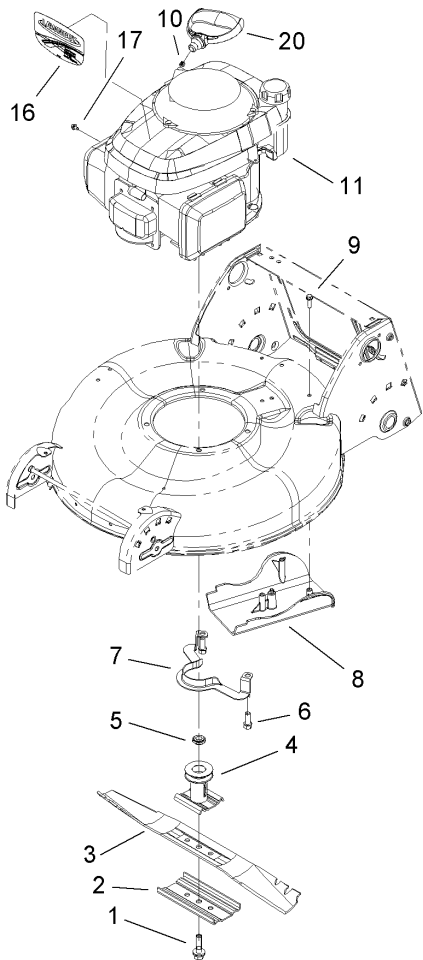 


Blade and Engine Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	108-3766-03	1	Support-Blade				
3	108-0954-03	1	Blade-21 Inch				
4	106-3987	1	Blade Driver ASM				
5	106-3999	1	Spacer-Driver				
6	92-1624	3	Screw				
7	105-3030-03	1	Guide-Belt				
8	110-1832	1	Cover-Belt				
9	46-8091	3	Screw-HWH				
10	92-1701	1	Stop-Rope				
11		1	Engine-Honda, Gvc160A Rtl1				
16	108-7529	1	Decal				
17	98-1394	1	Screw-HWH				
20	110-1778	1	Handle-Recoil				

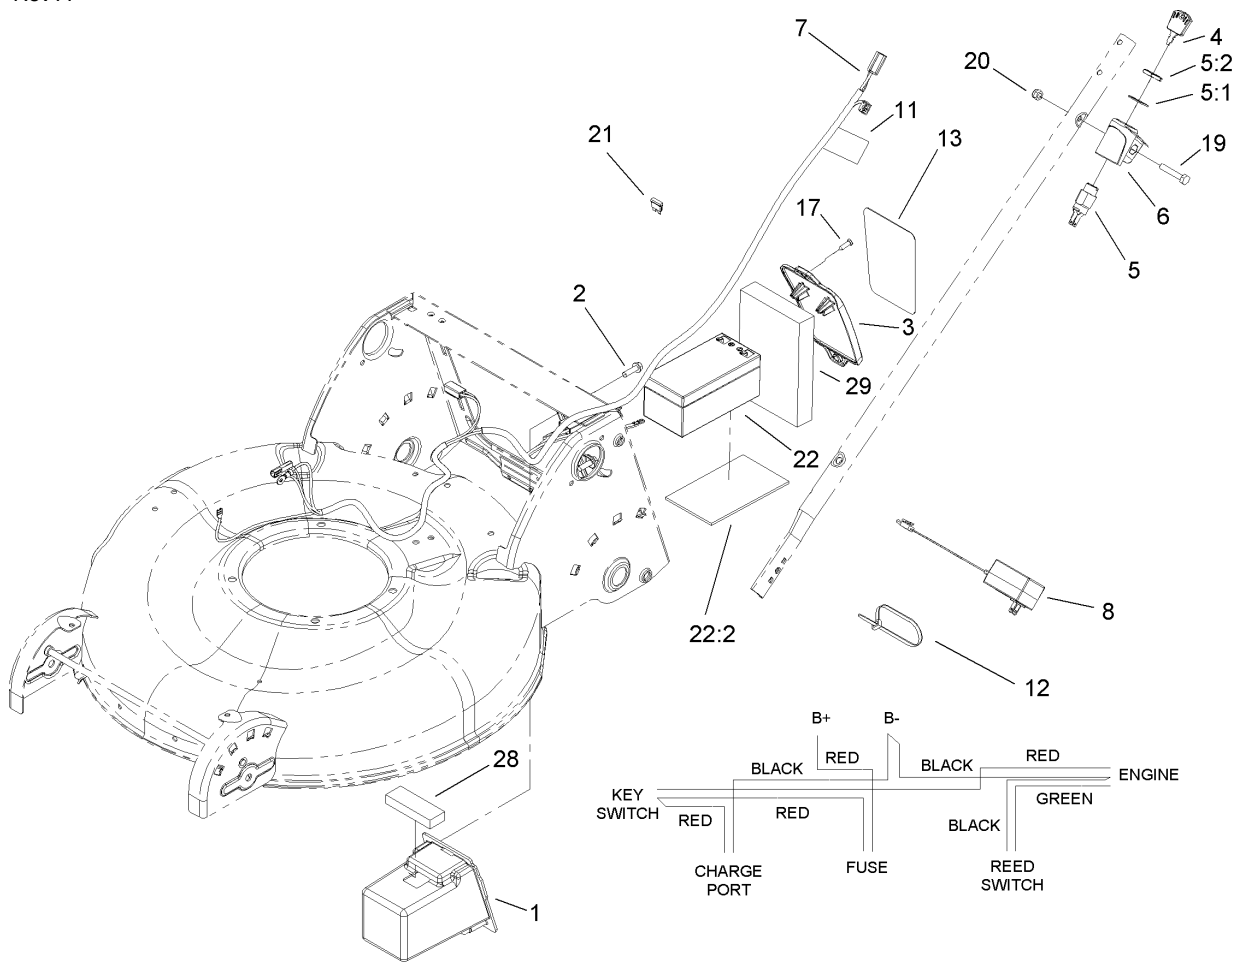 


Electrical Assembly

Ref	Part No.	Qty.	Description				
1	107-3932	1	Box-Battery				
2	46-8091	4	Screw-HWH				
3	108-0981	1	Cover-Battery				
4	700918	1	Key				
5	46-5780	1	Switch-Starter				
5:1	3254-5	1	Washer-Tooth				
5:2	218-461	1	Nut-HH				
6	108-9760	1	Mount-Switch				
7	108-0982	1	Harness-Wire				
8	104-7401	1	Charger-12 Volt				
11	104-7953	1	Decal-Harness				
12	614249	2	Strap-Tie				
13	108-0992	1	Decal-Instruction, Battery				
17	32144-111	2	Screw-PPH				
19	321-51	1	Screw-HH				
20	3296-73	1	Nut-Lock, NI				
21	99-6124	2	Fuse-40 Amp				
22	108-9358	1	Battery				
22:2	108-0987	1	Foam-Battery				
28	92-7148	1	Foam-Sidepanel				
29	110-1846	1	Foam - Sidepanel				

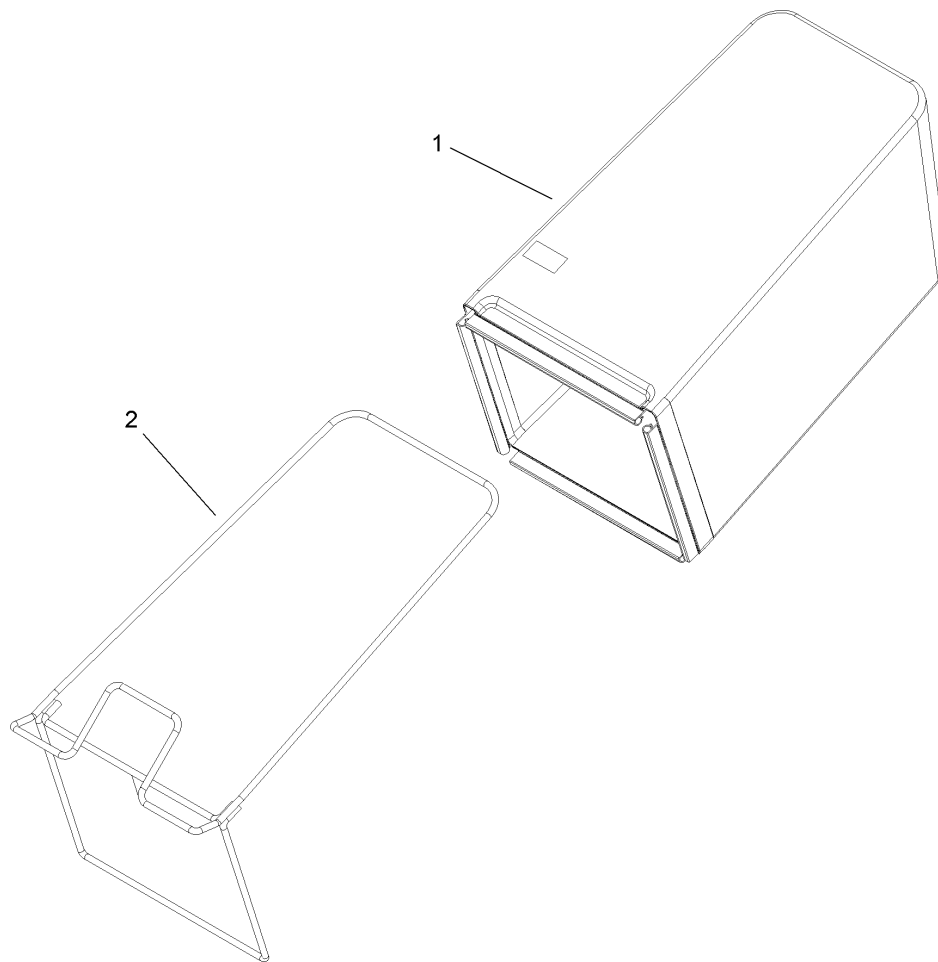 

Rear Bag Assembly


Ref	Part No.	Qty.	Description				
1	107-3911	1	Bag-Grass				
2	107-3912-03	1	Bag Frame ASM				

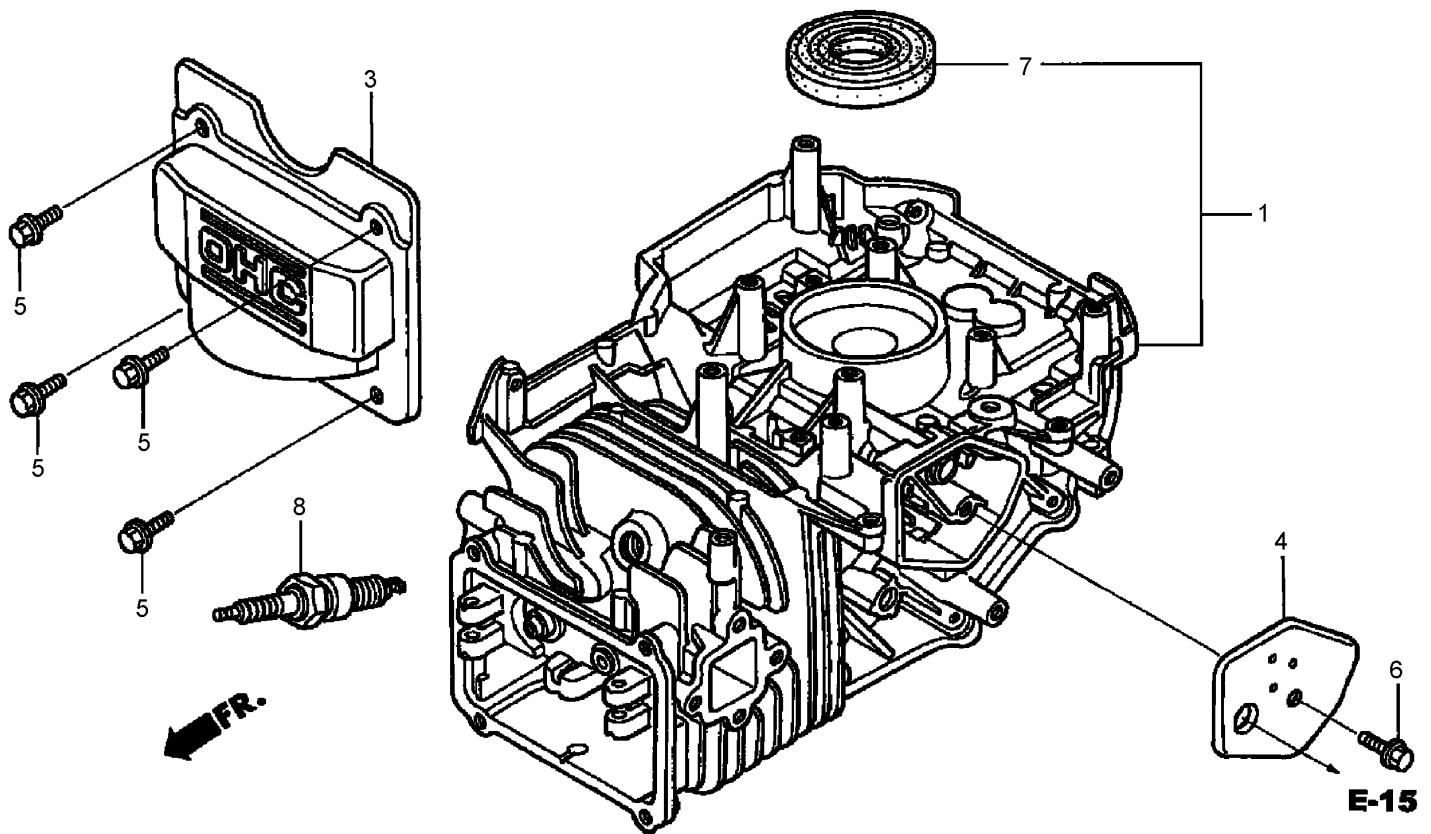 

Cylinder Barrel Assembly

Honda GCV160A RTL1


Ref	Part No.	Qty.	Description				
③1	12000-Z0L-405	1	Cylinder ASM				
③1	12000-Z0L-820	1	Cylinder ASM				
③3	12311-ZL8-000	1	Cover-Head				
③4	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)				
③5	90013-883-000	4	Bolt-Flange (6X12) (Ct200)				
③6	90014-952-000	1	Bolt-Flange (6X14)				
③7	91201-ZL8-003	1	Seal (25.4X62X6)				
③8	98079-56846	1	Plug-Spark (Bpr6Es) (Ngk)				

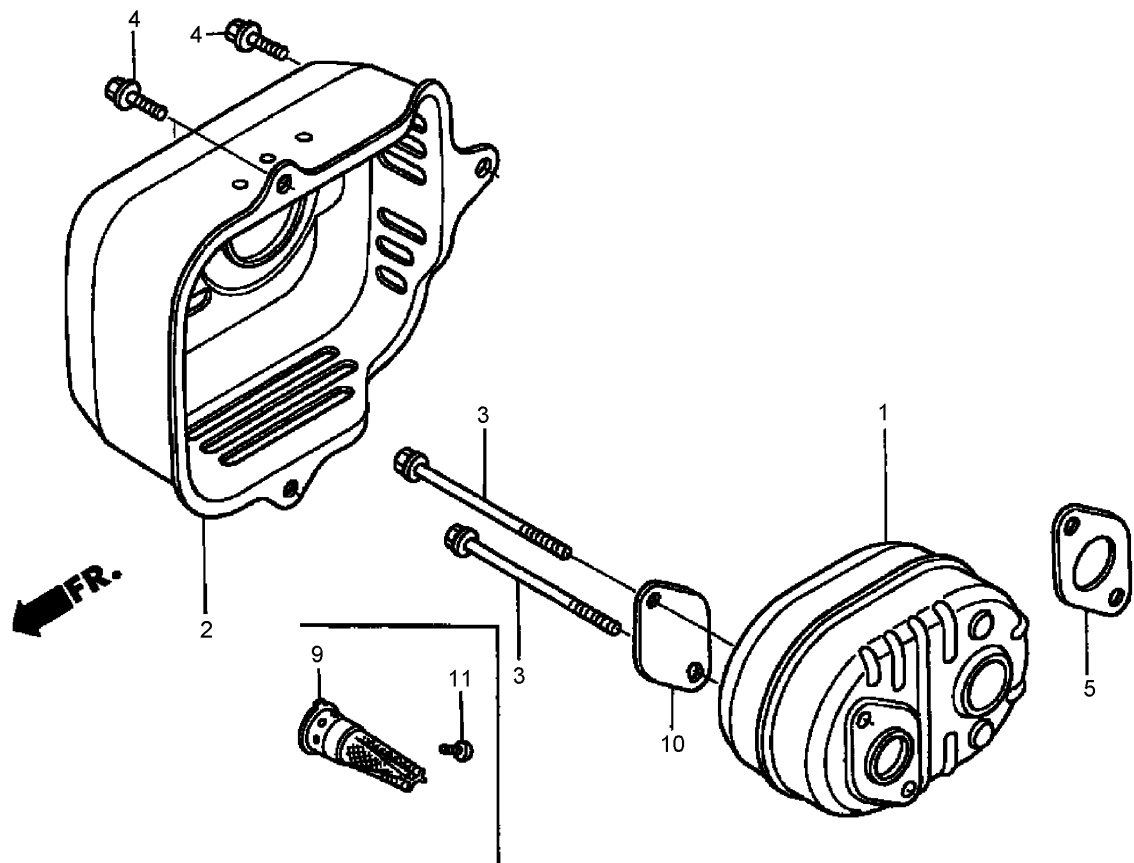 

Muffler Assembly


Honda GCV160A RTL1

Ref	Part No.	Qty.	Description				
③1	18310-ZM0-000	1	Muffler				
③2	18321-Z0L-J00	1	Protector-Muffler (Cbu)				
③3	90004-ZL8-000	2	Bolt-Flange (6X79) (Ct200)				
③4	90013-883-000	3	Bolt-Flange (6X12) (Ct200)				
③5	18381-ZL8-305	1	Gasket-Muffler				
③9	18350-ZL8-000	1	Arrester-Spark				
③10	18356-ZL8-000	1	Plate-Number, Arrester				
③11	90055-ZE1-000	1	Screw-Tapping (4X6)				

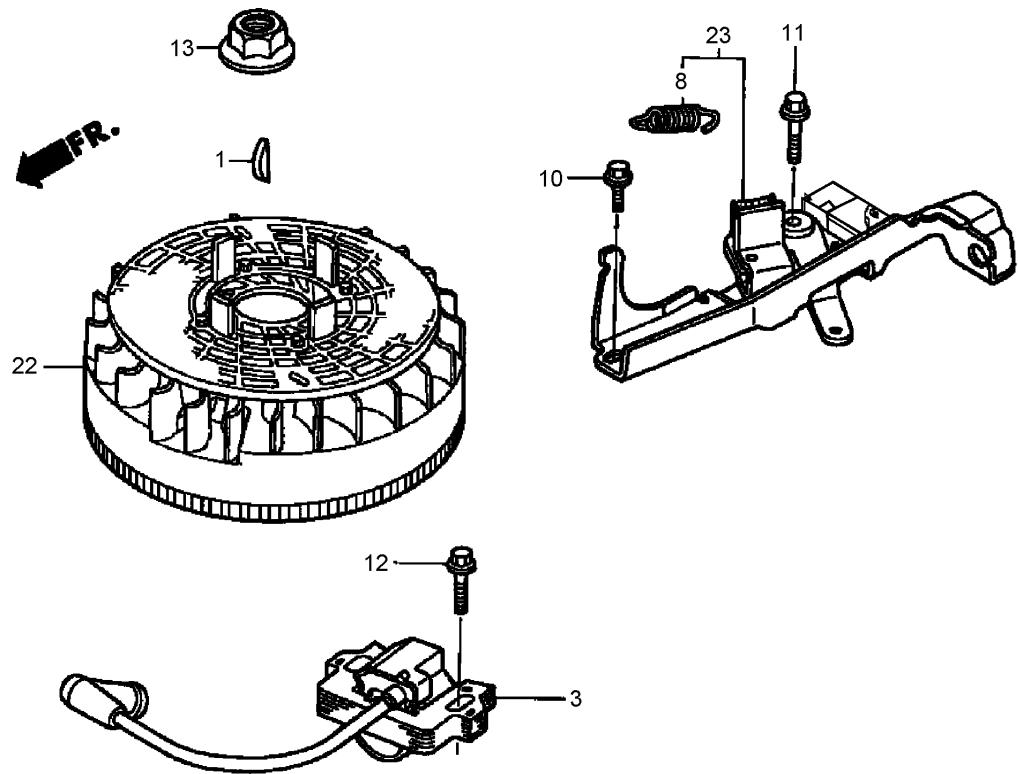 


Flywheel Assembly
Honda GCV160A RTL1

Ref	Part No.	Qty.	Description				
❶1	13331-357-000	1	Key-Woodruff (25X18)				
❸3	30500-Z0J-003	1	Ignition Coil ASM				
❸8	75113-ZM0-000	1	Spring-Lever, Brake				
❸10	90014-952-000	1	Bolt-Flange (6X14)				
❸11	90002-Z0L-820	1	Bolt-Flange (6X23) (Ct200)				
❸12	90022-888-010	1	Bolt-Flange (6X20)				
❸13	90201-878-003	1	Nut (14Mm)				
❸22	31105-Z0L-820	1	Flywheel ASM				
❸23	75110-Z0L-821	1	Brake Sub-ASM				

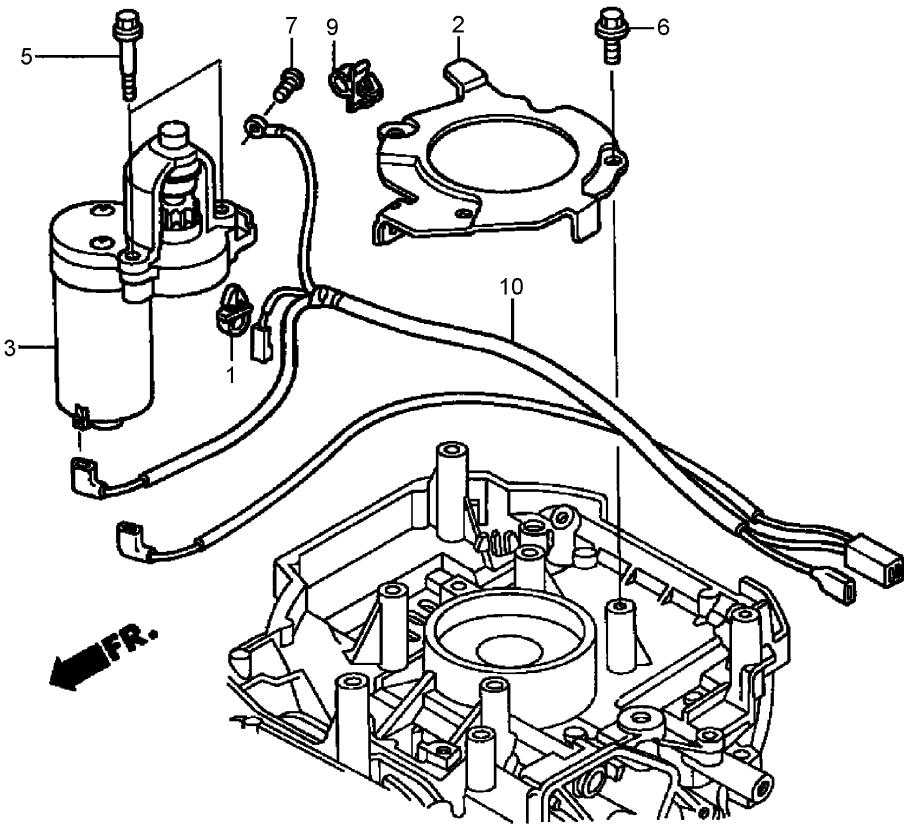 


Starter Motor Assembly
Honda GCV160A RTL1

Ref	Part No.	Qty.	Description				
❶1	22534-Z0L-820	1	Holder-Wire				
❷2	30549-Z0L-820	1	Clamp-Wire				
❸3	31200-Z0L-821	1	Starter Motor ASM				
❺5	90001-Z0L-820	2	Bolt (6Mm)				
❻6	90013-883-000	3	Bolt-Flange (6X12) (Ct200)				
❼7	93500-05008-0A	1	Screw-Pan (5X8)				
❹9	90681-959-003	1	Clip-Cable (A)				
❿10	32222-Z0L-S10	1	Wire-Ground, Terminal				

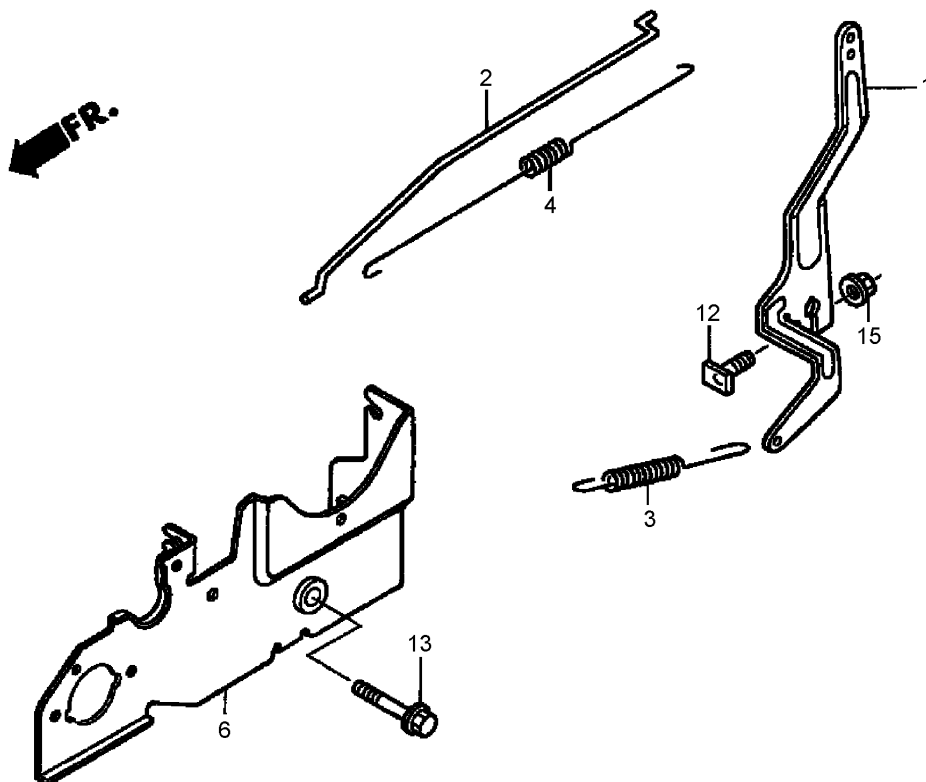 


Control Assembly Honda GCV160A RTL1

Ref	Part No.	Qty.	Description				
③1	16551-ZM0-010	1	Arm-Governor				
③2	16555-Z0L-800	1	Rod-Governor				
③3	16561-Z0L-000	1	Spring-Governor				
③4	16562-ZM0-000	1	Spring-Return, Throttle				
③6	16580-Z0L-810	1	Base-Control				
③12	90015-ZE5-010	1	Bolt-Arm, Governor				
③13	90016-ZE8-000	1	Bolt-Flange (6X45)				
③15	94050-06000	1	Nut-Flange (6Mm)				

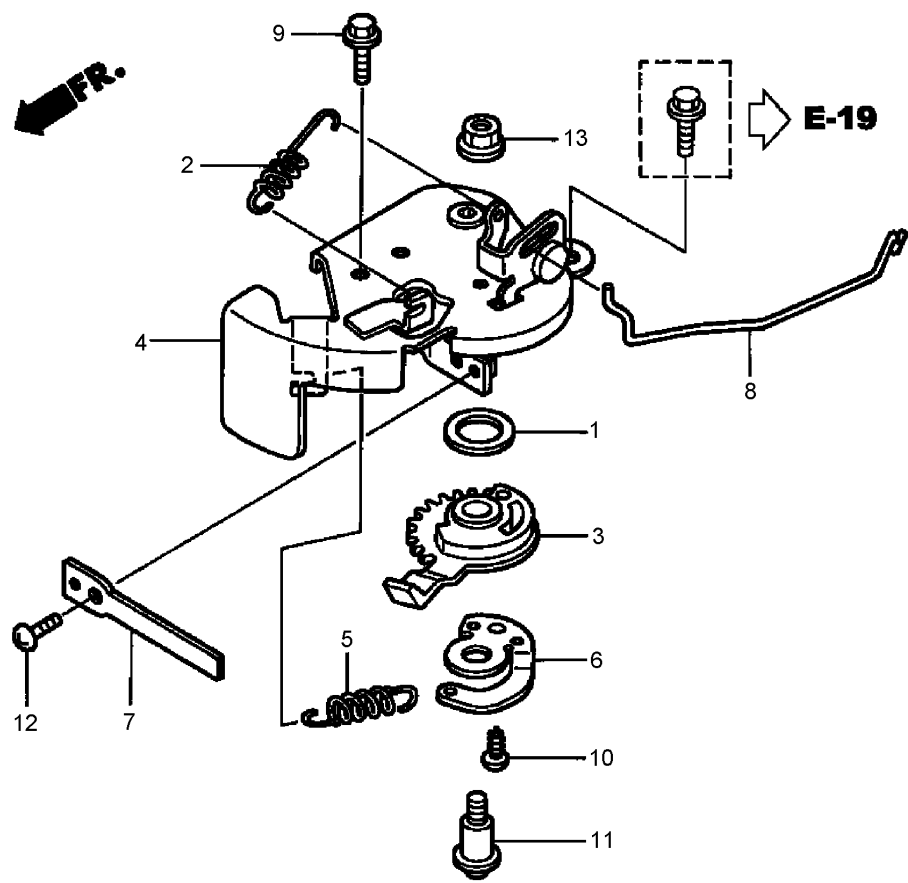 


Choke Base Assembly
Honda GCV160A RTL1

Ref	Part No.	Qty.	Description				
❸1	16251-ZOL-800	1	Seal-Lever, Choke				
❸2	16592-ZJ1-000	1	Spring-Return, Cable				
❸3	16612-ZOL-800	1	Lever-Choke				
❸4	16613-ZOL-800	1	Base-Choke				
❸5	16614-ZOL-800	1	Spring-Lever, Choke				
❸6	16616-ZOL-800	1	Hook-Spring, Choke				
❸7	16619-ZOL-800	1	Plate-Choke				
❸8	16632-ZOL-800	1	Rod-Stop				
❸9	90029-888-000	1	Bolt-Flange (6X16)				
❸10	90102-SP1-003	1	Screw-Tapping (4X8) (Po)				
❸11	90141-KT8-000	1	Screw-Pan (5X19)				
❸12	93500-04008-0H	1	Screw-Pan (4X8)				
❸13	94050-05000	1	Nut-Flange (5Mm)				

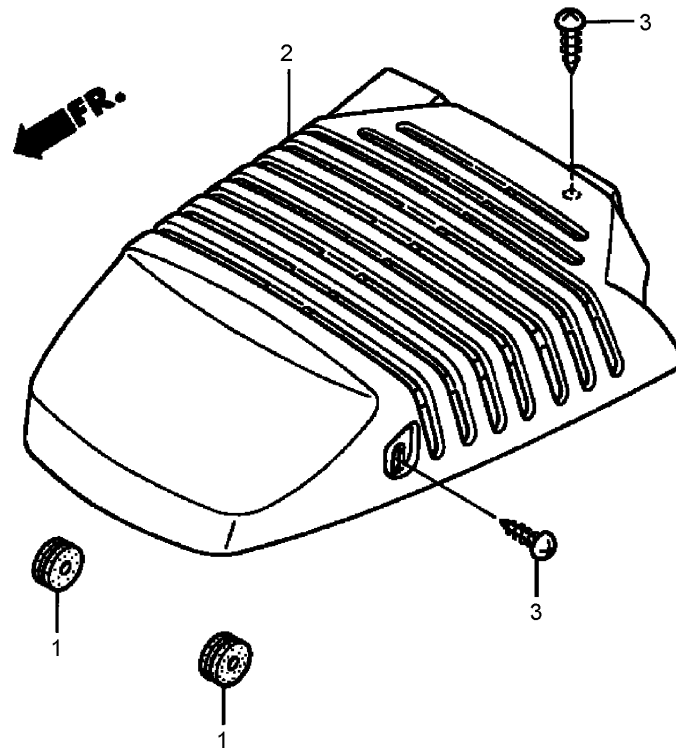 

Top Cover Assembly Honda GCV160A RTL1


Ref	Part No.	Qty.	Description
③1	16613-883-610	2	Grommet-Rod, Choke
③2	19721-Z0L-000ZA	1	Cover-Top
③3	90137-SH3-000	3	Screw-Tapping (4X16)

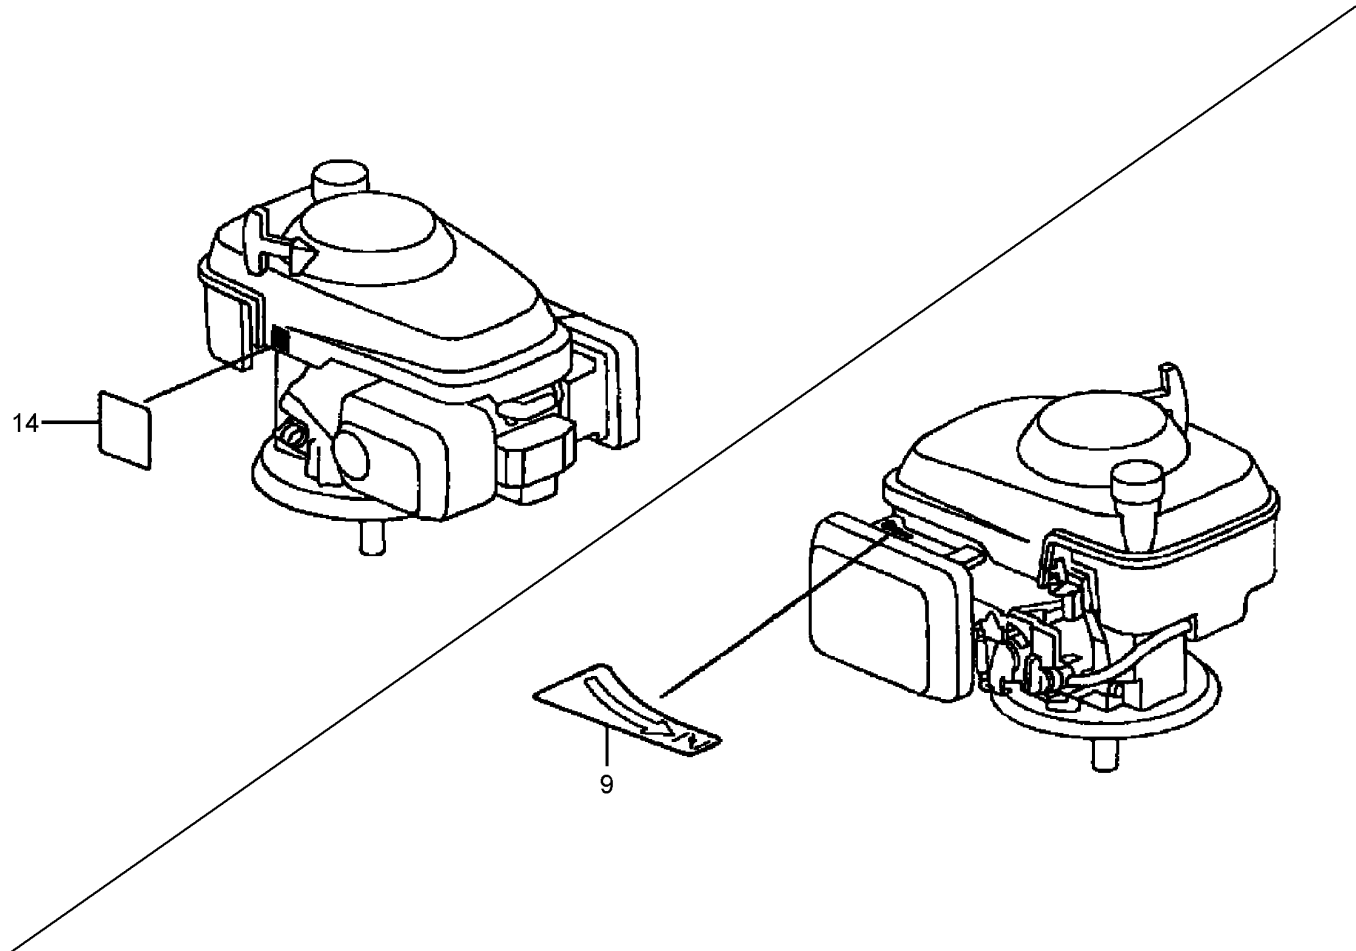 

Label Assembly

Honda GCV160A RTL1


Ref	Part No.	Qty.	Description
99	87528-Z0L-V20	1	Mark-Indication, Choke
914	87594-VG3-010	1	Mark-Caution, Oil

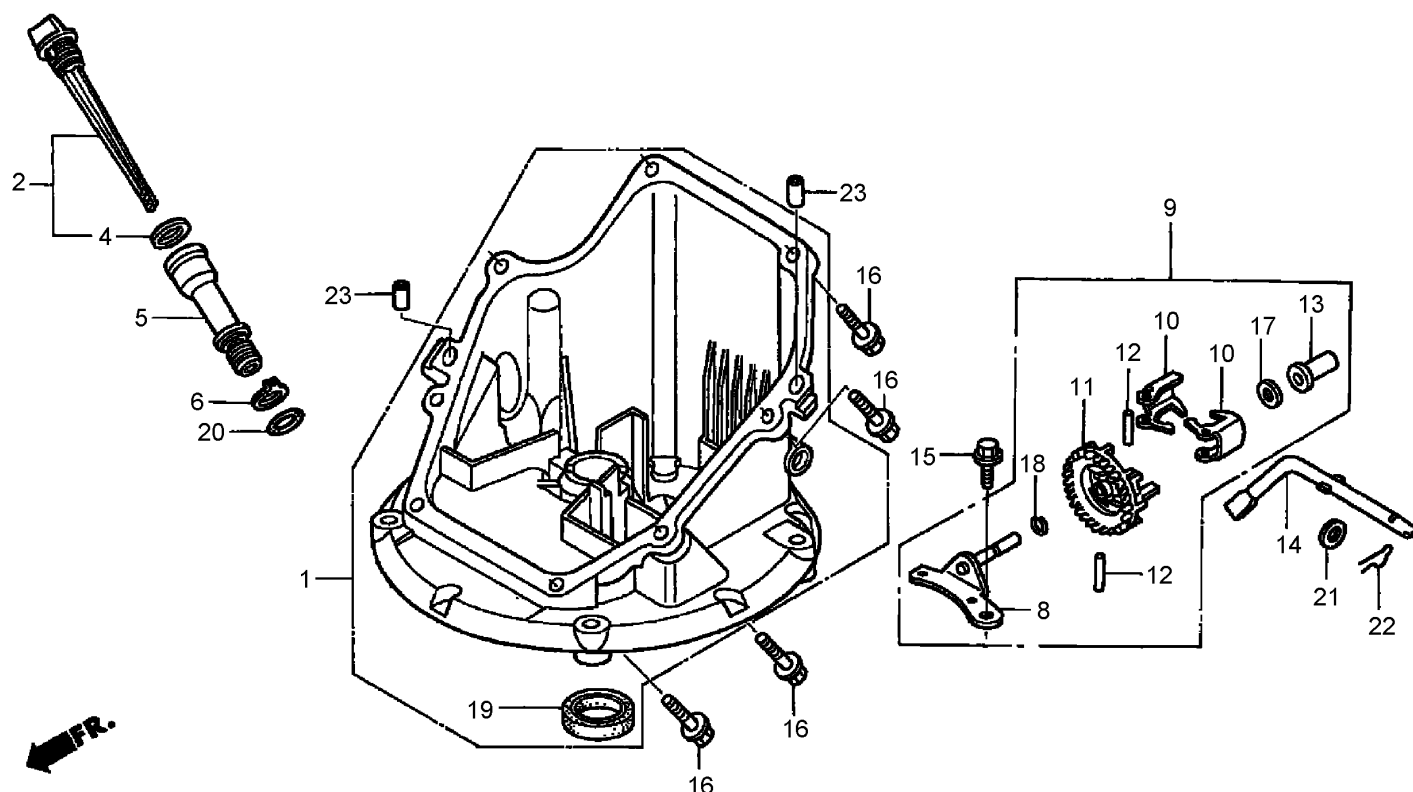 

Oil Pan Assembly Honda GCV160A RTL1

Ref	Part No.	Qty.	Description
❶	11300-ZM0-405	1	Oil Pan ASM (000)
❷	15650-Z0L-820	1	Oil Level Gauge ASM
❸	15625-ZE6-000	1	Gasket-Cap, Oil Filler
❹	15631-Z0L-820	1	Extension-Filler, Oil
❺	15639-ZM0-000	1	Washer-Lock, Extension
❻	16508-ZM0-010	1	Shaft-Holder, Governor
❼	16510-ZM0-010	1	Governor ASM
❽	16511-ZL8-000	2	Weight-Governor
❾	16512-ZM0-000	1	Holder-Weight, Governor
❿	16513-ZE1-000	2	Pin-Weight, Governor
⓫	16531-ZE1-000	1	Slider-Governor
⓬	16541-ZM0-000	1	Shaft-Arm, Governor
⓭	90014-952-000	1	Bolt-Flange (6X14)


Ref	Part No.	Qty.	Description
❶❹	90121-952-000	8	Bolt-Flange (6X25)
❶❷	90451-ZE1-000	1	Washer-Thrust (6Mm)
❶❸	90602-ZE1-000	1	Clip-Holder, Governor
❶❹	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
❶❺	91303-KF0-003	1	O-Ring (14.8X2.4) (Arai)
❶❻	91356-MA6-005	1	O-Ring
❶❼	94101-06800	1	Washer-Plain (6Mm)
❶❽	94251-08000	1	Pin-Lock (8Mm)
❶❾	94301-08200	2	Pin-Dowel (8X20)

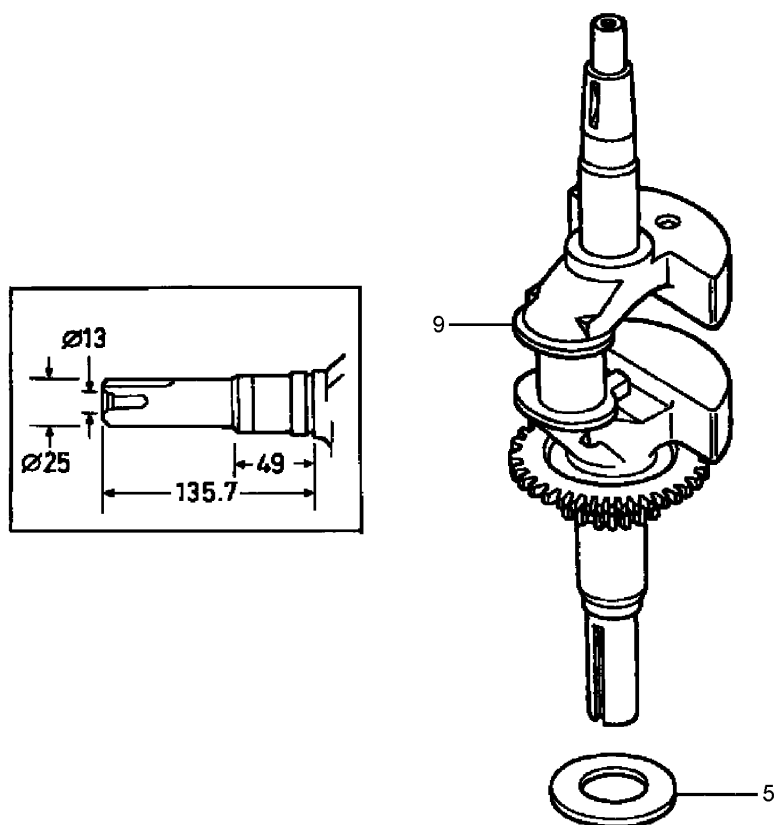 

Crankshaft Assembly

Honda GCV160A RTL1


Ref	Part No.	Qty.	Description
5	90402-ZL8-000	1	Washer-Thrust
9	13310-Z0L-V70	1	Crankshaft

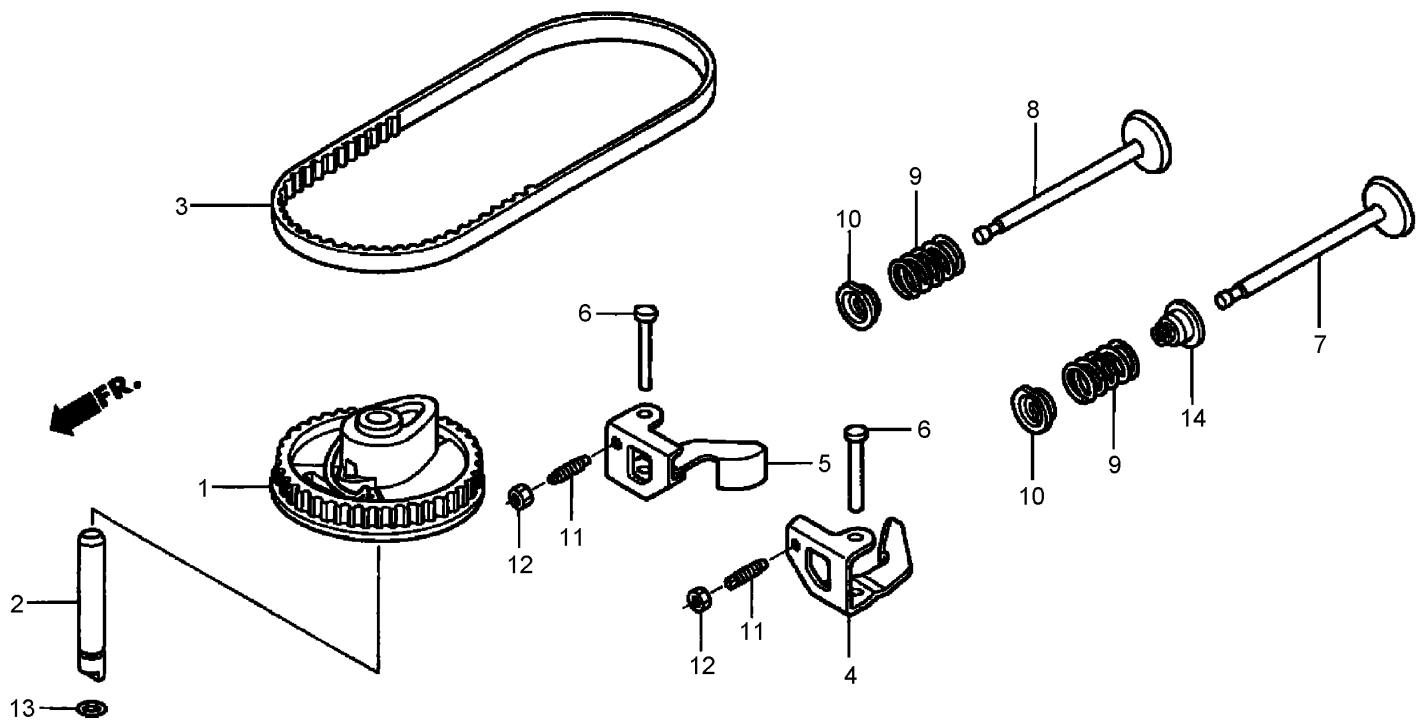 

Camshaft Pulley Assembly
Honda GCV160A RTL1

Ref	Part No.	Qty.	Description
❶1	14320-ZL8-010	1	Pulley-Camshaft
❷2	14324-ZL8-000	1	Shaft-Pulley
❸3	14400-Z0J-014	1	Belt-Timing (84Hu7 G-200)
❹4	14431-Z0J-000	1	Rocker Arm-Valve, Intake
❺5	14441-Z0J-000	1	Rocker Arm-Valve, Exhaust
❻6	14461-ZL8-000	2	Shaft-Arm, Rocker
❼7	14711-Z0J-000	1	Valve-Intake
❽8	14721-ZL8-000	1	Valve-Exhaust
❾9	14751-ZL8-000	2	Spring-Valve
❿10	14771-Z0J-000	2	Retainer-Spring, Valve
⓫11	90012-333-000	2	Screw-Tappet, Adj.
⓬12	90206-001-000	2	Nut-Tappet, Adj.
⓭13	91301-ZM0-V31	1	O-Ring (6.8X1.9)


Ref	Part No.	Qty.	Description
❿14	12209-ZM0-003	1	Seal-Stem, Valve

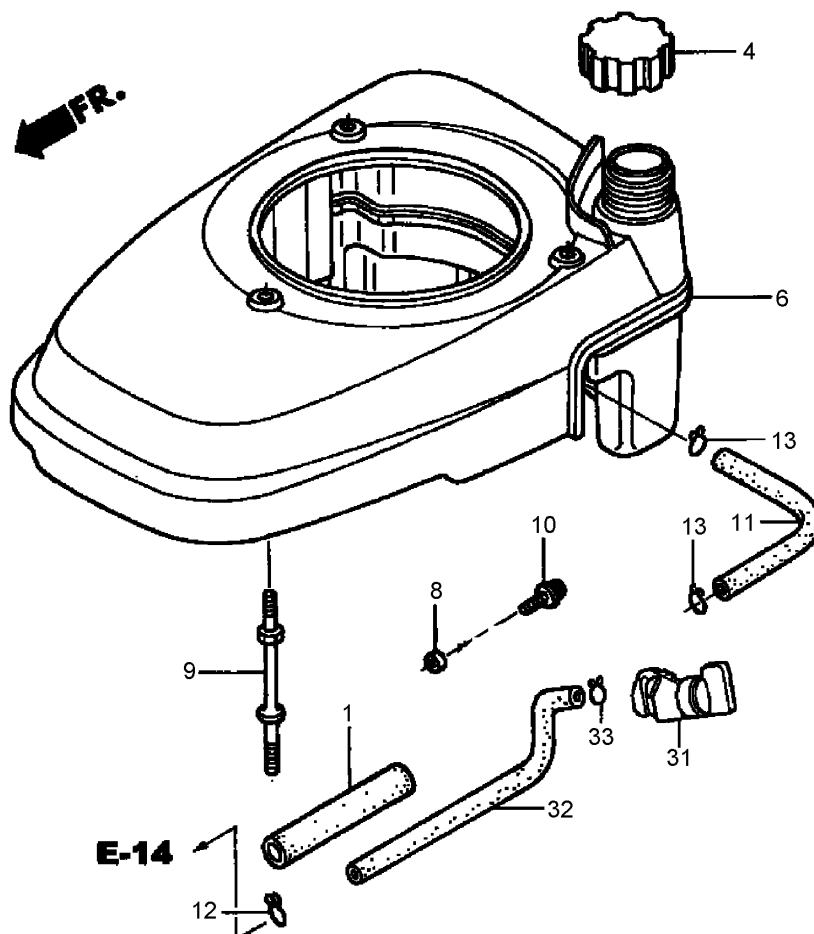 

Fan Cover Assembly

Honda GCV160A RTL1


Ref	Part No.	Qty.	Description				
③1	16854-ZH8-000	1	Supporter-Rubber (107Mm)				
③4	17620-ZL8-013	1	Fuel Tank Cap ASM				
③6	19610-Z0L-830ZA	1	Cover-Fan				
③8	91501-Z0L-800	1	Collar-Petcock, Fuel				
③9	90043-ZL8-000	3	Bolt-Stud				
③10	93891-05010-08	1	Screw-Washer (5X10)				
③11	95001-55008-60M	1	Fuel-Hose (5.5X8000) (5.5X100)				
③12	95002-02080	1	Clip-Tube (B8)				
③13	95002-02100	2	Clip-Tube (B10)				
③31	16950-ZM0-003	1	Petcock ASM				
③32	17702-ZM0-800	1	Tube- Fuel				
③33	95002-02080	1	Clip-Tube (B8)				

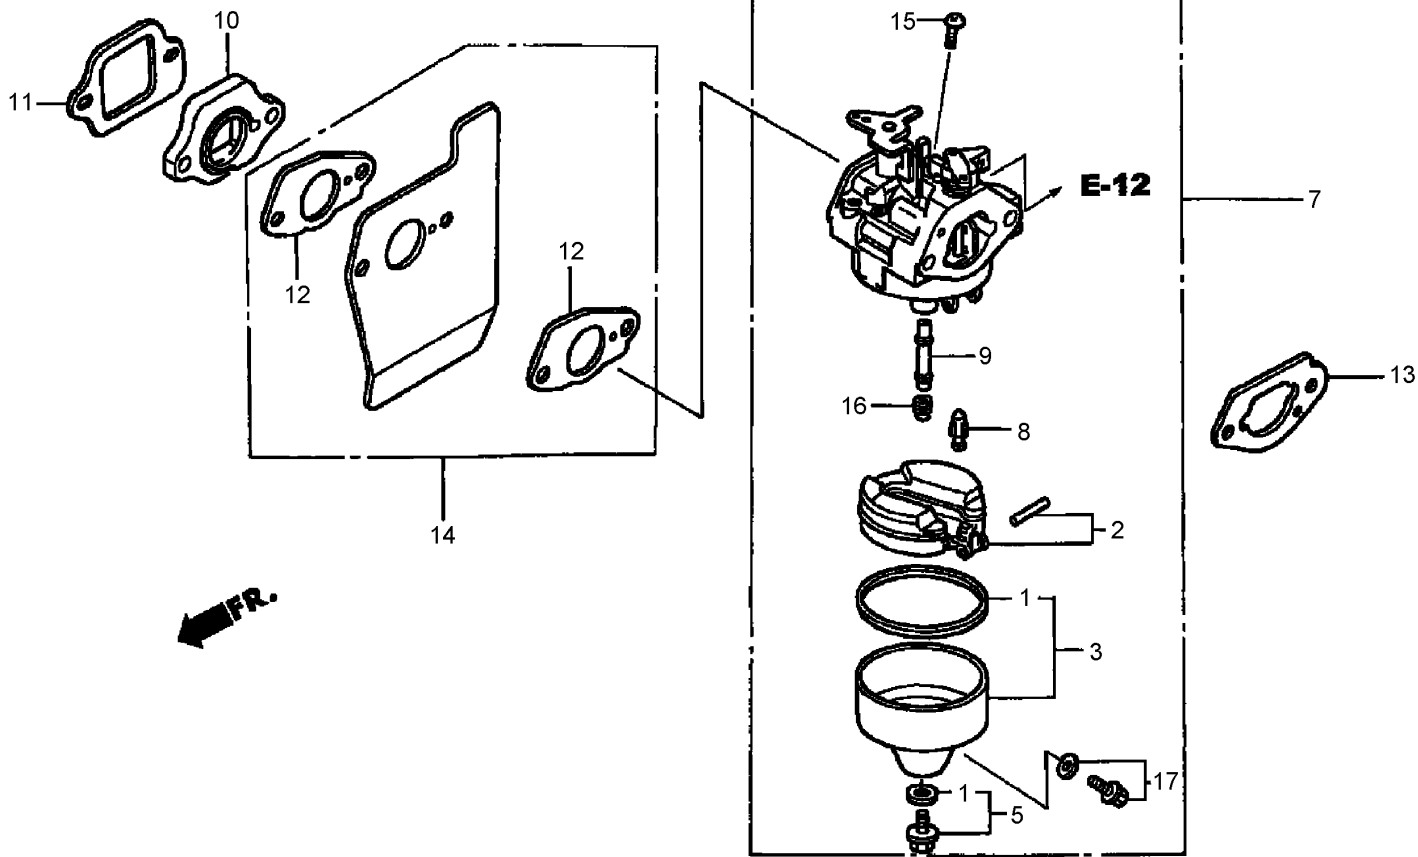 

Carburetor Assembly
Honda GCV160A RTL1

Ref	Part No.	Qty.	Description
❶1	16010-883-015	1	Gasket Set
❷2	16013-ZL1-003	1	Float Set
❸3	16015-887-782	1	Chamber Set-Float
❺5	16028-ZE0-005	1	Screw-Set
❷7	16100-Z0L-802	1	Carburetor ASM (Bb62G B)
❸8	16155-ZM0-013	1	Valve-Float (Carburetor No.)
❹9	16166-ZM0-003	1	Nozzle-Main
❺10	16211-ZL8-000	1	Insulator-Carburetor
❻11	16212-ZL8-000	1	Gasket-Insulator
❻12	16221-883-800	2	Gasket-Carburetor
❻13	16228-ZL8-000	1	Gasket-Carburetor (Choke Side)
❻14	19650-ZM0-000	1	Guide-Air
❻15	93500-05006-0H	1	Screw-Pan (5X6)

Ref	Part No.	Qty.	Description
❹16	99101-124-0600	1	Jet-Main (#60)
❹16	99101-124-0620	1	Jet-Main (#62)
❹16	99101-124-0650	1	Jet-Main (#65)
❹17	16024-ZE1-811	1	Screw Set-Drain

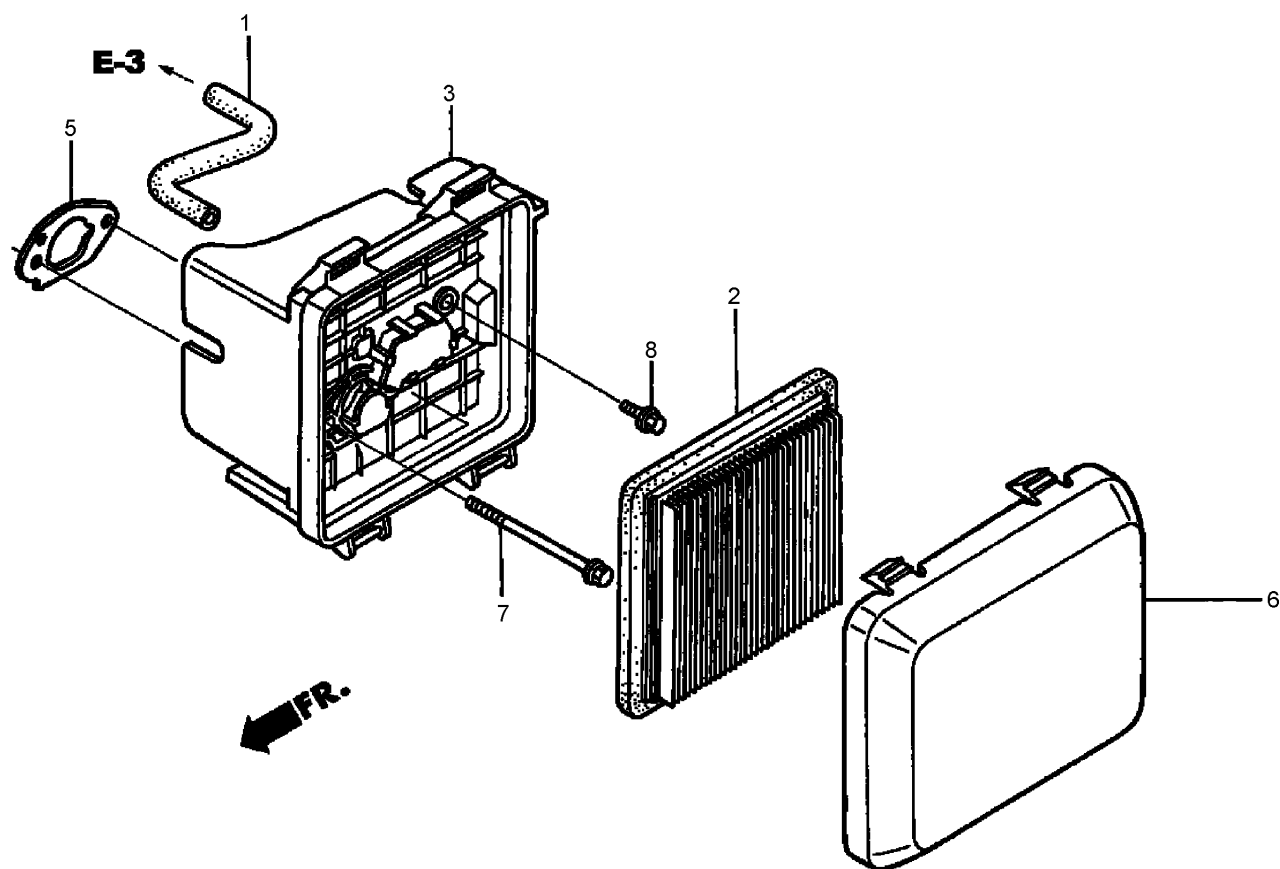 

Air Cleaner Assembly

Honda GCV160A RTL1

Ref	Part No.	Qty.	Description				
③1	15721-ZM0-000	1	Tube-Breather				
③2	17211-ZL8-013	1	Element-Cleaner, Air				
③3	17220-ZM0-000	1	Air Cleaner Case ASM				
③5	17228-ZM0-000	1	Gasket-Cleaner, Air				
③6	17231-Z0L-030	1	Cover-Cleaner, Air				
③7	90003-ZM0-000	2	Bolt-Flange (6X86) (Ct200)				
③8	95701-06014-08	1	Bolt-Flange (6X14)				

Attachments and Accessories

For 10696 - Insight Gold Lawn Mower

Product Name	Model/Part
Loose Parts Kit	108-9356
Replacement Bag	89815
Rear Bag Kit	89913
21 Inch Blade	89914
Cruise Control Kit	89919
Air Filter	89928
Spark Plug	89947

NOTES

NOTES

NOTES

