

# LAWN-BOY®

## 21" GOLD SERIES WALK-BEHIND MOWER

HAND PUSH

MODEL NO.10415-5900001 & UP

SELF PROPELLED

MODEL NO.10515-5900001 & UP

MODEL NO.10520-5900001 & UP

ONLY COPY  
DO NOT REMOVE

Tech. Publications

---

# PARTS CATALOG

## PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

## IDENTIFICATION AND ORDERING

### MODEL AND SERIAL NUMBERS

The Product has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the back side of the control panel. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


**NOTE:** Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

## TABLE OF CONTENTS

Description	Page	Description	Page
Engine, Fuel Tank & Blade Assembly .....	1	Handle Assembly .....	6
Deck And Wheel Assembly (Model No. 10415) .....	2	Rear Catcher Assembly (Model No. 10520 Only) .....	7
Deck And Wheel Assembly (Model No. 10515 & 10520) .....	3	Engine Assembly .....	8-9
Rear Wheel Drive Ass'y (Model No. 10515 & 10520) .....	4	Starter Assembly .....	10
Gear Case Ass'y (Model No. 10515 & 10520) .....	5	Carburetor Assembly .....	11
		Air Filter Assembly .....	12
		Lawn-Boy Part Number Index .....	13-15

## Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Rear Bagging Kit (Model No. 10415 & 10515) .....	89800	Leaf Shredder Kit .....	89860
Side Bagging Kit .....	89814	Leaf Bag .....	89804

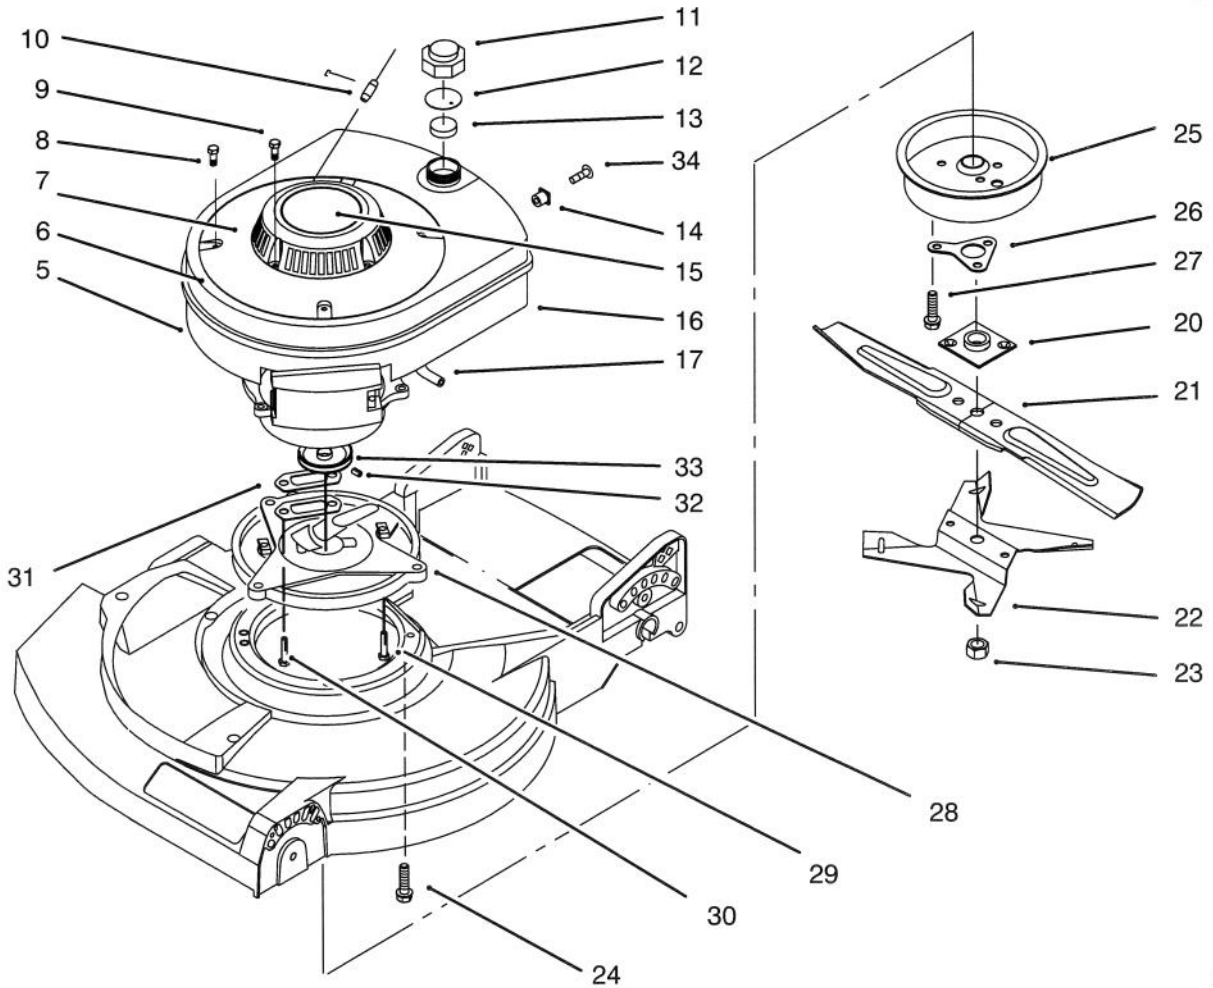


C-2176A

## ENGINE, FUEL TANK & BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
5	16-5539	Shroud & Tank Assembly	1
6	684301	Base - Starter	1
7	684622	Starter Assembly	1
8	611395	Screw - Self Tapping	4
9	612428	Screw	4
10	47-2480	Stop - Rope	1
11	611327	Cap - Fuel	1
12	607213	Gasket - Fuel Cap	1
13	609150	Baffle Fuel Cap	1
14	605120	Grommet	1
15	92-9567	Decal - Recoil (Model No.10415)	1
*	92-9568	Decal - Recoil (Model No. 10515 & 10520)	1
16		Engine Assembly	1
17	612783	Line - Fuel	1
20	677525	Plate & Collar Assembly	1

Ref. No.	Part No.	Description	No. Used
21	612543	Blade 21"	1
22	92-1630	Fan - Mulching	1
23	603164	Nut - Blade	1
24	92-1648	Screw - Engine	3
25	682876	Muffler Cover Assembly	1
26	609786	Support - Crankshaft	1
27	609471	Screw	3
28	92-1054	Plate - Muffler	1
29	613500	Screw	1
30	607601	Screw	3
31	93-1233	Gasket - Muffler	1
32	610345	Screw - Set (Model No. 10515 & 10520)	1
33	609976	Pulley (Model No. 10515 & 10520)	1
34	32144-53	Screw - Self Tapping	1

\* Not Illustrated

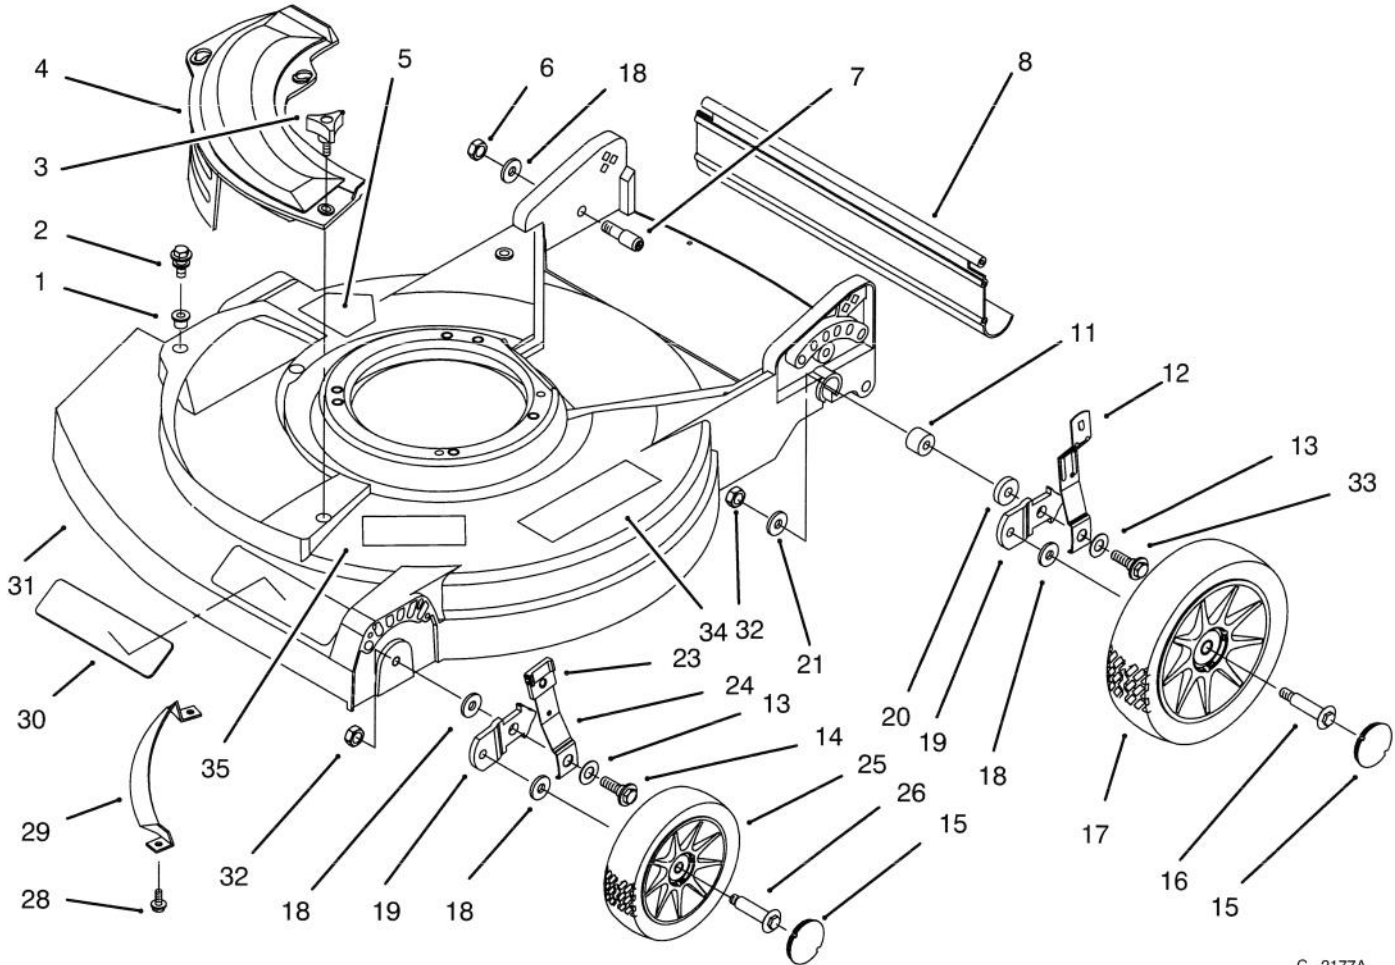


C-2177A

## DECK AND WHEEL ASSEMBLY (Model No. 10415)

Ref. No.	Part No.	Description	No. Used
1	604604	Grommet	3
2	614677	Screw – Thread Forming	2
3	614682	Knob	1
4	92-8630	Cover – Plate, Mulch	1
*	607560	Cover – Side Discharge	1
5	39-5770	Decal – Danger (English)	1
6	610358	Nut	2
7	92-9673	Bolt – Shoulder	2
8	92-7736	Shield – Trailing	1
11	92-5791	Spacer	2
12	92-1005	Spring Arm Assembly	2
13	3290-413	Washer – Belleville	4
14	92-4856	Bolt – Shoulder	2
15	92-1604	Hub Cap	4
16	614650	Bolt – Wheel	2
17	684777	Wheel Assembly 8"	2
18	40-1940	Washer – Wheel Bolt	8

Ref. No.	Part No.	Description	No. Used
19	614637	Bracket – H. O. C.	4
20	29-8970	Washer	2
21	608834	Washer	2
23	92-1008	Knob – Spring Arm	4
24	92-1006	Spring Arm Assembly	2
25	684776	Wheel – 6"	2
26	92-1099	Bolt – Wheel	2
28	46-6811	Screw	2
29	608175	Bar – Toe	1
30	614701	Applique	1
31	16-5769	Housing – 21" (Incl. Ref.#5 & 30)	1
32	3296-39	Nut – Lock	4
33	92-7674	Bolt – Shoulder	2
34	93-7250	Decal – Warning	1
35	93-3191	Decal – No Rust	1

\* Not Illustrated

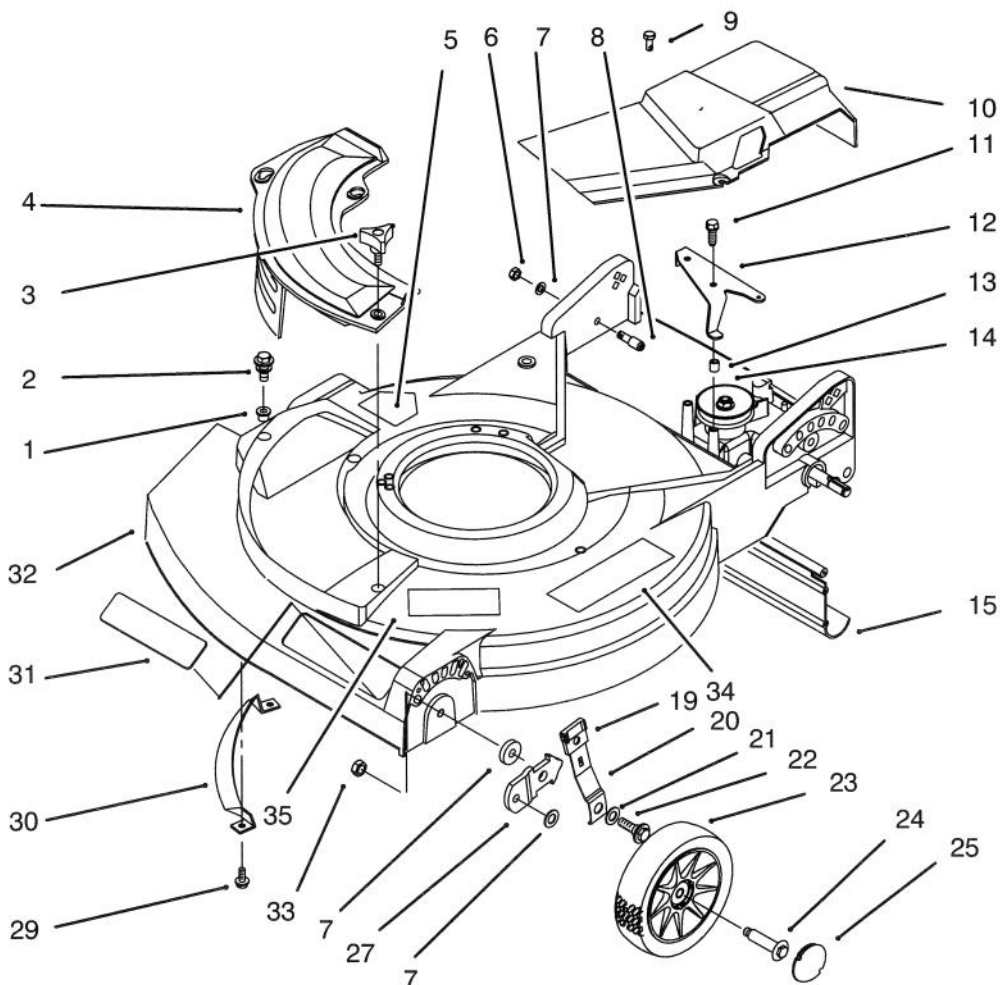


C-2178A

## DECK AND WHEEL ASSEMBLY (Model No. 10515 & 10520)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	604604	Grommet	3	19	92-1008	Knob - Spring Arm	4
2	614677	Screw - Thread Forming	2	20	92-1006	Spring Arm Assembly	2
3	614682	Knob	1	21	3290-413	Washer - Belleville	2
4	92-8630	Cover- Plate, Mulch	1	22	92-4856	Bolt - Shoulder	2
*	607560	Cover - Side Discharge	1	23	684776	Wheel - 6"	2
5	39-5770	Decal - Danger (English)	1	24	92-1099	Bolt - Wheel	2
6	610358	Nut	2	25	92-1604	Hub Cap	4
7	40-1940	Washer - Wheel Bolt	6	27	614637	Bracket - H. O. C.	2
8	92-9673	Bolt - Shoulder	2	29	46-6811	Screw	2
9	926641	Screw	2	30	608175	Bar - Toe	1
10	92-8852	Cover - Drive	1	31	614701	Applique	1
11	92-7748	Screw	2	32	16-5779	Housing - 21 (Incl. Ref. #5 & 31)	1
12	92-7699	Bracket - Actuator	1	33	3296-39	Nut - Lock	2
13	256-251	Bushing	2	34	93-7250	Decal - Warning	1
14	92-7869	Gear Case Assembly	1	35	93-3191	Decal - No Rust	1
15	92-7736	Shield - Trailing	1				

\*Not Illustrated

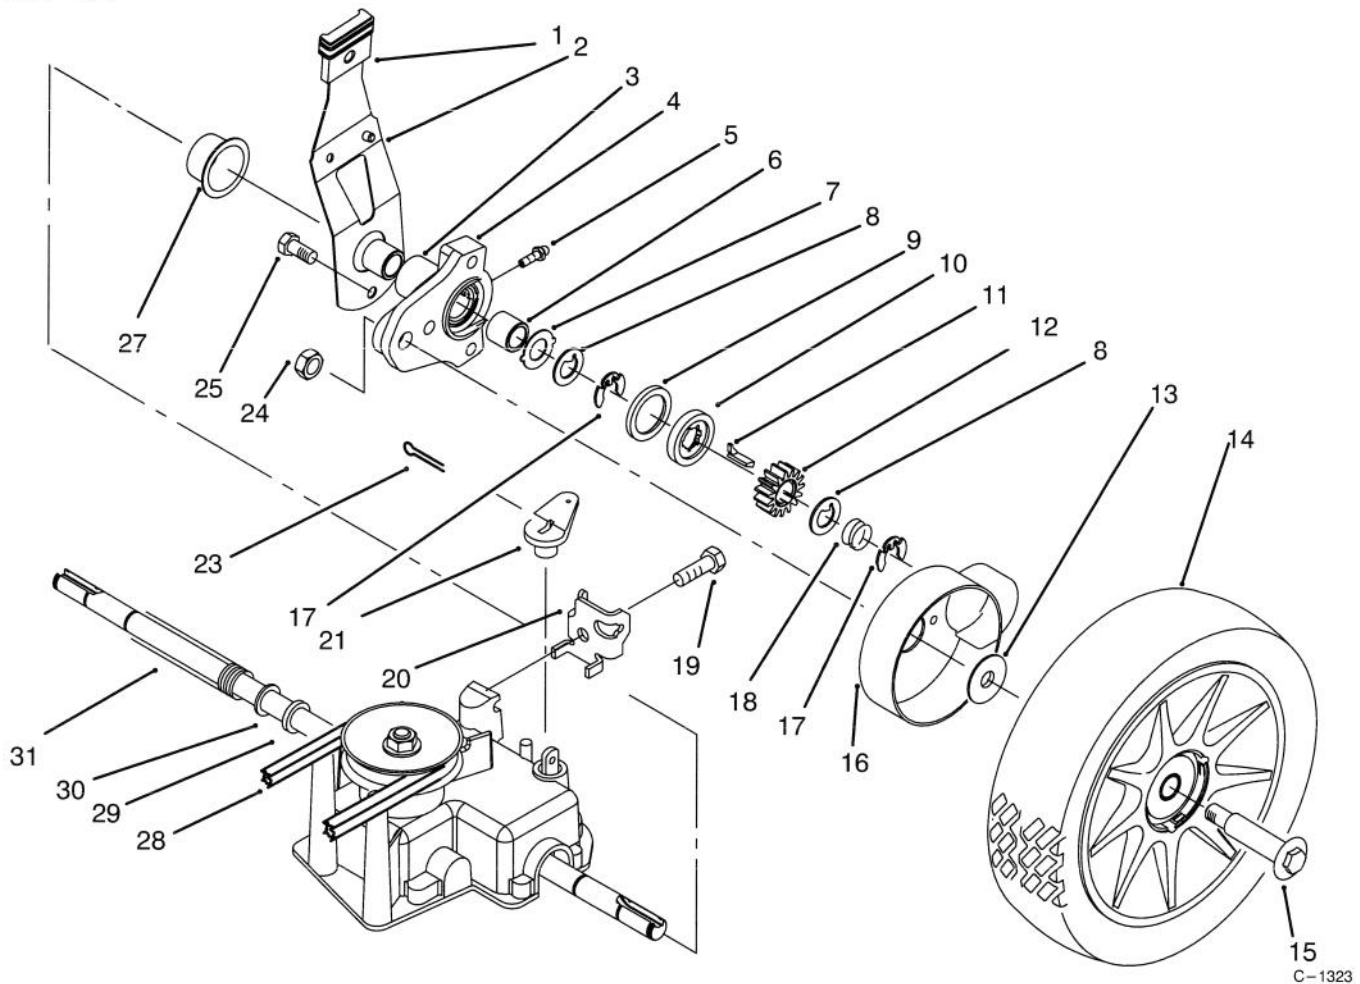


### REAR WHEEL DRIVE ASS'Y (Model No. 10515 & 10520)

Ref. No.	Part No.	Description	No. Used
1	92-1008	Knob - Spring Arm (Ref.)	2
2	92-6540	Spring Arm Assembly L.H.	1
*	92-6539	Spring Arm Assembly R.H.	1
3	70-9760	Bushing	2
4	92-7746	Pivot Arm Assembly (Incl. Ref. #3, 5, & 6)	2
5	614442	Fitting - Grease (Ref.)	2
6	47-2900	Bushing	2
7	65-4730	Washer - Thrust	2
8	65-4740	Washer - Thrust	4
9	65-4710	Ring - Friction	2
10	65-4760	Washer - Clutch	2
11	66-6050	Key - Rocking, L.H.	1
*	66-6040	Key - Rocking, R.H.	1
12	65-4750	Gear - Pinion	2
13	614426	Washer - Stepped	2

Ref. No.	Part No.	Description	No. Used
14	92-1042	Wheel - 8"	2
15	92-1057	Bolt - Wheel	2
16	614427	Cover - Wheel	2
17	65-2720	Ring - Retaining	4
18	65-4720	Spring - Compression	2
19	32144-70	Screw - Hex. Hd.	1
20	82-8780	Retainer - Cable	1
21	60-8821	Lever - Shift	1
23	3272-10	Pin - Cotter	1
24	610358	Nut	2
25	32144-85	Screw	2
27	92-6535	Cap - End	2
28	92-1043	"V" Belt	1
29	605255	Washer - Felt	1
30	303259	Washer - Flat	1
31	24-7920	Cover - Drive Shaft	1

\*Not Illustrated

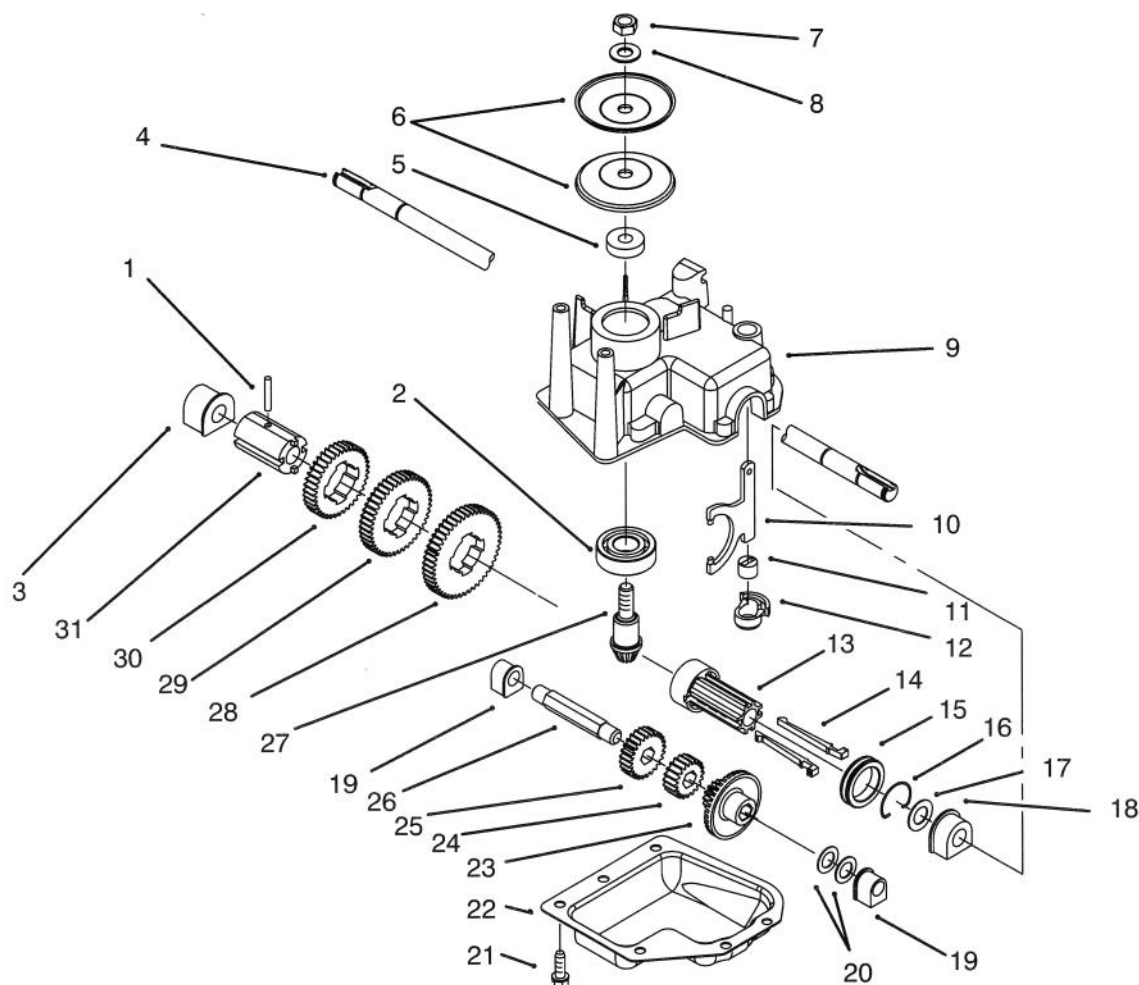


C-1322

## GEAR CASE ASS'Y (Model No. 10515 & 10520)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3285-19	Pin - Groove	1	17	36-4780	Washer	1
2	38-7820	Bearing - Ball	1	18	60-8770	Bushing - Output	1
3	60-8850	Bushing - Output	1	19	60-8750	Bushing - Inter. Shaft	2
4	65-4770	Shaft - Output	1	20	36-4791	Washer - Thrust	2
5	92-5791	Spacer	1	21	49-2040	Screw	6
6	60-8840	Pulley - Half	2	22	60-8730	Gear Case Cover	1
7	3296-5	Nut	1	23	55-3760	Pinion - 15 Tooth	1
8	3256-24	Washer	1	24	55-3780	Pinion - 20 Tooth	1
9	60-8710	Gearcase - Upper	1	25	55-3800	Pinion - 25 Tooth	1
10	60-8870	Yoke - Shift	1	26	60-8800	Shaft - Intermediate	1
11	29-9570	Bushing - Yoke	1	27	92-5790	Pinion - Bevel	1
12	60-8810	Retainer - Shift Fork	1	28	55-3770	Gear - 49 Tooth	1
13	76-0780	Sleeve - Shift Key	1	29	55-3790	Gear - 44 Tooth	1
14	76-0760	Key - Shift	2	30	55-3810	Gear - 39 Tooth	1
15	76-0770	Collar - Shift	1	31	60-8790	Sleeve - Gear	1
16	65-5250	Clip - Spring	1	*	92-7869	Gear Case Complete	1

\*Not Illustrated

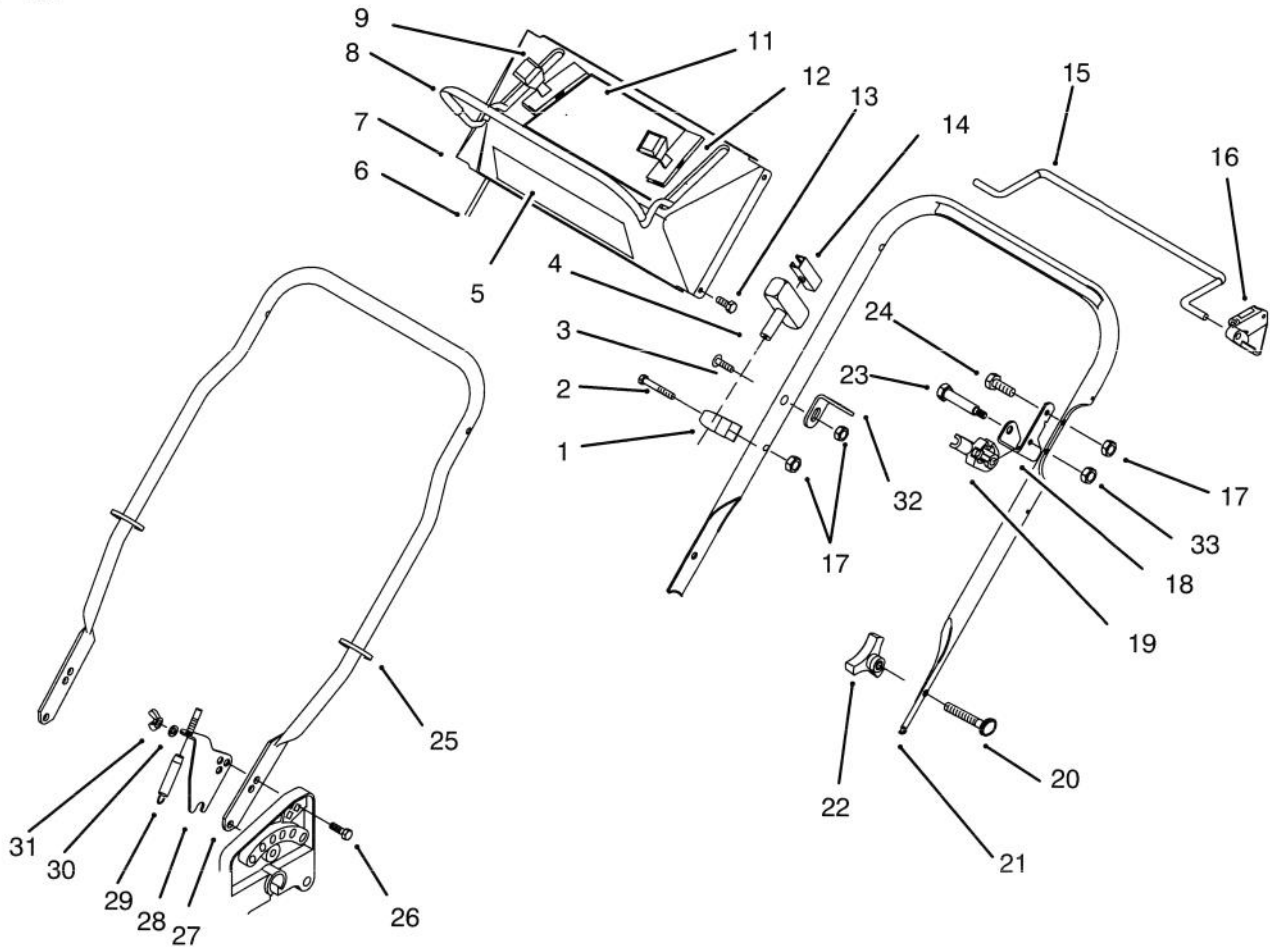


C-2179

## HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-7720	Guide - Rope	1
2	321-51	Bolt	1
3	92-2268	Screw	1
4	612825	Handle - Rope	1
5	92-2918	Decal - Control Panel	1
6	93-3248	Cable - Brake	1
7	16-2039	Panel - Control (Model No. 10415)	1
*	16-2049	Panel - Control (Model No. 10515 & 10520) (Incl. Ref.#11)	1
8	92-1093	Bail - Brake	1
9	92-8926	Control Ground Speed (Model No. 10515 & 10520)	1
11	93-6625	Decal - Control Panel (Model No. 10415)	1
*	93-6624	Decal - Control Panel (Model No. 10515 & 10520)	1
12	93-3683	Control - Throttle	1
13	92-9665	Screw	4
14	612824	Insert - Handle	1
15	92-1617	Bail - Control (Model No. 10515 & 10520)	1

Ref. No.	Part No.	Description	No. Used
16	92-5412	Stop - Pivot (Model No. 10515 & 10520)	1
17	3296-73	Nut	3
18	92-1094	Bracket - Cam	1
19	92-1078	Brake - BBC Cam	1
20	614697	Screw - Handle	2
21	92-1092	Handle - Upper	1
22	614243	Knob - Handle	2
23	613050	Bolt - Shoulder	1
24	321-4	Screw - Hex. Hd.	1
25	614249	Tie - Cable	2
26	3230-29	Bolt - Carriage	2
27	92-6537	Handle - Lower	1
28	92-7899	Bracket - Traction Cable (Model No. 10515 & 10520)	1
29	92-6518	Cable - Traction (Model No. 10515 & 10520)	1
30	3253-33	Washer	2
31	32103-29	Nut - Wing	2
32	92-2928	Bracket - Cable	1
33	3296-56	Nut - Lock	1

\*Not Illustrated

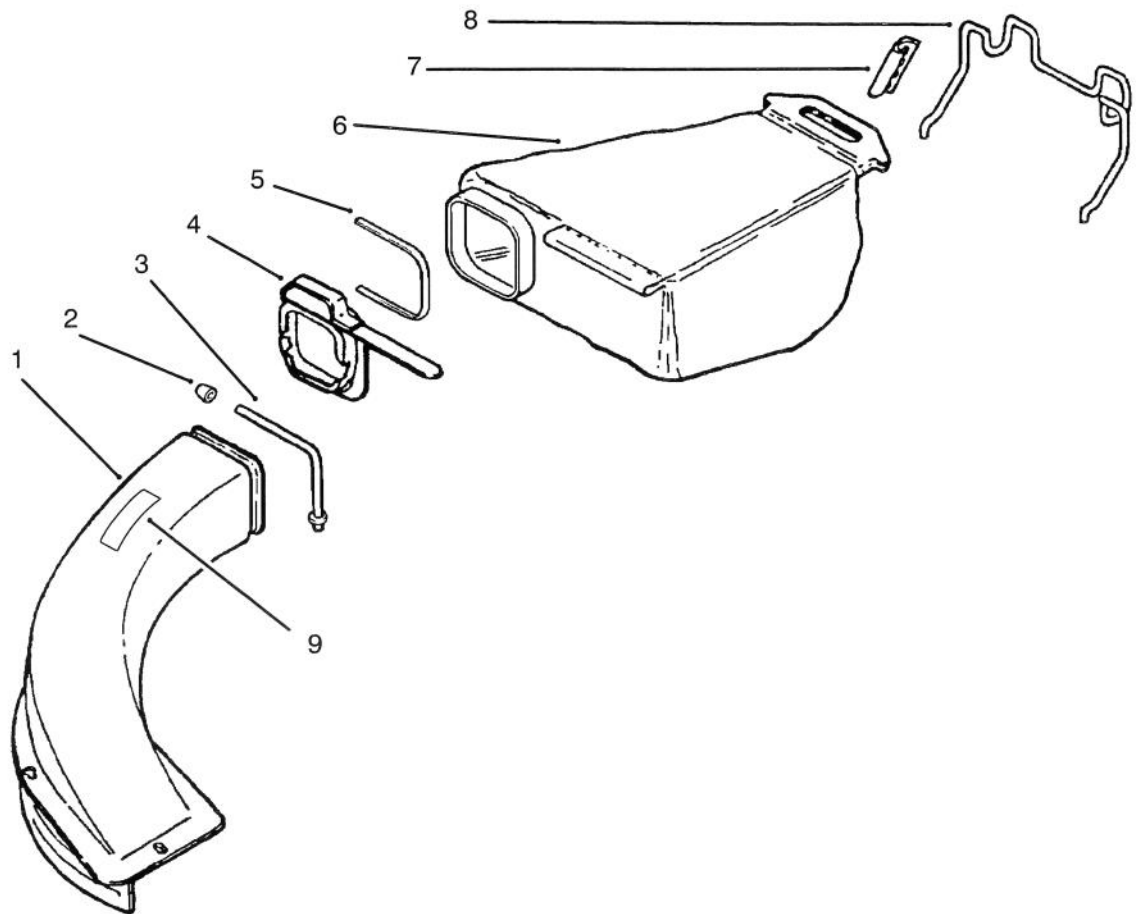


### REAR CATCHER ASSEMBLY (Model No. 10520 Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	684729	Chute & Support Assembly (Incl. Ref.# 2,3 & 9)	1	6	*	Bag Assembly	1
2	614589	Nut – Cap	1	7	613462	Hanger Clamp	2
3	614591	Chute Support	1	8	613455	Wide Hanger	1
4	684727	Adaptor Assembly	1	9	92-2919	Decal – Danger	1
5	614700	Tie Strap	1				

\*Includes Ref.#5 and instruction sheet for installing bag to adapter assembly. Order via model #89800.

# ENGINE ASSEMBLY

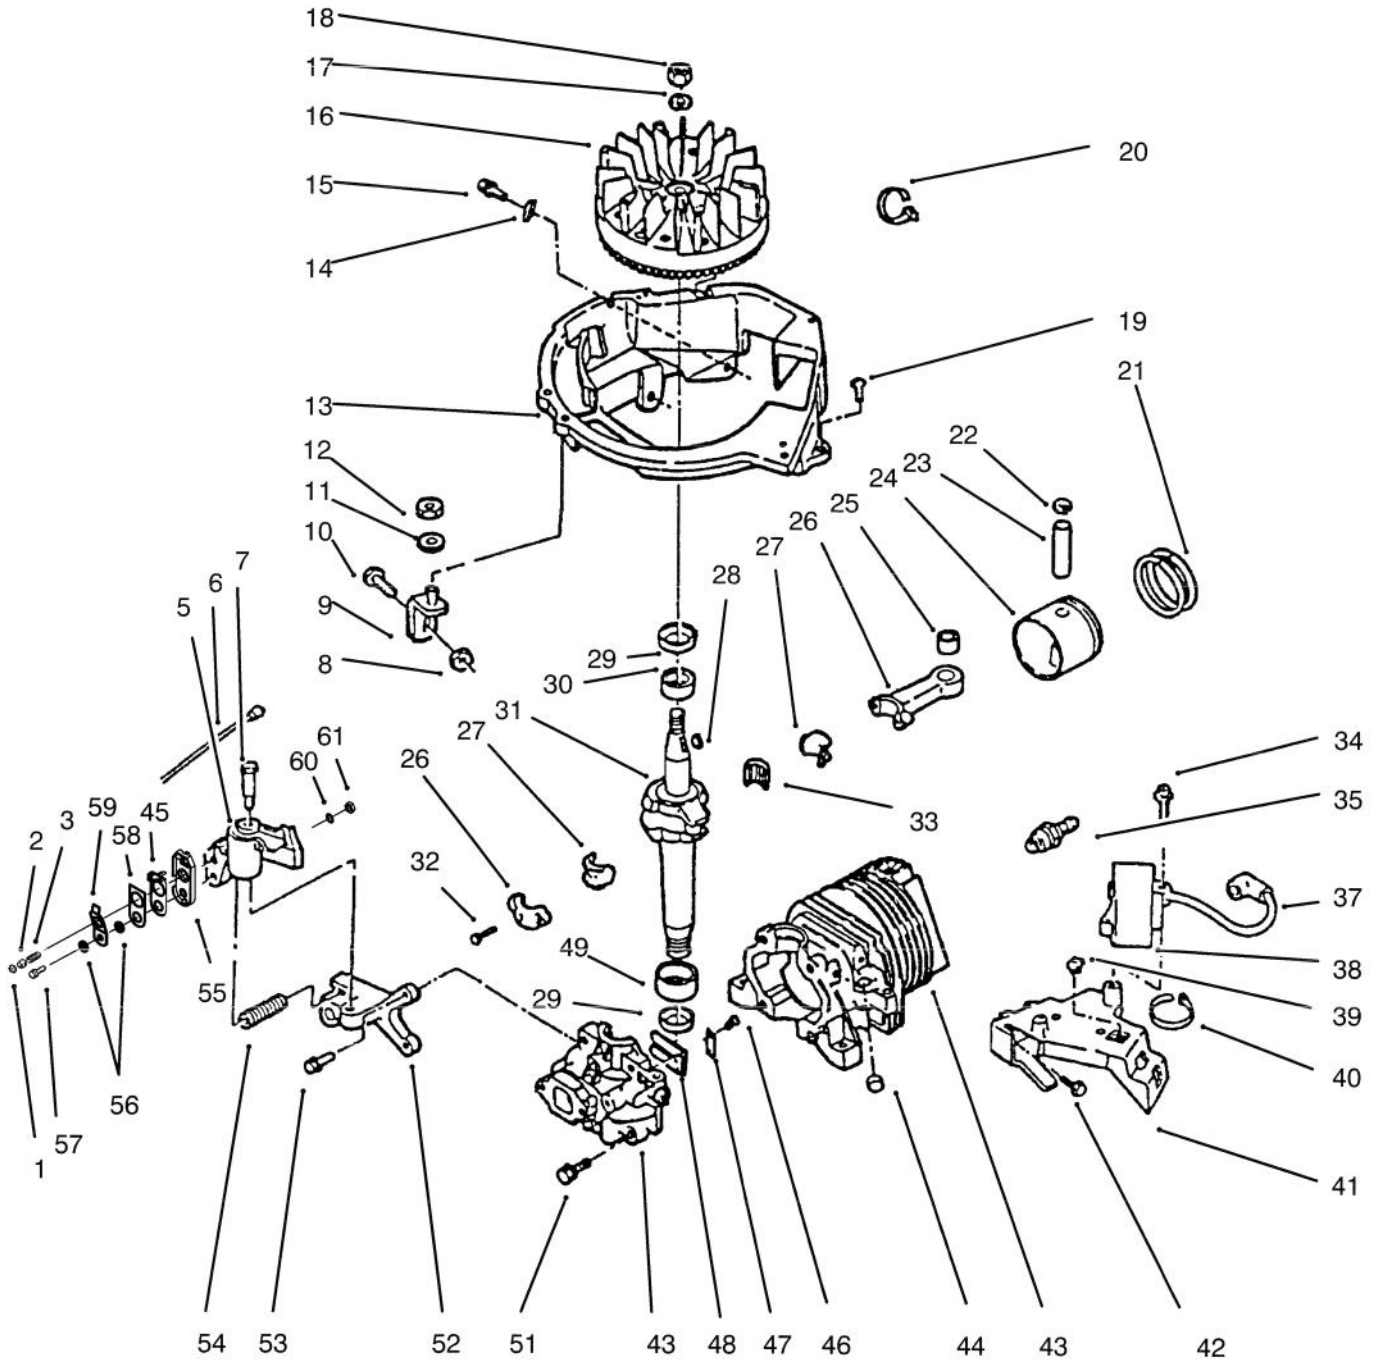


# ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	611213	Retainer	1
2	611509	Actuator – Brake Lever	1
3	611214	Spring – Cable, Return	1
5	682683	Brake Assembly	1
6	683821	Wire Lead	1
7	613529	Bolt – Shoulder	1
8	608311	Nut	1
9	683581	Brace Assembly	1
10	603014	Bolt	1
11	603093	Washer	1
12	602315	Nut	1
13	612427	Shroud – Base	1
14	611191	"J"Clip	1
15	609947	Screw	3
16	683580	Flywheel Assembly	1
17	316959	Washer – Lock	1
18	130743	Nut – Flywheel	1
19	609808	Screw	1
20	317893	Tie Strap	1
21	681737	Set – Ring	1
22	303712	Ring – Retaining	2
23	606608	Pin – Wrist	1
24	92-4923	Set – Piston & Ring (Incl. Ref.# 21-24)	1
*	92-4925	Piston & Connecting Rod Assembly (Incl. Ref. #21-27, 32 & 33)	1
25	92-4927	Bearing Assembly	1
26	92-4921	Connecting Rod Assembly (Incl. Ref. #25, 27,32 & 33)	1
27	677982	Liner – Pair	1
28	607199	Key – Flywheel	1
29	611396	Seal – Oil	2
30	681830	Bearing – Main	1
31	92-6375	Crankshaft	1

Ref. No.	Part No.	Description	No. Used
32	611393	Screw	2
33	683911	Set – Needle Bearing	1
34	607526	Screw	2
35	614009	Spark Plug	1
37	681678	Wire Lead & Cover Assy	1
38	683215	C. D. Ignition Module (Incl. Ref. #37)	1
39	605120	Grommet	1
40	614249	Tie Strap	1
41	613073	Bracket – C. D.	1
42	614343	Screw	2
43	683702	Cylinder & Crankcase Cover Assembly (Incl. Ref. #46-48,51 & 53)	1
44	609123	Plug	4
45	612841	Plate – Contact	1
46	612872	Screw	2
47	602587	Plate – Reed	1
48	602588	Reed	1
49	681831	Bearing – Main	1
51	613110	Screw	2
52	611192	Bracket – Brake	1
53	613233	Screw	2
54	611211	Spring – Brake	1
55	93-1240	Case Assembly	1
56	306407	Washer	2
57	321-6	Screw	1
58	612842	Shield	1
59	93-1239	Spring – Contact	1
60	3255-7	Washer – Ext. Tooth Lock	1
61	306375	Nut	1
*	92-6353	Short Block	1
*	93-4307	Switch Kit (Incl. Ref. #1, 6, 45, & 55-61)	1

\*Not Illustrated

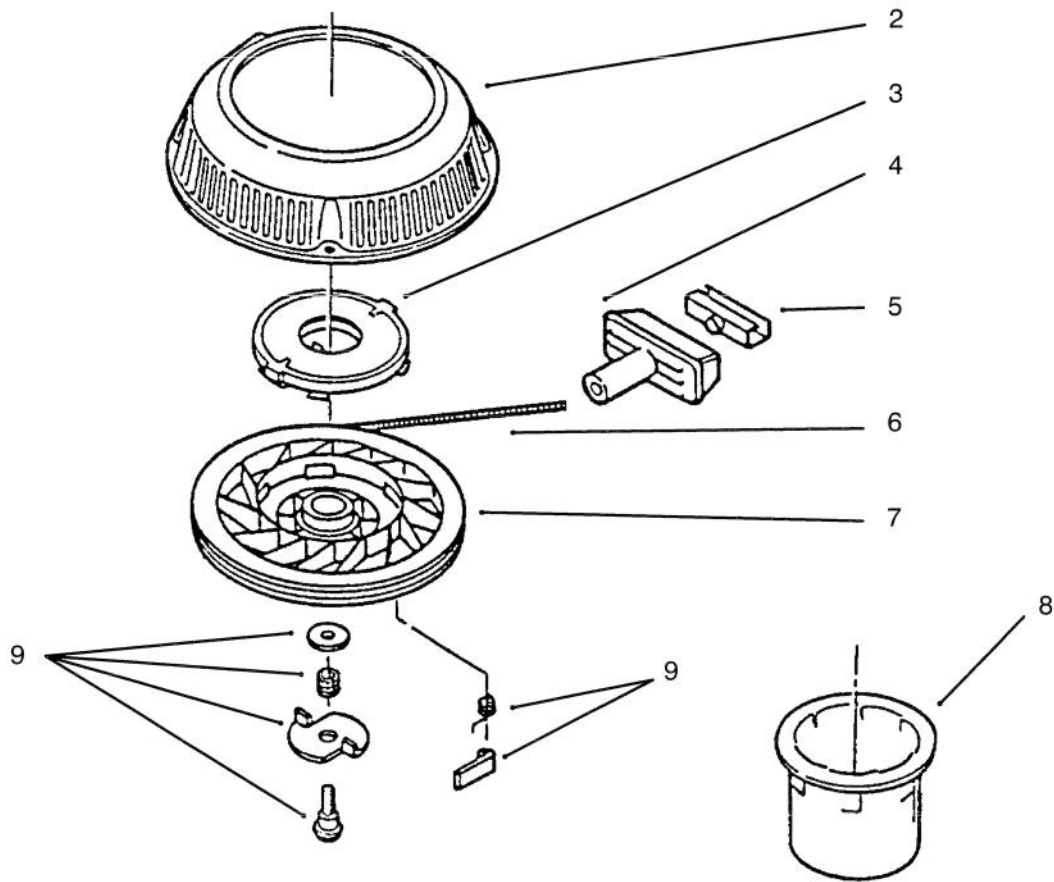


C-2181

### STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
*	684622	Starter Assembly (Incl. Ref. #5-9)	1
2	684567	Starter Housing & Shaft	1
3	92-4935	Spring & Keeper	1
4	612825	Handle - Starter	1

Ref. No.	Part No.	Description	No. Used
5	612824	Clip - Rope	1
6	612432	Rope	1
7	612950	Pulley	1
8	612949	Hub - Starter	1
9	683899	Kit - Dog	1

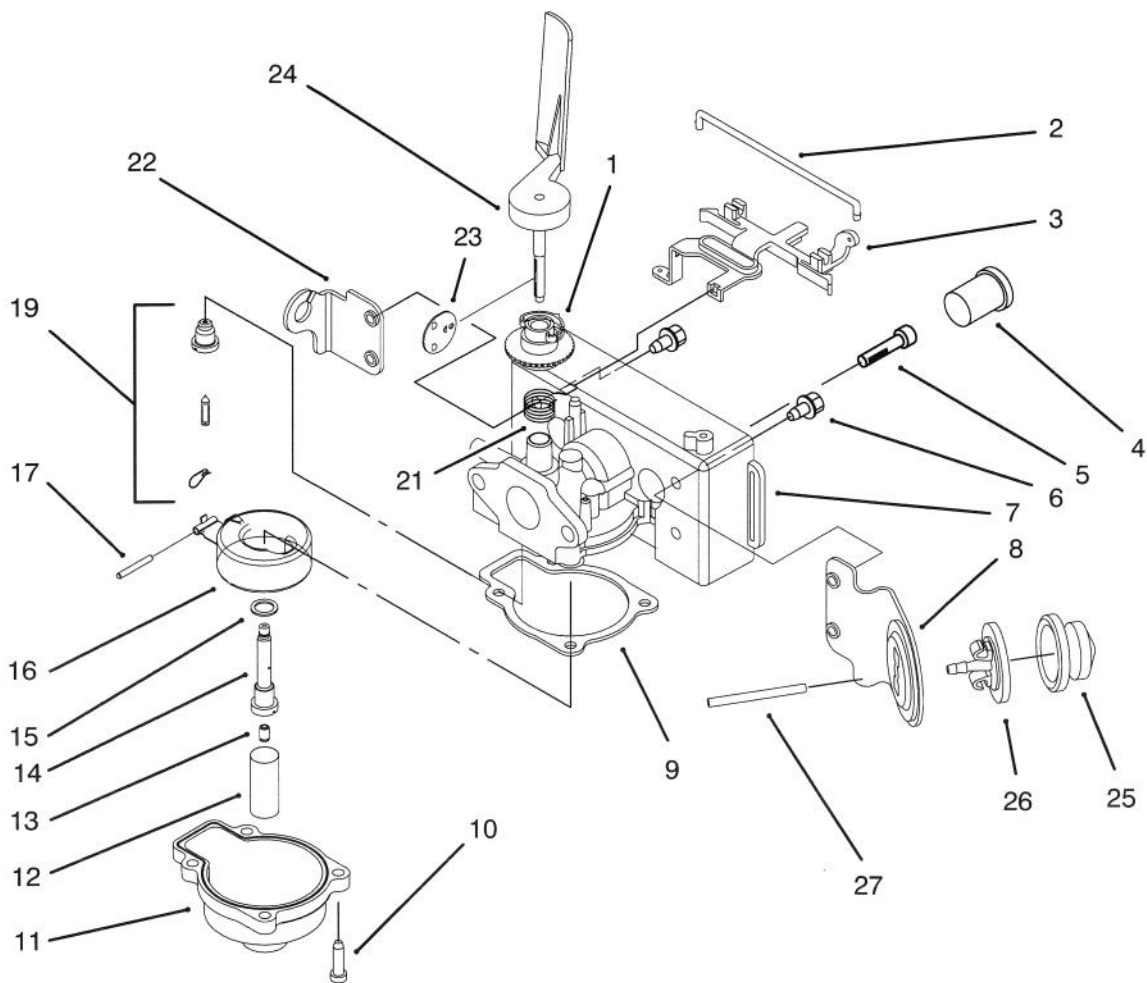


C-2182A

## CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610834	Collar - Adjustment	1
2	610165	Retainer	1
3	93-1225	Lever - Speed Adjust	1
4	611545	Plug	2
5	609482	Screw - Pan Hd. Sems	2
6	613269	Screw	4
7	93-1228	Body - Carburetor	1
8	93-1232	Bracket - Primer	1
9	602850	Gasket - Float Chamber	1
10	608850	Screw	4
11	92-9691	Float Chamber	1
12	611071	Filter - Fuel	1
13	92-6370	Main Jet	1

Ref. No.	Part No.	Description	No. Used
14	92-6371	Nozzle	1
15	612383	Washer	1
16	678113	Float & Arm Assembly	1
17	92-6389	Pin	1
19	92-9697	Float, Valve, & Body Ass'y	1
21	92-4944	Spring - Governor	1
22	93-1226	Bracket - Throttle Control	1
23	92-6373	Disc - Throttle	1
24	92-6376	Air Vane & Shaft	1
25	66-7460	Bulb - Primer	1
26	44-2750	Body - Primer	1
27	44-3175	Hose - Primer	1
*	93-4319	Carburetor Complete	1

\*Not Illustrated

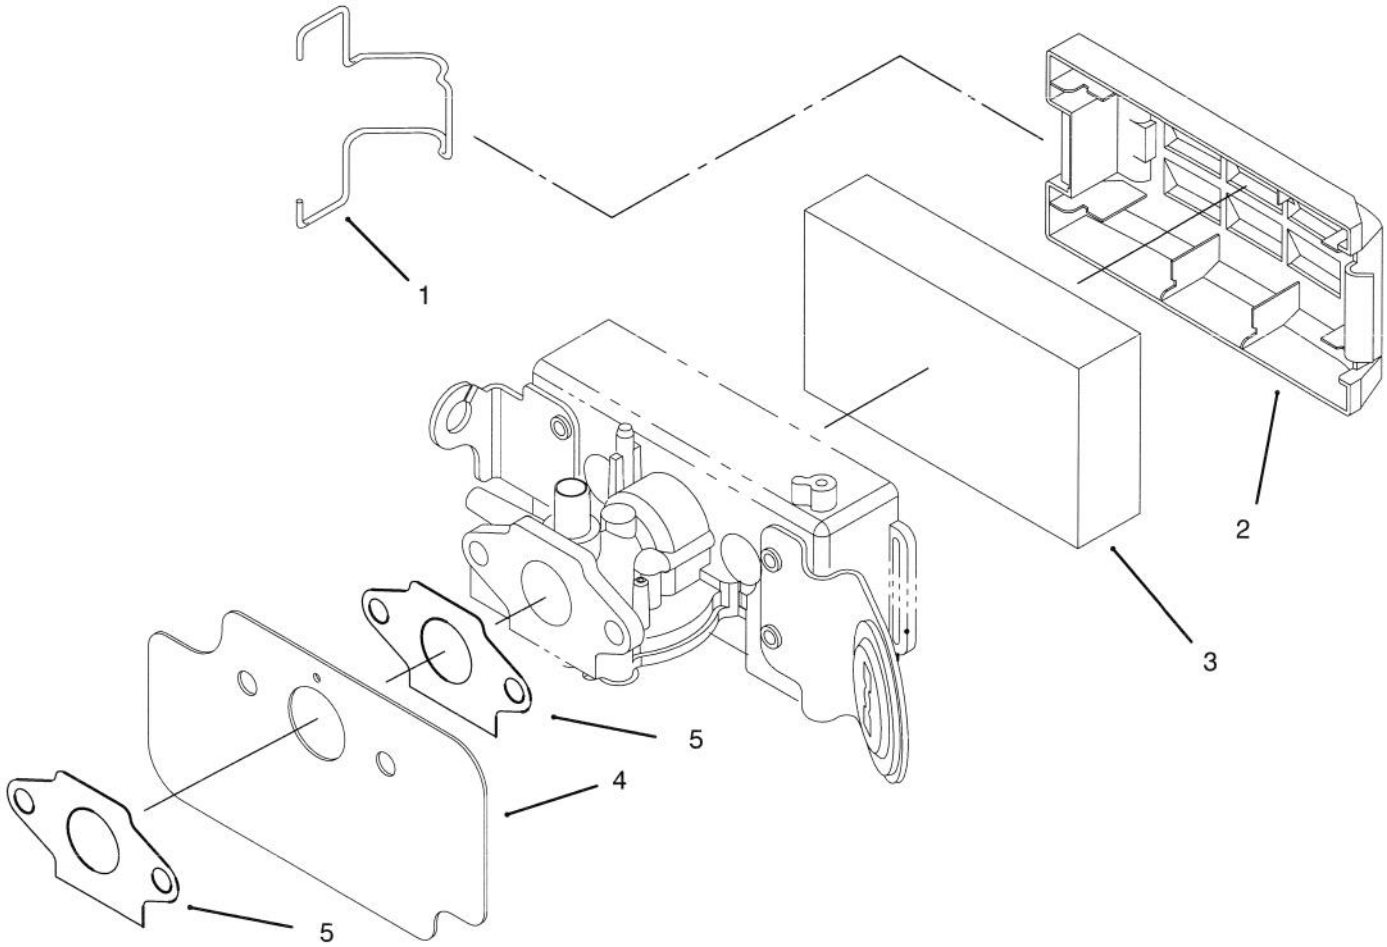

C-2184A

### AIR FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610383	Retainer - Cover	1
2	93-1231	Cover - Air Filter	1
3	609493	Element - Air Filter	1

Ref. No.	Part No.	Description	No. Used
4	93-1221	Shield - Heat	1
5	92-4948	Gasket - Carb.	2

# LAWN-BOY PART NUMBER INDEX

3317-124

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
*	Bag Assembly	7	6	1	612543	Blade 21	1	21	1
130743	Nut - Flywheel	9	18	1	612783	Line - Fuel	1	17	1
303259	Washer - Flat	4	30	1	612824	Clip - Rope	10	5	1
303712	Ring - Retaining	9	22	2	612824	Insert - Handle	6	14	1
306375	Nut	9	61	1	612825	Handle - Rope	6	4	1
306407	Washer	9	56	2	612825	Handle - Starter	10	4	1
316959	Washer - Lock	9	17	1	612841	Plate - Contact	9	45	1
317893	Tie Strap	9	20	1	612842	Shield	9	58	1
602315	Nut	9	12	1	612872	Screw	9	46	2
602587	Plate - Reed	9	47	1	612949	Hub - Starter	10	8	1
602588	Reed	9	48	1	612950	Pulley	10	7	1
602850	Gasket - Float Chamber	11	9	1	613050	Bolt - Shoulder	6	23	1
603014	Bolt	9	10	1	613073	Bracket - C. D.	9	41	1
603093	Washer	9	11	1	613110	Screw	9	51	2
603164	Nut - Blade	1	23	1	613233	Screw	9	53	2
604604	Grommet	2	1	3	613269	Screw	11	6	4
604604	Grommet	3	1	3	613455	Wide Hanger	7	8	1
605120	Grommet	1	14	1	613462	Hanger Clamp	7	7	2
605120	Grommet	9	39	1	613500	Screw	1	29	1
605255	Washer - Felt	4	29	1	613529	Bolt - Shoulder	9	7	1
606608	Pin - Wrist	9	23	1	614009	Spark Plug	9	35	1
607199	Key - Flywheel	9	28	1	614243	Knob - Handle	6	22	2
607213	Gasket - Fuel Cap	1	12	1	614249	Tie - Cable	6	25	2
607526	Screw	9	34	2	614249	Tie Strap	9	40	1
607560	Cover - Side Discharge	2	*	1	614343	Screw	9	42	2
607560	Cover - Side Discharge	3	*	1	614426	Washer - Stepped	4	13	2
607601	Screw	1	30	3	614427	Cover - Wheel	4	16	2
608175	Bar - Toe	2	29	1	614442	Fitting - Grease (Ref.)	4	5	2
608175	Bar - Toe	3	30	1	614589	Nut - Cap	7	2	1
608311	Nut	9	8	1	614591	Chute Support	7	3	1
608834	Washer	2	21	2	614637	Bracket - H. O. C.	2	19	4
608850	Screw	11	10	4	614637	Bracket - H. O. C.	3	27	2
609123	Plug	9	44	4	614650	Bolt - Wheel	2	16	2
609150	Baffle Fuel Cap	1	13	1	614677	Screw - Thread Forming	2	2	2
609471	Screw	1	27	3	614677	Screw - Thread Forming	3	2	2
609482	Screw - Pan Hd. Sems	11	5	2	614682	Knob	2	3	1
609493	Element - Air Filter	12	3	1	614682	Knob	3	3	1
609786	Support - Crankshaft	1	26	1	614697	Screw - Handle	6	20	2
609808	Screw	9	19	1	614700	Tie Strap	7	5	1
609947	Screw	9	15	3	614701	Applique	2	30	1
609976	Pulley	1	33	1	614701	Applique	3	31	1
610165	Retainer	11	2	1	677525	Plate & Collar Assembly	1	20	1
610345	Screw - Set	1	32	1	677982	Liner - Pair	9	27	1
610358	Nut	2	6	2	678113	Float & Arm Assembly	11	16	1
610358	Nut	3	6	2	681678	Wire Lead & Cover Assy	9	37	1
610358	Nut	4	24	2	681737	Set - Ring	9	21	1
610383	Retainer - Cover	12	1	1	681830	Bearing - Main	9	30	1
610834	Collar - Adjustment	11	1	1	681831	Bearing - Main	9	49	1
611071	Filter - Fuel	11	12	1	682683	Brake Assembly	9	5	1
611191	JClip	9	14	1	682876	Muffler Cover Assembly	1	25	1
611192	Bracket - Brake	9	52	1	683215	C. D. Ignition Module	9	38	1
611211	Spring - Brake	9	54	1	683580	Flywheel Assembly	9	16	1
611213	Retainer	9	1	1	683581	Brace Assembly	9	9	1
611214	Spring - Cable, Return	9	3	1	683702	Cylinder & Crankcase Cover	9	43	1
611327	Cap - Fuel	1	11	1	683821	Wire Lead	9	6	1
611393	Screw	9	32	2	683899	Kit - Dog	10	9	1
611395	Screw - Self Tapping	1	8	4	683911	Set - Needle Bearing	9	33	1
611396	Seal - Oil	9	29	2	684301	Base - Starter	1	6	1
611509	Actuator - Brake Lever	9	2	1	684567	Starter Housing & Shaft	10	2	1
611545	Plug	11	4	2	684622	Starter Assembly	10	*	1
612383	Washer	11	15	1	684622	Starter Assembly	1	7	1
612427	Shroud - Base	9	13	1	684727	Adaptor Assembly	7	4	1
612428	Screw	1	9	4	684729	Chute & Support Assembly	7	1	1
612432	Rope	10	6	1	684776	Wheel - 6	3	23	2

\*Not Illustrated

# LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
684776	Wheel - 6	2 25 2	92-1008	Knob - Spring Arm	2 23 4
684777	Wheel Assembly 8	2 17 2	92-1042	Wheel - 8	4 14 2
926641	Screw	3 9 2	92-1043	VBelt	4 28 1
16-2039	Panel - Control	6 7 1	92-1054	Plate - Muffler	1 28 1
16-2049	Panel - Control	6 * 1	92-1057	Bolt - Wheel	4 15 2
16-5539	Shroud & Tank Assembly	1 5 1	92-1078	Brake - BBC Cam	6 19 1
16-5769	Housing - 21	2 31 1	92-1092	Handle - Upper	6 21 1
16-5779	Housing - 21	3 32 1	92-1093	Bail - Brake	6 8 1
24-7920	Cover - Drive Shaft	4 31 1	92-1094	Bracket - Cam	6 18 1
29-8970	Washer	2 20 2	92-1099	Bolt - Wheel	3 24 2
29-9570	Bushing - Yoke	5 11 1	92-1099	Bolt - Wheel	2 26 2
36-4780	Washer	5 17 1	92-1604	Hub Cap	2 15 4
36-4791	Washer - Thrust	5 20 2	92-1604	Hub Cap	3 25 4
38-7820	Bearing - Ball	5 2 1	92-1617	Bail - Control	6 15 1
39-5770	Decal - Danger (English)	2 5 1	92-1630	Fan - Mulching	1 22 1
39-5770	Decal - Danger (English)	3 5 1	92-1648	Screw - Engine	1 24 3
40-1940	Washer - Wheel Bolt	3 7 6	92-2268	Screw	6 3 1
40-1940	Washer - Wheel Bolt	2 18 8	92-2918	Decal - Control Panel	6 5 1
44-2750	Body - Primer	11 26 1	92-2919	Decal - Danger	7 9 1
44-3175	Hose - Primer	11 27 1	92-2928	Bracket - Cable	6 32 1
46-6811	Screw	2 28 2	92-4856	Bolt - Shoulder	2 14 2
46-6811	Screw	3 29 2	92-4856	Bolt - Shoulder	3 22 2
47-2480	Stop - Rope	1 10 1	92-4921	Connecting Rod Assembly	9 26 1
47-2900	Bushing	4 6 2	92-4923	Set - Piston & Ring	9 24 1
49-2040	Screw	5 21 6	92-4925	Piston & Connecting Rod	9 * 1
55-3760	Pinion - 15 Tooth	5 23 1	92-4927	Bearing Assembly	9 25 1
55-3770	Gear - 49 Tooth	5 28 1	92-4935	Spring & Keeper	10 3 1
55-3780	Pinion - 20 Tooth	5 24 1	92-4944	Spring - Governor	11 21 1
55-3790	Gear - 44 Tooth	5 29 1	92-4948	Gasket - Carb.	12 5 2
55-3800	Pinion - 25 Tooth	5 25 1	92-5412	Stop - Pivot	6 16 1
55-3810	Gear - 39 Tooth	5 30 1	92-5790	Pinion - Bevel	5 27 1
60-8710	Gearcase - Upper	5 9 1	92-5791	Spacer	5 5 1
60-8730	Gear Case Cover	5 22 1	92-5791	Spacer	2 11 2
60-8750	Bushing - Inter. Shaft	5 19 2	92-6353	Short Block	9 * 1
60-8770	Bushing - Output	5 18 1	92-6370	Main Jet	11 13 1
60-8790	Sleeve - Gear	5 31 1	92-6371	Nozzle	11 14 1
60-8800	Shaft - Intermediate	5 26 1	92-6373	Disc - Throttle	11 23 1
60-8810	Retainer - Shift Fork	5 12 1	92-6375	Crankshaft	9 31 1
60-8821	Lever - Shift	4 21 1	92-6376	Air Vane & Shaft	11 24 1
60-8840	Pulley - Half	5 6 2	92-6389	Pin	11 17 1
60-8850	Bushing - Output	5 3 1	92-6518	Cable - Traction	6 29 1
60-8870	Yoke - Shift	5 10 1	92-6535	Cap - End	4 27 2
65-2720	Ring - Retaining	4 17 4	92-6537	Handle - Lower	6 27 1
65-4710	Ring - Friction	4 9 2	92-6539	Spring Arm Assembly R.H.	4 * 1
65-4720	Spring - Compression	4 18 2	92-6540	Spring Arm Assembly L.H.	4 2 1
65-4730	Washer - Thrust	4 7 2	92-7674	Bolt - Shoulder	2 33 2
65-4740	Washer - Thrust	4 8 4	92-7699	Bracket - Actuator	3 12 1
65-4750	Gear - Pinion	4 12 2	92-7720	Guide - Rope	6 1 1
65-4760	Washer - Clutch	4 10 2	92-7736	Shield - Trailing	2 8 1
65-4770	Shaft - Output	5 4 1	92-7736	Shield - Trailing	3 15 1
65-5250	Clip - Spring	5 16 1	92-7746	Pivot Arm Assembly	4 4 2
66-6040	Key - Rocking, R.H.	4 * 1	92-7748	Screw	3 11 2
66-6050	Key - Rocking, L.H.	4 11 1	92-7869	Gear Case Assembly	3 14 1
66-7460	Bulb - Primer	11 25 1	92-7869	Gear Case Complete	5 * 1
70-9760	Bushing	4 3 2	92-7899	Bracket - Traction Cable	6 28 1
76-0760	Key - Shift	5 14 2	92-8630	Cover - Plate, Mulch	2 4 1
76-0770	Collar - Shift	5 15 1	92-8630	Cover - Plate, Mulch	3 4 1
76-0780	Sleeve - Shift Key	5 13 1	92-8852	Cover - Drive	3 10 1
82-8780	Retainer - Cable	4 20 1	92-8926	Control Ground Speed	6 9 1
92-1005	Spring Arm Assembly	2 12 2	92-9567	Decal - Recoil	1 15 1
92-1006	Spring Arm Assembly	3 20 2	92-9568	Decal - Recoil	1 * 1
92-1006	Spring Arm Assembly	2 24 2	92-9665	Screw	6 13 4
92-1008	Knob - Spring Arm	4 1 2	92-9673	Bolt - Shoulder	2 7 2
92-1008	Knob - Spring Arm	3 19 4	92-9673	Bolt - Shoulder	3 8 2

\*Not Illustrated

# LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
92-9691	Float Chamber	11	11	1	256-251	Bushing	3	13	2
92-9697	Float, Valve, & Body Ass'y	11	19	1	321-4	Screw - Hex. Hd.	6	24	1
93-1221	Shield - Heat	12	4	1	321-6	Screw	9	57	1
93-1225	Lever - Speed Adjust	11	3	1	321-51	Bolt	6	2	1
93-1226	Bracket - Throttle Control	11	22	1	3230-29	Bolt - Carriage	6	26	2
93-1228	Body - Carburetor	11	7	1	3253-33	Washer	6	30	2
93-1231	Cover - Air Filter	12	2	1	3255-7	Washer - Ext. Tooth Lock	9	60	1
93-1232	Bracket - Primer	11	8	1	3256-24	Washer	5	8	1
93-1233	Gasket - Muffler	1	31	1	3272-10	Pin - Cotter	4	23	1
93-1239	Spring - Contact	9	59	1	3285-19	Pin - Groove	5	1	1
93-1240	Case Assembly	9	55	1	3290-413	Washer - Belleville	2	13	4
93-3191	Decal - No Rust	2	35	1	3290-413	Washer - Belleville	3	21	2
93-3191	Decal - No Rust	3	35	1	3296-5	Nut	5	7	1
93-3248	Cable - Brake	6	6	1	3296-39	Nut - Lock	2	32	4
93-3683	Control - Throttle	6	12	1	3296-39	Nut - Lock	3	33	2
93-4307	Switch Kit	9	*	1	3296-56	Nut - Lock	6	33	1
93-4319	Carburetor Complete	11	*	1	3296-73	Nut	6	17	3
93-6624	Decal - Control Panel	6	*	1	32103-29	Nut - Wing	6	31	2
93-6625	Decal - Control Panel	6	11	1	32144-53	Screw - Self Tapping	1	34	1
93-7250	Decal - Warning	2	34	1	32144-70	Screw - Hex. Hd.	4	19	1
93-7250	Decal - Warning	3	34	1	32144-85	Screw	4	25	2





