FORM NO. 3316–603

LAWN-BOY®

21" SILVER SERIES WALK–BEHIND MOWER

MODEL NO. 10211–4900001 & UP
MODEL NO. 10312–4900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.


TABLE OF CONTENTS

Description	Page	Description	Page
Mulch Plate & Wheel Assembly	1	Short Block Assembly	8
Cover Assembly	2	Crankshaft & Piston Assembly	9
Rear Axle Assembly	3	Recoil Starter Assembly	10
Gear Case Assembly	4	Carburetor Assembly	11
Engine Assembly	5	Handle Assembly	12
Blade Assembly	6	Rear Catcher Assembly	13
Shroud & Flywheel Assembly	7	Numeric Parts Index	14–15

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag Kit w/Chute	Model No. 89811
Leaf Bag	Model No. 89804	Mower & Feed Fertilizer Spreader	Model No. 52070
Leaf Shredder Kit	Model No. 89860		

Copyright 1994 The Lawn–Boy Inc.
All Rights Reserved

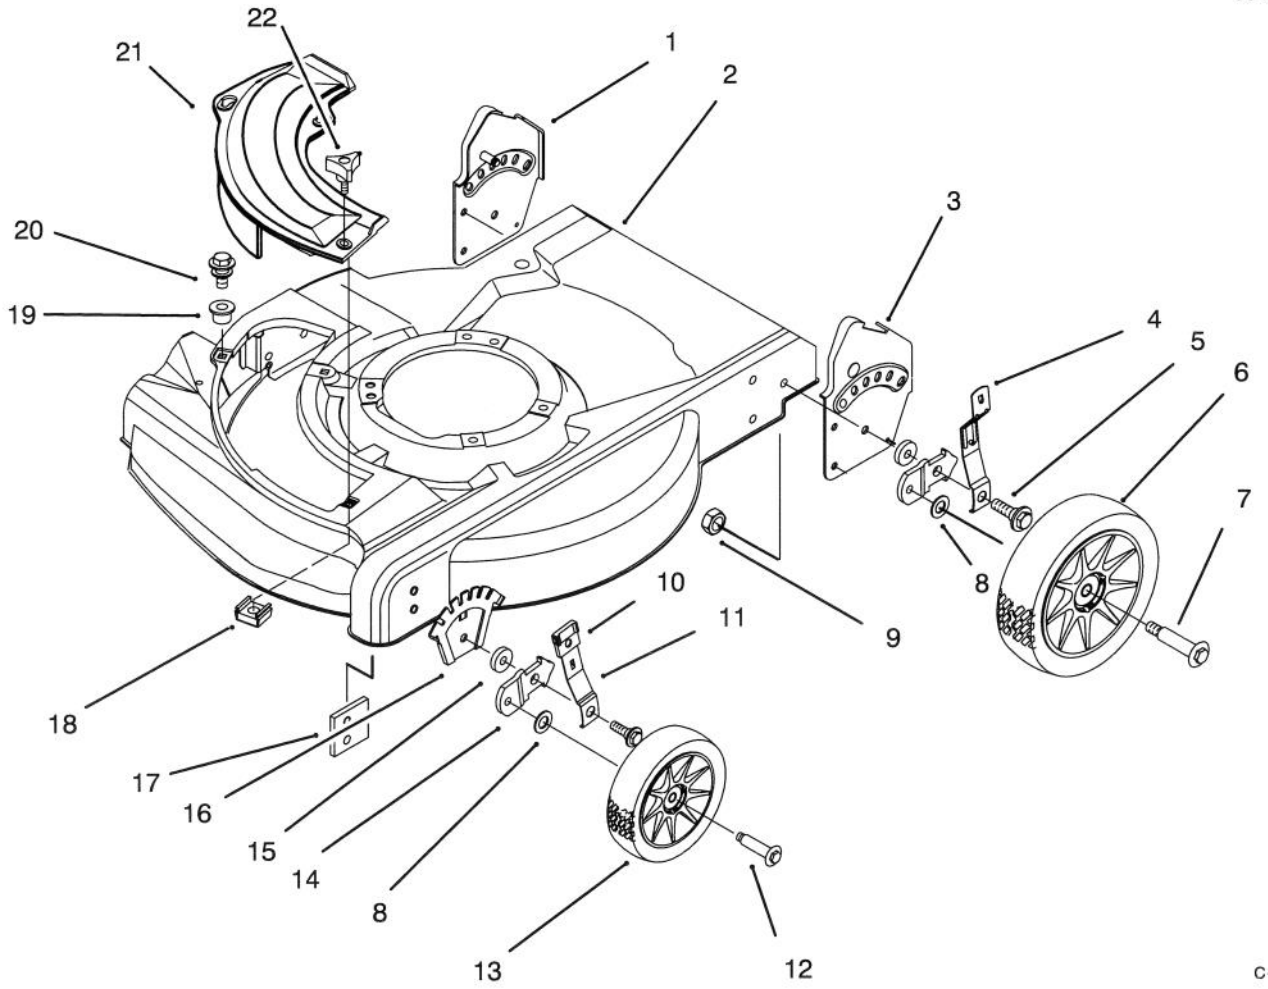


C–1998

MULCH PLATE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–7742	Bracket – Handle R.H. (Model No. 10211 Only)	1
2	16–4359	Housing (Model No. 10211 Only)	1
3	92–7743	Bracket – Handle L.H. (Model No. 10211 Only)	1
4	92–1005	Arm – Spring (Model No. 10211 Only)	2
5	614672	Bolt – Shoulder Height Adj. (Qt'y (2) Model No. 10312 Only)	4
6	684777	Wheel & Tire Ass'y 8" (Model No. 10211 Only)	2
7	614650	Bolt – Shoulder (Model No. 10211 Only)	2
8	40–1940	Washer (Qt'y (2) Model No. 10312 Only)	4
9	3239–39	Nut – Lock (Model No. 10211 Only)	2


Ref. No.	Part No.	Description	No. Used
10	92–1008	Knob – Height Adjust	4
11	614687	Arm – Spring	2
12	92–1099	Bolt – Shoulder	2
13	684776	Wheel & Tire Ass'y 6"	2
14	614637	Bracket – Wheel Height Adj. (Qt'y (2) Model No. 10312 Only)	4
15	92–4890	Washer (Qt'y (2) Model No. 10312 Only)	4
16	92–4481	Plate – Height Adj.	2
17	92–7731	Plate – Baffle	2
18	613765	Nut – Cage (Model No. 10211 Only)	1
19	604604	Grommet – Plastic	2
20	614677	Screw – Sems Thr'd Form.	2
21	92–8630	Plate – Mulch	1
22	614682	Knob – Cover Plate	1

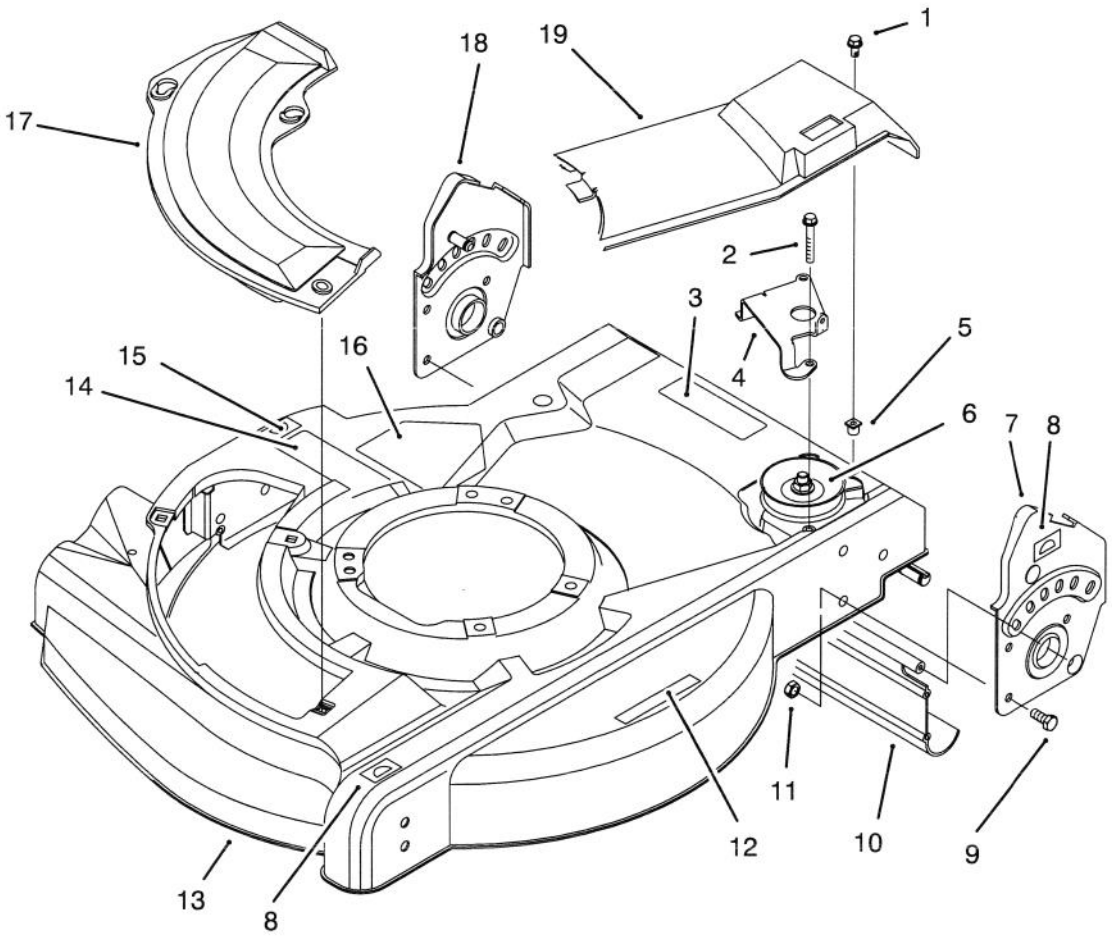

C–1999

COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–9665	Screw – Phillips Hd. (Model No. 10312 Only)	1
2	4902040	Screw – Hex Hd. (Model No. 10312 Only)	2
3	92–4981	Decal – Warning	1
4	92–7728	Guide – Transmission (Model No. 10312 Only)	1
5	605120	Grommet (Model No. 10312 Only)	1
6	92–7735	Gear Case Assembly (Model No. 10312 Only)	1
7	92–7724	Bracket – Handle L.H. (Model No. 10312 Only)	1
8	92–2915	Decal – H.O.C.	2
9	322–6	Screw – Hex Hd. Cap	6
10	92–8647	Shield – Trailing	1
11	3296–29	Nut – Lock	6
12	71–1280	Decal – Warning	1
13	16–4369	Housing (Model No. 10312 Only)	1
14	92–1097	Decal – Discharge	1
15	92–2914	Decal – H.O.C.	2
16	39–5770	Decal – Danger	1
17	607560	Plate – Cover	1
18	92–7723	Bracket – Handle R.H. (Model No. 10312 Only)	1
19	614671	Cover – Drive (Model No. 10312 Only)	1

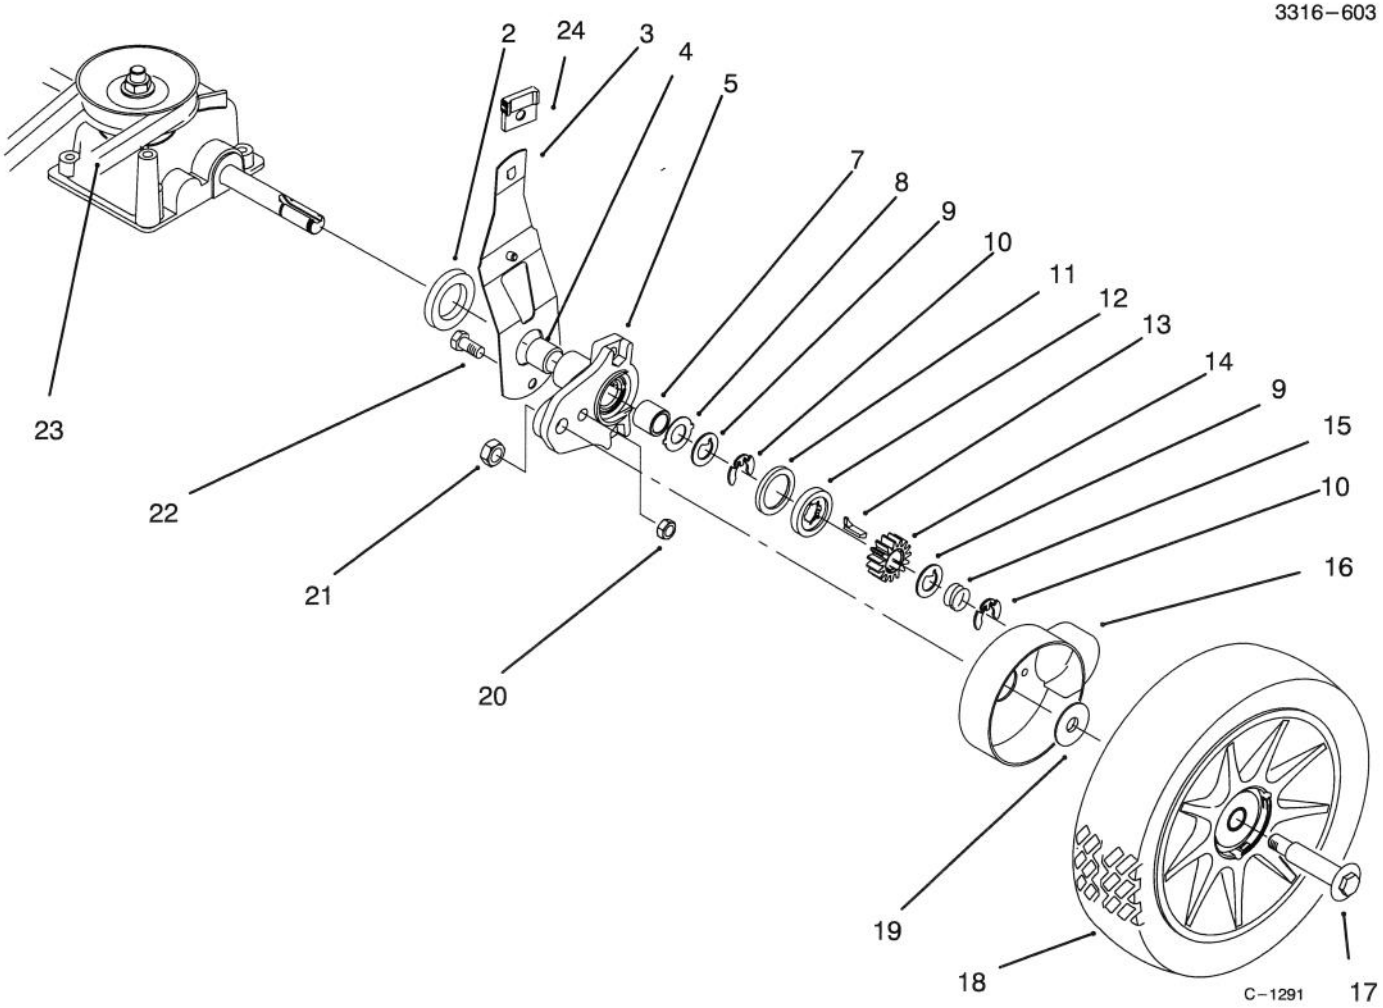


REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	614447	Spacer – Axle Shaft	2
3	92–1004	Spring Arm Ass'y	2
4	70–9760	Bushing	2
5	92–7746	Pivot Arm Ass'y – Rear (Incl. Ref.#4, 6, & 7)	2
6	614442	Fitting – Grease	2
7	47–2900	Bushing	2
8	65–4730	Washer – Thrust Pivot Arm	2
9	65–4740	Washer – Thrust, Keyed	4
10	65–2720	Ring – Klip. Special	4
11	65–4710	Ring – Friction	2
12	65–4760	Washer – Clutch, Plastic	2

Ref. No.	Part No.	Description	No. Used
13	66–6050	Key – Rocking, LH	1
*	66–6040	Key – Rocking, RH	1
14	65–4750	Gear – Pinion	2
15	65–4720	Spring – Compression	2
16	614427	Cover Wheel	2
17	92–1057	Bolt – Wheel	2
18	92–1042	Wheel Ass'y – 8"	2
19	614426	Washer – Stepped	2
21	610358	Nut	2
22	32144–85	Screw	2
23	92–1043	V–Belt	1
24	92–1008	Knob	2


*Not Illustrated

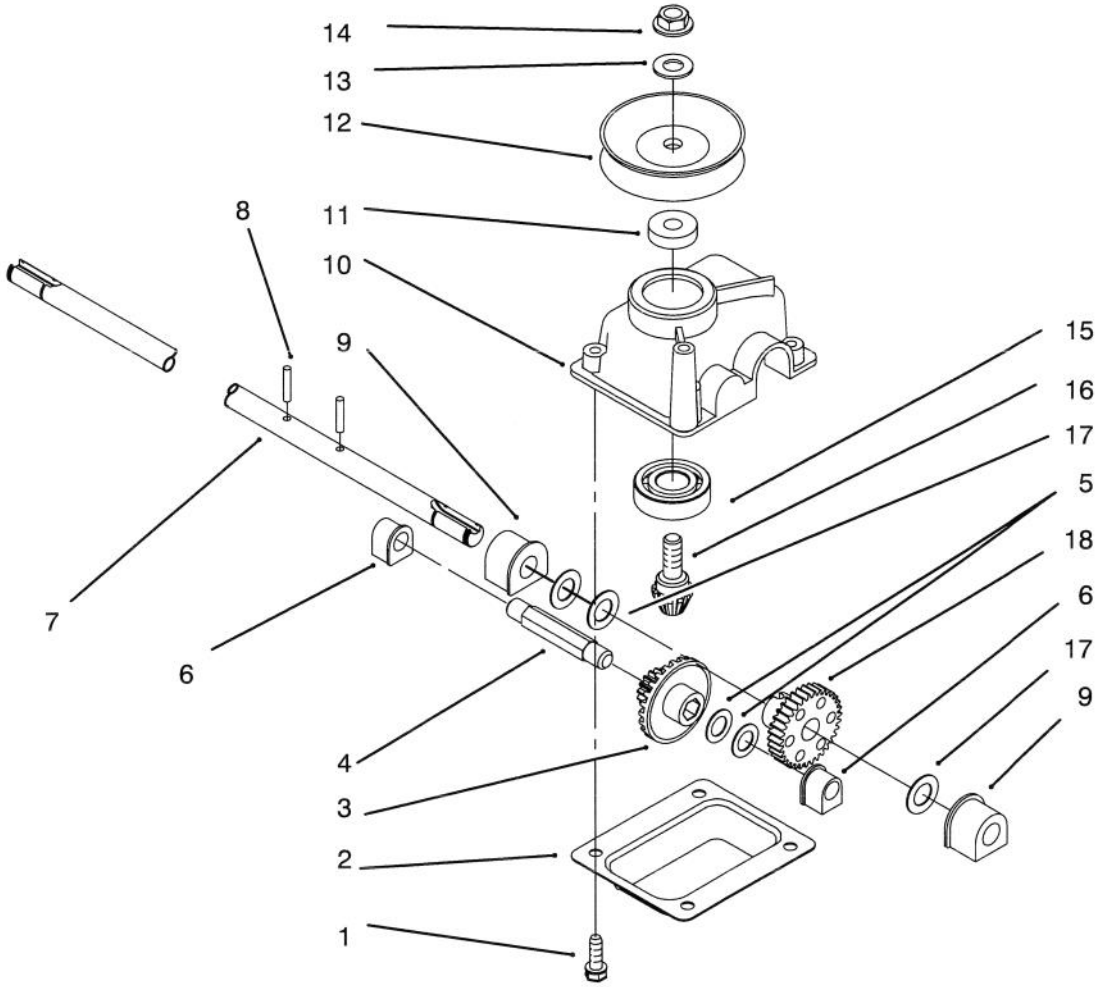

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144–4	Screw – Taptite	4
2	614668	Cover – Gear Case	1
3	55–3760	Pinion – 15 Tooth	1
4	614696	Shaft – Intermediate	1
5	36–4791	Washer	2
6	60–8750	Bushing	2
7	614666	Shaft – Output	1
8	3285–19	Pin – Groove	2
9	60–8850	Bushing – Output	2

Ref. No.	Part No.	Description	No. Used
10	92–7727	Gearcase	1
11	62–6660	Spacer	1
12	614669	Pulley – Half	2
13	3256–24	Washer	1
14	3296–5	Nut	1
15	38–7820	Bearing – Ball	1
16	60–8890	Gear – Bevel Pinion	1
17	36–4780	Washer – Thrust	2
18	614596	Gear 34 Tooth	1

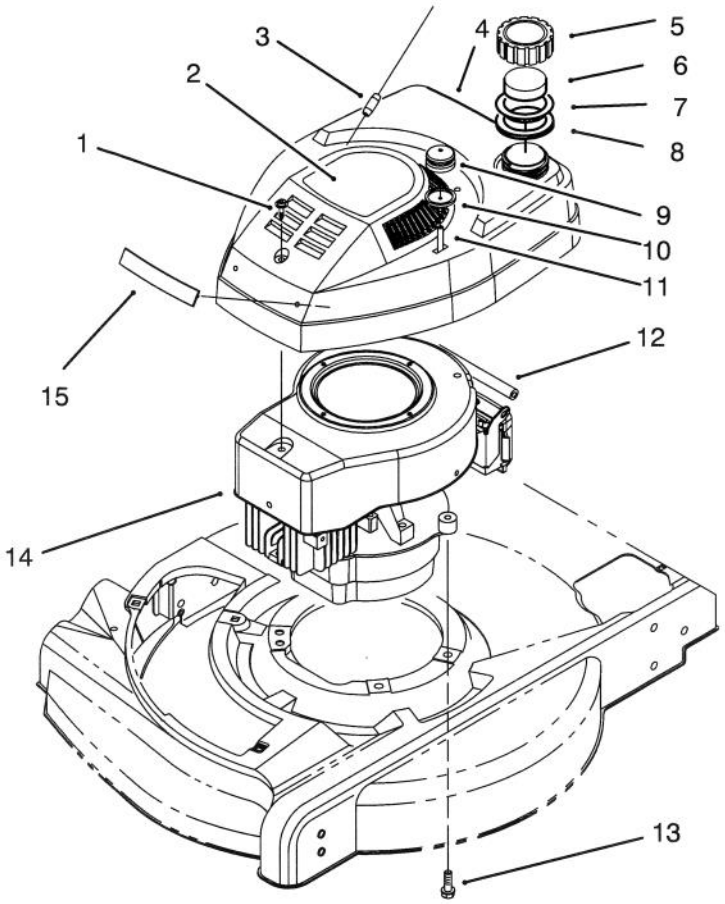


C–2000

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614689	Screw – Sems	3
2	92–9569	Decal – Shroud (Model No. 10211 Only)	1
2	92–9570	Decal – Shroud (Model No. 10312 Only)	1
3	92–1701	Stop – Rope	1
4	92–6380	Tank & Shroud	1
5	684751	Gas Cap Assembly (Incl. Ref. #6–8)	1
6	609150	Baffle	1

Ref. No.	Part No.	Description	No. Used
7	613311	Gasket	1
8	614271	Cover	1
9	66–7460	Bulb – Primer	1
10	44–2750	Body – Primer	1
11	44–3174	Hose – Primer	1
12	612782	Line – Gas	1
13	92–1624	Screw – Engine	3
14		Engine	1
15	92–8615	Applique – Shroud	1

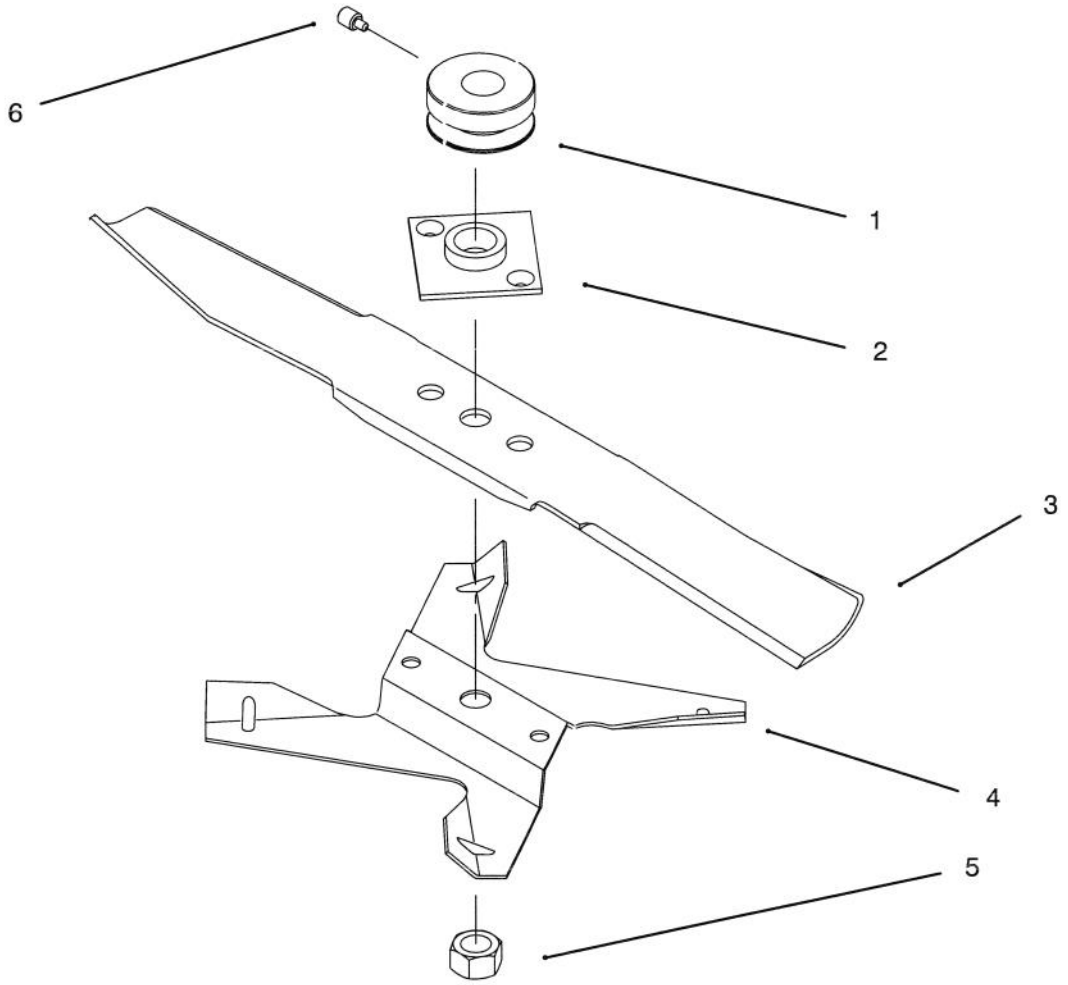


C–2001

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–6542	Pulley – Engine (Model No. 10312 Only)	1
2	677525	Plate & Collar	1
3	612543	Blade –21"	1

Ref. No.	Part No.	Description	No. Used
4	92–1630	Fan – Mulching	1
5	603164	Nut – Blade	1
6	613227	Screw – Set (Model No. 10312 Only)	1

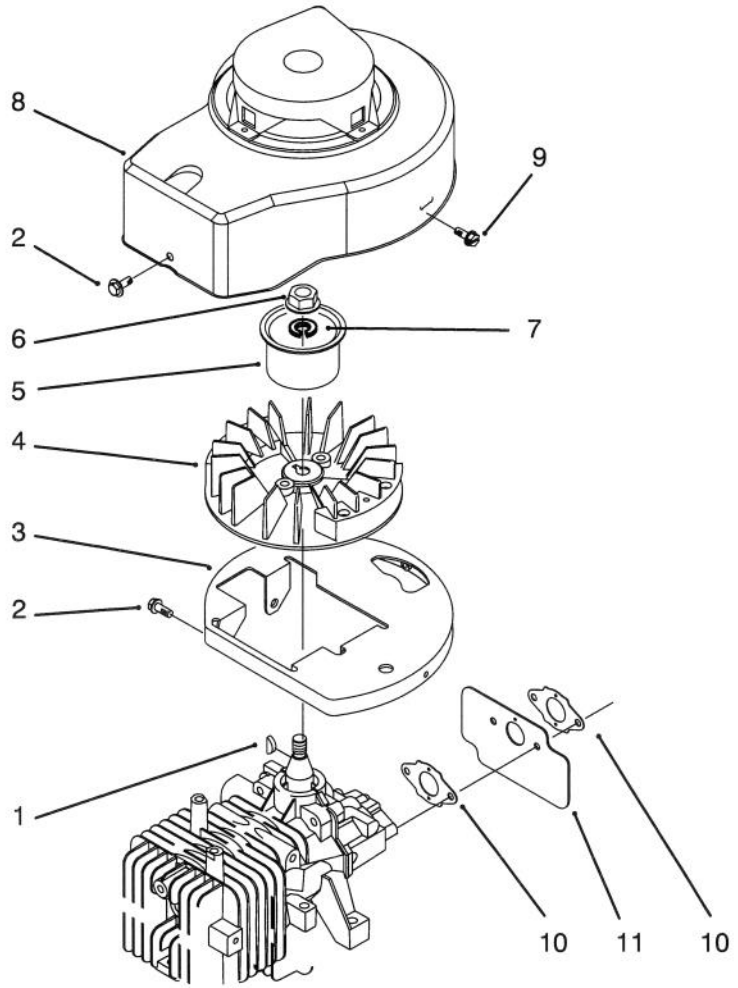


C–1847

SHROUD & FLYWHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	607199	Key – Crankshaft	1
2	614702	Screw	3
3	614675	Base – Shroud	1
4	684743	Flywheel Assembly	1
5	614640	Hub – Starter	1
6	130743	Nut – Hex. Flange	1

Ref. No.	Part No.	Description	No. Used
7	316959	Washer – Lock	1
8	92–4946	Shroud Assembly	1
9	614699	Screw	3
10	92–4948	Gasket – Carburetor	2
11	92–4947	Shield – Carburetor	1

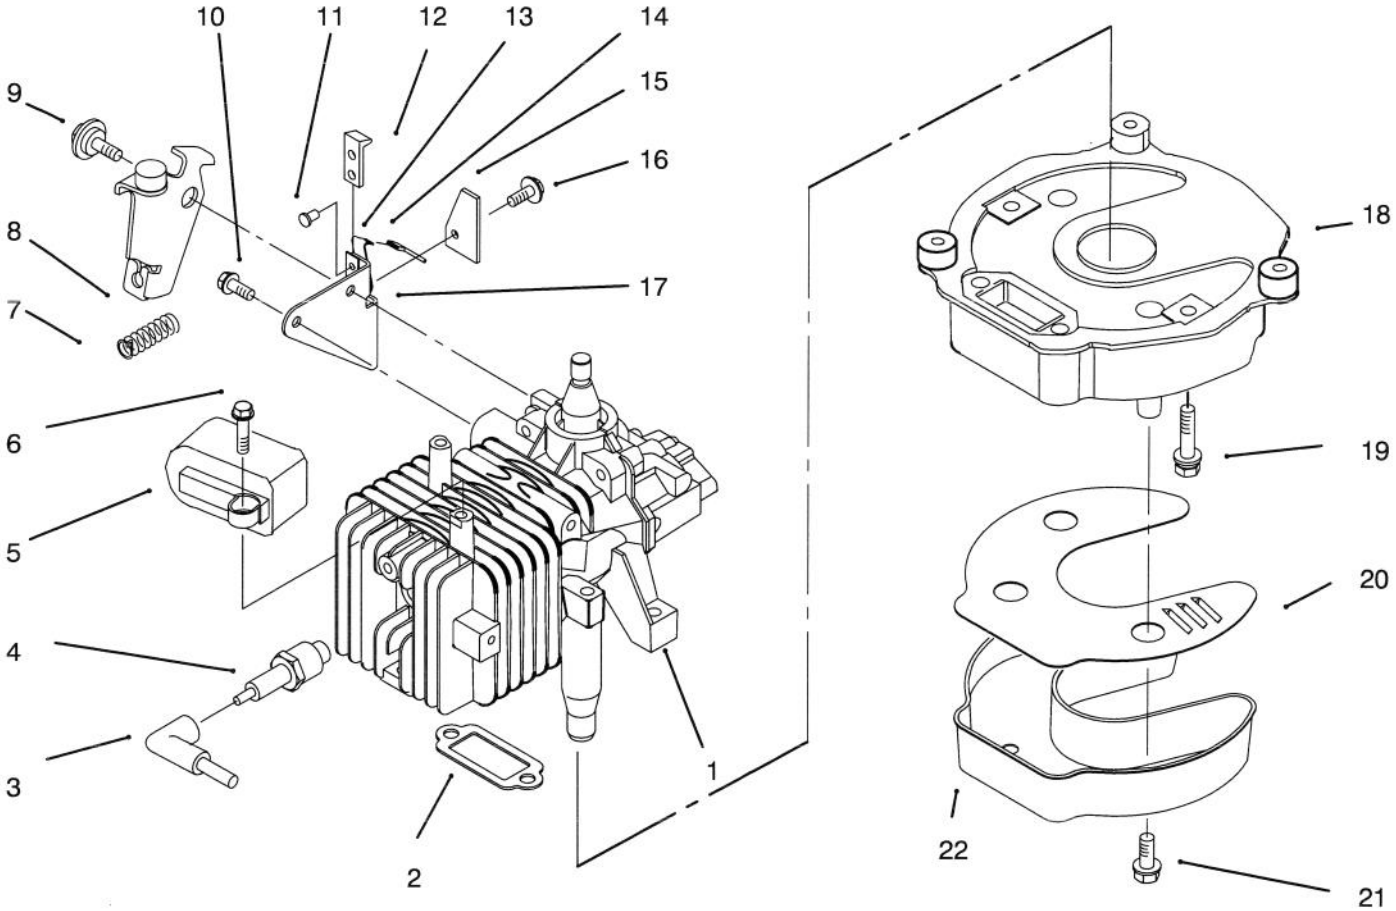


C–1296

SHORT BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–9693	Short Block	1
2	92–6383	Gasket – Exhaust	1
3	684179	Wire – Plug (Includes)	1
*	681678	Cover & Terminal	1
4	614008	Plug – Spark	1
5	684049	CD Ignition (Incl. Ref. #3)	1
6	613208	Screw – Hex. Washer Hd.	2
7	66–5370	Spring –Compression	1
8	66–5380	Brake Plate Assembly	1
9	92–4939	Screw – Shoulder	1
10	614702	Screw	1

Ref. No.	Part No.	Description	No. Used
11	3290–459	Rivet – Plastic	2
12	92–2925	Strap – Insulation	1
13	60–9010	Strap – Ground	1
14	92–1156	Wire – Brake Switch Lead	1
15	53–4690	Stop – Ground Strap	1
16	12–5450	Screw – Thread Forming	1
17	14–6009	Mounting Plate Assembly	1
18	614654	Plate – Muffler	1
19	607601	Screw	4
20	614681	Baffle	1
21	609471	Screw	3
22	614674	Cover – Muffler	1

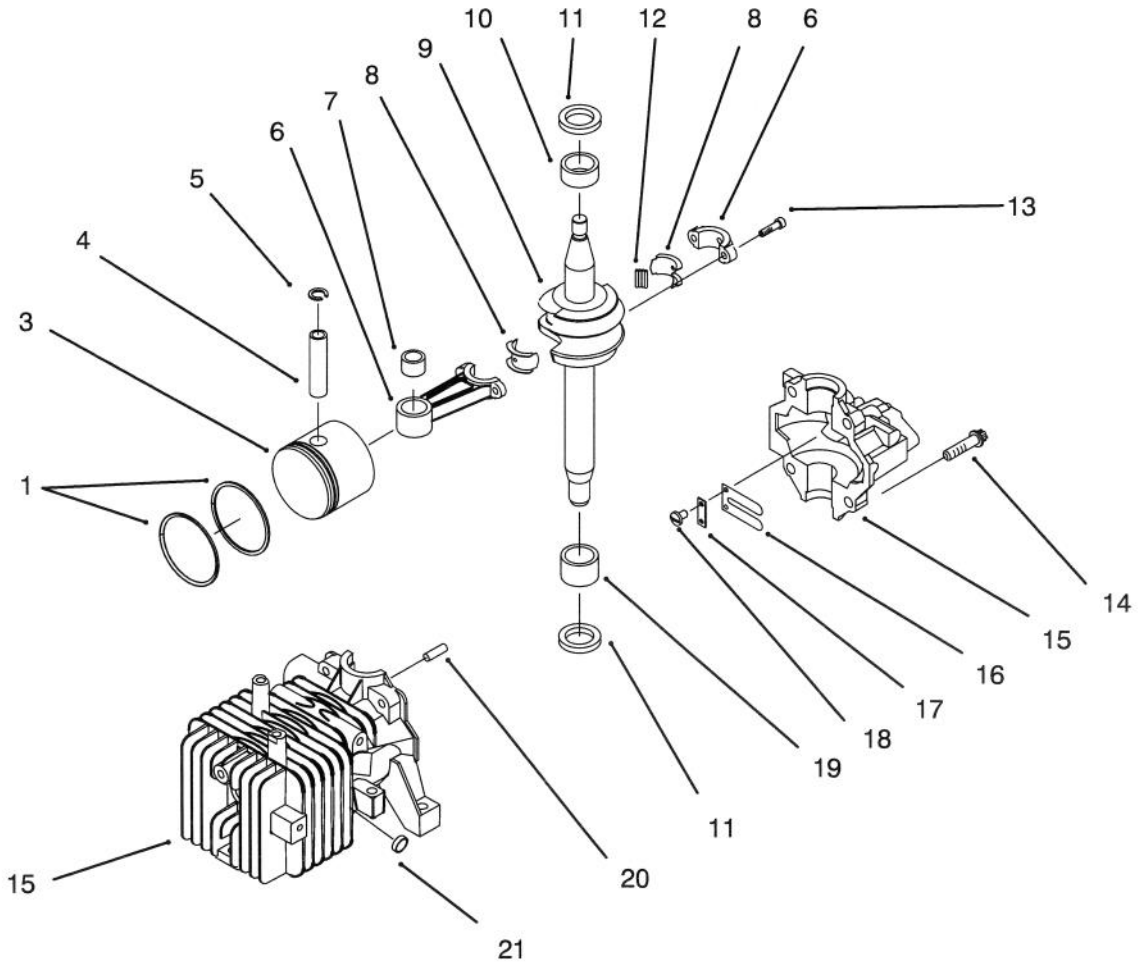


C–1295

CRANKSHAFT & PISTON ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	681737	Set – Ring	1
3	92–4924	Piston	1
*	92–4925	Piston & Connecting Rod (Incl. Ref. #1 – 7)	1
4	606608	Pin – Wrist	1
5	303712	Ring – Retaining	2
6	92–4921	Connecting Rod Assembly	1
7	92–4927	Bearing	1
8	677982	Liner – Split (Set of 2)	1
9	92–6375	Crankshaft	1
10	681830	Bearing – Upper Main	1
11	611396	Seal – Oil	2

Ref. No.	Part No.	Description	No. Used
12	609754	Bearing – Needle	32
13	611393	Screw – Hex. Hd.	2
14	614636	Screw – Torx. Washer Hd.	4
15	684725	Cylinder & Crankcase Cover	1
16	602588	Reed – Carburetor	1
17	602587	Reed – Backup Plate	1
18	612872	Screw	2
19	681831	Bearing – Needle	1
20	609629	Dowel	1
21	609123	Plug – Core	4
*	610372	Sealer	1


*Not Illustrated

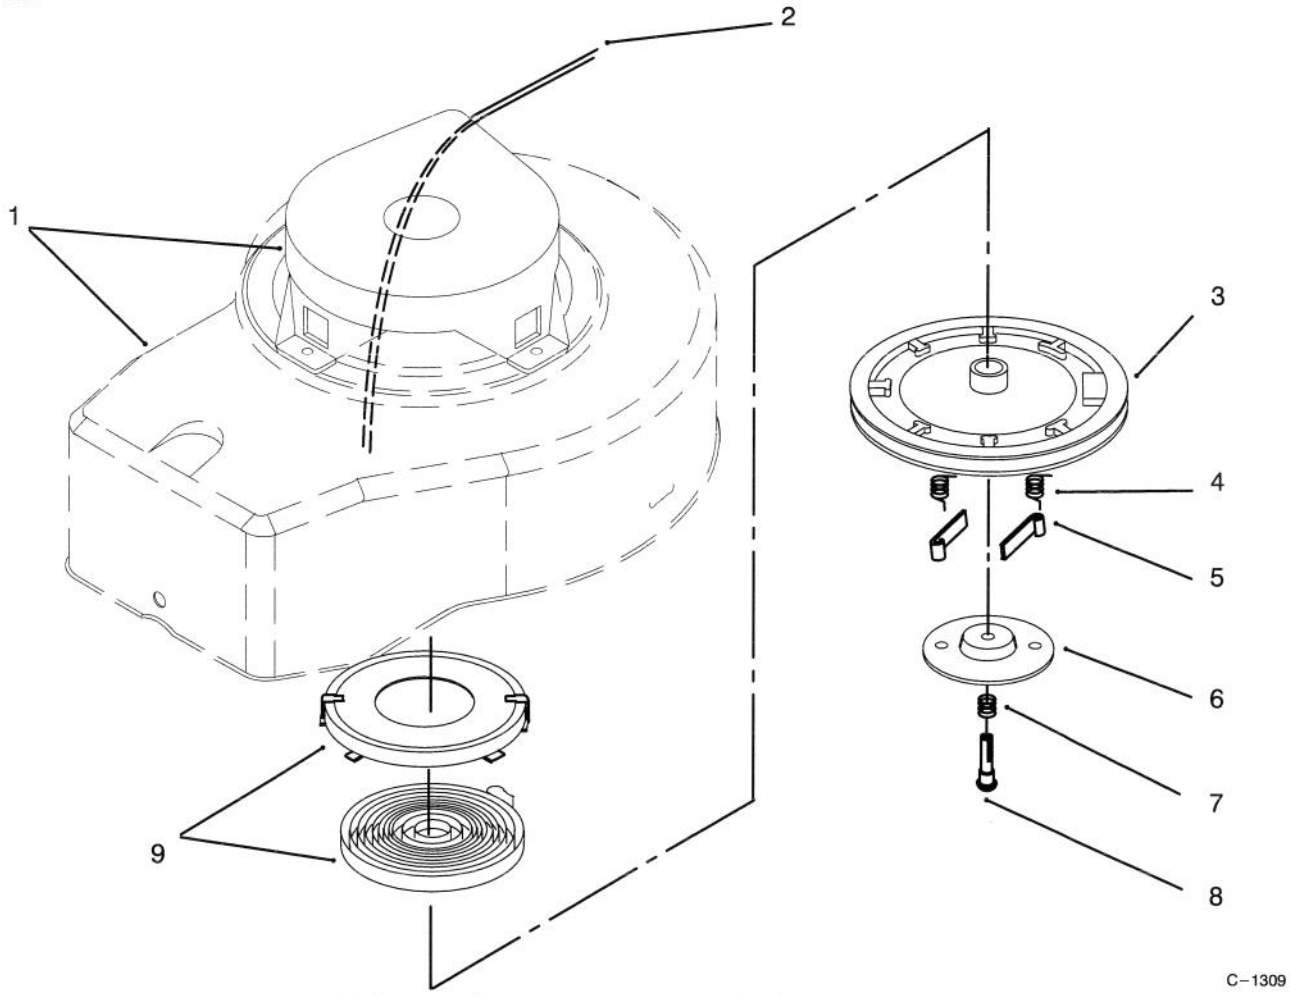

RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–4946	Housing Assembly	1
2	92–4928	Rope –Starter	1
3	92–4929	Pulley Assembly	1
4	92–4930	Spring – Dog	2
5	92–4931	Dog	2

Ref. No.	Part No.	Description	No. Used
6	92–9692	Retainer	1
7	92–4934	Spring	1
8	92–4933	Screw	1
9	92–4935	Spring Keeper Assembly	1

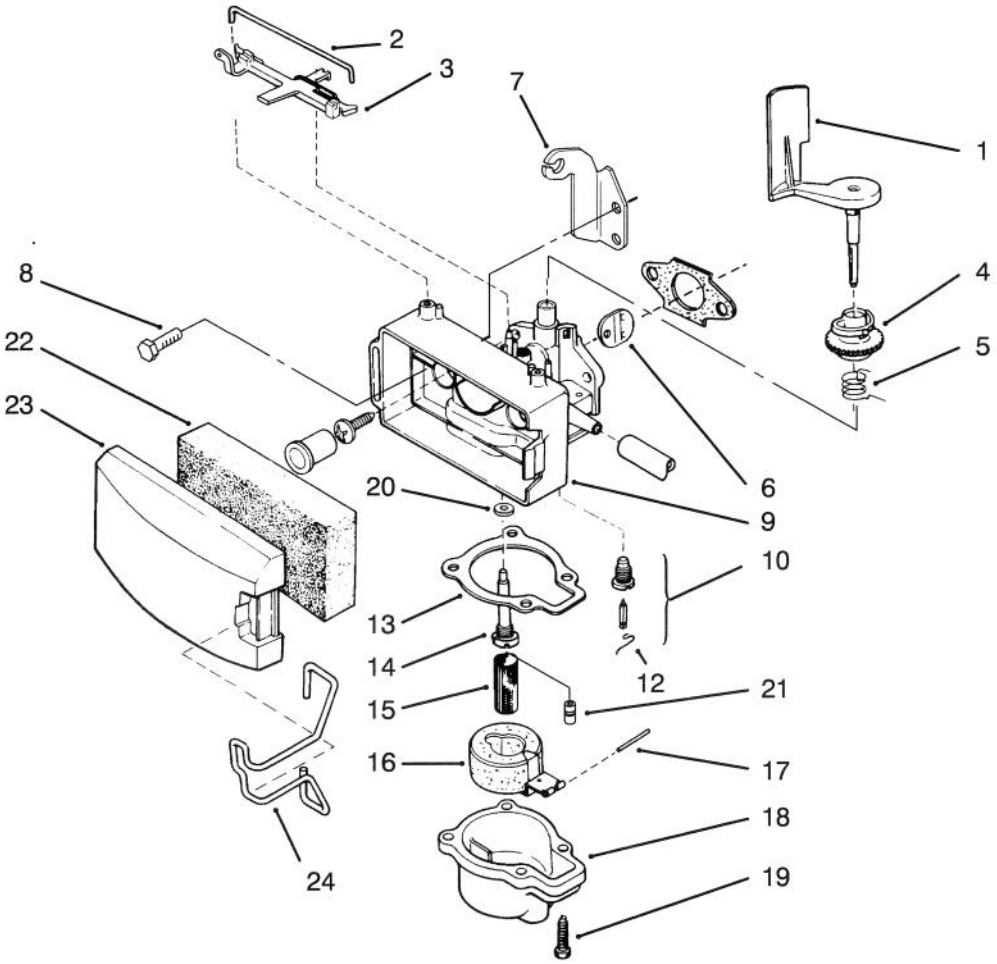


C–1835

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–6376	Air Vane & Shaft	1
2	610165	Retainer – Speed Control	1
3	92–4943	Lever – Speed Adjust	1
4	610834	Collar – Air Vane	1
5	92–4944	Spring – Governor	1
6	92–6373	Disc – Throttle	1
7	92–4949	Bracket – Throttle Control	1
8	613269	Screw	2
9	92–6377	Carburetor Body	1
10	92–9697	Kit – Float Valve, Body & Seat (Incl. Ref. #12)	1
12	603145	Spring	1
13	602850	Gasket	1

Ref. No.	Part No.	Description	No. Used
14	92–6371	Nozzle	1
15	611071	Filter – Fuel	1
16	678113	Float & Arm Assembly	1
17	92–6389	Pin	1
18	92–6374	Float Chamber	1
19	608850	Screw	4
20	612383	Washer	1
21	92–6370	Main Jet	1
22	609493	Filter	1
23	610728	Cover	1
24	610383	Retainer	1
*	92–6385	Jet – High Altitude	1
*	92–9695	Carburetor Assembly	1


*Not Illustrated

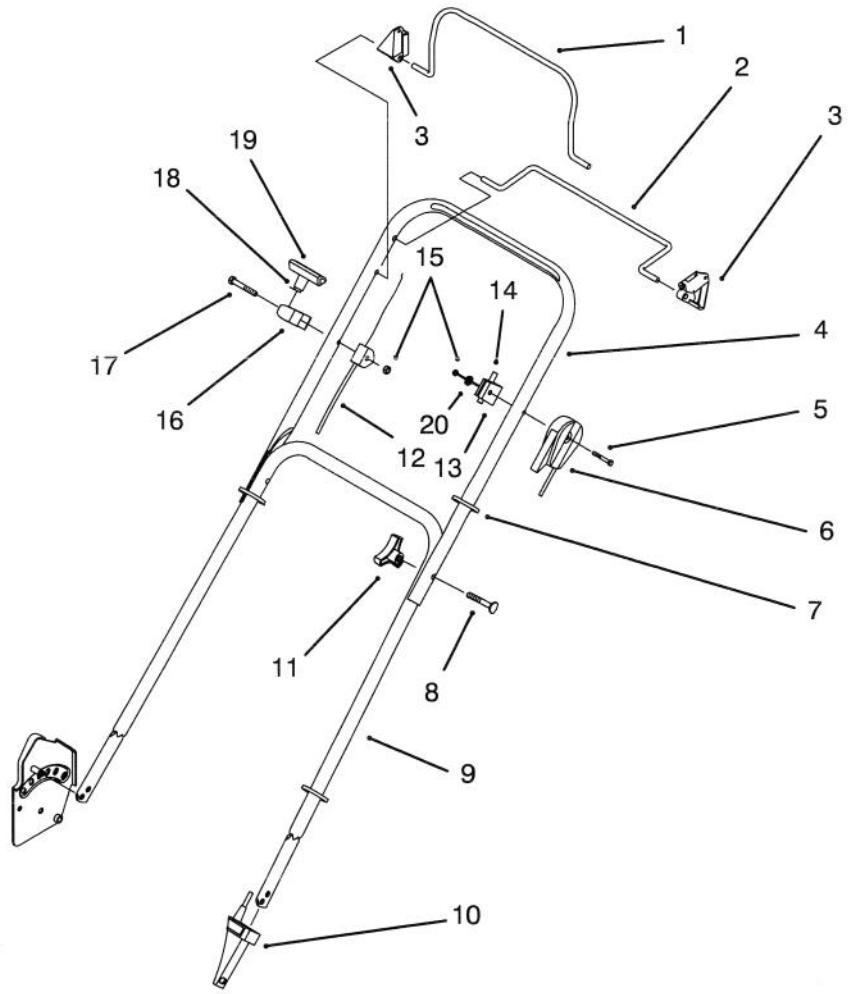

C–2002

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–1002	Bail – Flywheel Brake	1
2	92–1001	Bail – SP Control (Model No. 10312 Only)	1
3	92–5412	Stop – Pivot (Qt'y (1) Model No. 10211 Only)	2
4	92–7737	Handle – Upper	1
5	321–48	Screw – Hex Hd. Cap (Model No. 10211 Only)	1
*	321–49	Screw – Hex Hd. Cap (Model No. 10312 Only)	1
6	92–7734	Cable – Throttle	1
7	614249	Tie – Cable (Qt'y (1) Model No. 10211 Only)	3
8	614697	Screw – Handle	2
9	614643	Handle – Lower	1
10	614693	Anchor – Cable SP Lower (Model No. 10312 Only)	1
11	614243	Knob	2
12	92–7739	Cable – Flywheel Brake	1
13	92–7729	Anchor – Cable SP Upper (Model No. 10312 Only)	1
14	92–7726	Cable – Traction (Model No. 10312 Only)	1
15	3296–73	Nut – Lock	2
16	92–7720	Guide – Rope	1
17	321–50	Screw – Hex Hd. Cap	1
18	612825	Handle – Starter	1
19	612824	Clip – Rope Insert	1
20	92–8632	Washer (Model No. 10211 Only)	1

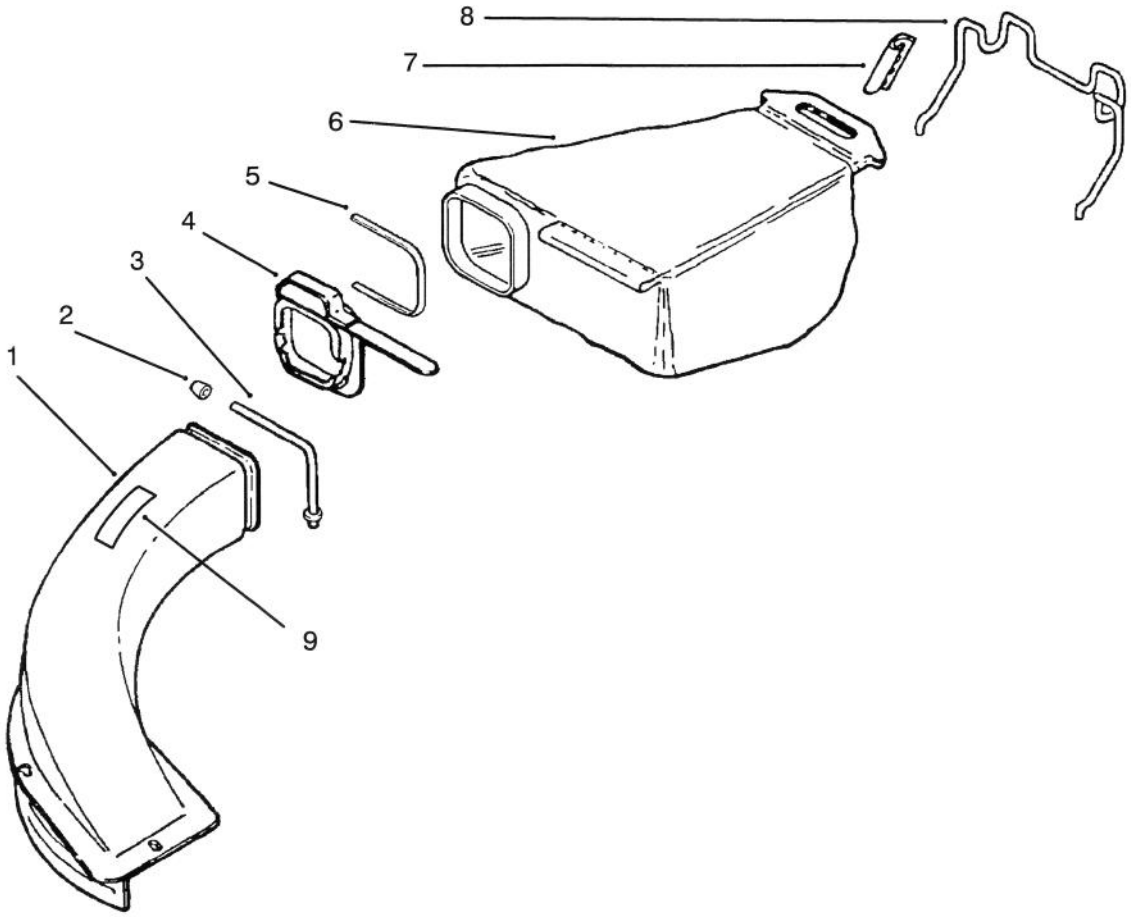

REAR CATCHER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	684729	Chute & Support Assembly (Incl. Ref.# 2,3 & 9)	1
2	614589	Nut – Cap	1
3	614591	Chute Support	1
4	684727	Adaptor Assembly	1

Ref. No.	Part No.	Description	No. Used
5	614700	Tie Strap	1
*6	89801	Bag Assembly	1
7	613462	Hanger Clamp	2
8	613455	Wide Hanger	1
9	92–2919	Decal – Danger	1

*Includes Ref.#5 and instruction sheet for installing bag to adapter assembly. Order via model #89801.

LAWN-BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
89801	Bag Assembly	13	*6	1
130743	Nut – Hex. Flange	7	6	1
303712	Ring – Retaining	9	5	2
316959	Washer – Lock	7	7	1
602587	Reed – Backup Plate	9	17	1
602588	Reed – Carburetor	9	16	1
602850	Gasket	11	13	1
603145	Spring	11	12	1
603164	Nut – Blade	6	5	1
604604	Grommet – Plastic	1	19	2
605120	Grommet	2	5	1
606608	Pin – Wrist	9	4	1
607199	Key – Crankshaft	7	1	1
607560	Plate – Cover	2	17	1
607601	Screw	8	19	4
608850	Screw	11	19	4
609123	Plug – Core	9	21	4
609150	Baffle	5	6	1
609471	Screw	8	21	3
609493	Filter	11	22	1
609629	Dowel	9	20	1
609754	Bearing – Needle	9	12	32
610165	Retainer – Speed Control	11	2	1
610358	Nut	3	21	2
610372	Sealer	9	*	1
610383	Retainer	11	24	1
610728	Cover	11	23	1
610834	Collar – Air Vane	11	4	1
611071	Filter – Fuel	11	15	1
611393	Screw – Hex. Hd.	9	13	2
611396	Seal – Oil	9	11	2
612383	Washer	11	20	1
612543	Blade –21	6	3	1
612782	Line – Gas	5	12	1
612824	Clip – Rope Insert	12	19	1
612825	Handle – Starter	12	18	1
612872	Screw	9	18	2
613208	Screw – Hex. Washer Hd.	8	6	2
613227	Screw – Set	6	6	1
613269	Screw	11	8	2
613311	Gasket	5	7	1
613455	Wide Hanger	13	8	1
613462	Hanger Clamp	13	7	2
613765	Nut – Cage	1	18	1
614008	Plug – Spark	8	4	1
614243	Knob	12	11	2
614249	Tie – Cable	12	7	3
614271	Cover	5	8	1
614426	Washer – Stepped	3	19	2
614427	Cover Wheel	3	16	2
614442	Fitting – Grease	3	6	2
614447	Spacer – Axle Shaft	3	2	2
614589	Nut – Cap	13	2	1
614591	Chute Support	13	3	1
614596	Gear 34 Tooth	4	18	1
614636	Screw – Torx. Washer Hd.	9	14	4
614637	Bracket – Wheel Height Adj.	1	14	4
614640	Hub – Starter	7	5	1
614643	Handle – Lower	12	9	1
614650	Bolt – Shoulder	1	7	2
614654	Plate – Muffler	8	18	1
614666	Shaft – Output	4	7	1
614668	Cover – Gear Case	4	2	1
614669	Pulley – Half	4	12	2
614671	Cover – Drive	2	19	1
614672	Bolt – Shoulder Height Adj.	1	5	4
614674	Cover – Muffler	8	22	1
614675	Base – Shroud	7	3	1
614677	Screw – Sems Thr'd Form.	1	20	2
614681	Baffle	8	20	1
614682	Knob – Cover Plate	1	22	1
614687	Arm – Spring	1	11	2
614689	Screw – Sems	5	1	3
614693	Anchor – Cable SP Lower	12	10	1
614696	Shaft – Intermediate	4	4	1
614697	Screw – Handle	12	8	2
614699	Screw	7	9	3
614700	Tie Strap	13	5	1
614702	Screw	7	2	3
614702	Screw	8	10	1
677525	Plate & Collar	6	2	1
677982	Liner – Split (Set of 2)	9	8	1
678113	Float & Arm Assembly	11	16	1
681678	Cover & Terminal	8	*	1
681737	Set – Ring	9	1	1
681830	Bearing – Upper Main	9	10	1
681831	Bearing – Needle	9	19	1
684049	CD Ignition	8	5	1
684179	Wire – Plug	8	3	1
684725	Cylinder & Crankcase Cover	9	15	1
684727	Adaptor Assembly	13	4	1
684729	Chute & Support Assembly	13	1	1
684743	Flywheel Assembly	7	4	1
684751	Gas Cap Assembly	5	5	1
684776	Wheel & Tire Ass'y 6	1	13	2
684777	Wheel & Tire Ass'y 8	1	6	2
4902040	Screw – Hex Hd.	2	2	2
12-5450	Screw – Thread Forming	8	16	1
14-6009	Mounting Plate Assembly	8	17	1
16-4359	Housing	1	2	1
16-4369	Housing	2	13	1
36-4780	Washer – Thrust	4	17	2
36-4791	Washer	4	5	2
38-7820	Bearing – Ball	4	15	1
39-5770	Decal – Danger	2	16	1
40-1940	Washer	1	8	4
44-2750	Body – Primer	5	10	1
44-3174	Hose – Primer	5	11	1
47-2900	Bushing	3	7	2
53-4690	Stop – Ground Strap	8	15	1
55-3760	Pinion – 15 Tooth	4	3	1
60-8750	Bushing	4	6	2
60-8850	Bushing – Output	4	9	2
60-8890	Gear – Bevel Pinion	4	16	1
60-9010	Strap – Ground	8	13	1
62-6660	Spacer	4	11	1
65-2720	Ring – Klip. Special	3	10	4
65-4710	Ring – Friction	3	11	2
65-4720	Spring – Compression	3	15	2
65-4730	Washer – Thrust Pivot Arm	3	8	2
65-4740	Washer – Thrust, Keyed	3	9	4
65-4750	Gear – Pinion	3	14	2
65-4760	Washer – Clutch, Plastic	3	12	2
66-5370	Spring –Compression	8	7	1
66-5380	Brake Plate Assembly	8	8	1
66-6040	Key – Rocking, RH	3	*	1
66-6050	Key – Rocking, LH	3	13	1
66-7460	Bulb – Primer	5	9	1

*Not Illustrated

LAWN–BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
70–9760	Bushing	3	4	2
71–1280	Decal – Warning	2	12	1
92–1001	Bail – SP Control	12	2	1
92–1002	Bail – Flywheel Brake	12	1	1
92–1004	Spring Arm Ass'y	3	3	2
92–1005	Arm – Spring	1	4	2
92–1008	Knob	3	24	2
92–1008	Knob – Height Adjust	1	10	4
92–1042	Wheel Ass'y – 8	3	18	2
92–1043	V–Belt	3	23	1
92–1057	Bolt – Wheel	3	17	2
92–1097	Decal – Discharge	2	14	1
92–1099	Bolt – Shoulder	1	12	2
92–1156	Wire – Brake Switch Lead	8	14	1
92–1624	Screw – Engine	5	13	3
92–1630	Fan – Mulching	6	4	1
92–1701	Stop – Rope	5	3	1
92–2914	Decal – H.O.C.	2	15	2
92–2915	Decal – H.O.C.	2	8	2
92–2919	Decal – Danger	13	9	1
92–2925	Strap – Insulation	8	12	1
92–4481	Plate – Height Adj.	1	16	2
92–4890	Washer	1	15	4
92–4921	Connecting Rod Assembly	9	6	1
92–4924	Piston	9	3	1
92–4925	Piston & Connecting Rod	9	*	1
92–4927	Bearing	9	7	1
92–4928	Rope –Starter	10	2	1
92–4929	Pulley Assembly	10	3	1
92–4930	Spring – Dog	10	4	2
92–4931	Dog	10	5	2
92–4933	Screw	10	8	1
92–4934	Spring	10	7	1
92–4935	Spring Keeper Assembly	10	9	1
92–4939	Screw – Shoulder	8	9	1
92–4943	Lever – Speed Adjust	11	3	1
92–4944	Spring – Governor	11	5	1
92–4946	Housing Assembly	10	1	1
92–4946	Shroud Assembly	7	8	1
92–4947	Shield – Carburetor	7	11	1
92–4948	Gasket – Carburetor	7	10	2
92–4949	Bracket – Throttle Control	11	7	1
92–4981	Decal – Warning	2	3	1
92–5412	Stop – Pivot	12	3	2
92–6370	Main Jet	11	21	1
92–6371	Nozzle	11	14	1
92–6373	Disc – Throttle	11	6	1
92–6374	Float Chamber	11	18	1
92–6375	Crankshaft	9	9	1
92–6376	Air Vane & Shaft	11	1	1
92–6377	Carburetor Body	11	9	1
92–6380	Tank & Shroud	5	4	1
92–6383	Gasket – Exhaust	8	2	1
92–6385	Jet – High Altitude	11	*	1
92–6389	Pin	11	17	1
92–6542	Pulley – Engine	6	1	1
92–7720	Guide – Rope	12	16	1
92–7723	Bracket – Handle R.H.	2	18	1
92–7724	Bracket – Handle L.H.	2	7	1
92–7726	Cable – Traction	12	14	1
92–7727	Gearcase	4	10	1
92–7728	Guide – Transmission	2	4	1
92–7729	Anchor – Cable SP Upper	12	13	1
92–7731	Plate – Baffle	1	17	2
92–7734	Cable – Throttle	12	6	1
92–7735	Gear Case Assembly	2	6	1
92–7737	Handle – Upper	12	4	1
92–7739	Cable – Flywheel Brake	12	12	1
92–7742	Bracket – Handle R.H.	1	1	1
92–7743	Bracket – Handle L.H.	1	3	1
92–7746	Pivot Arm Ass'y – Rear	3	5	2
92–8615	Applique – Shroud	5	15	1
92–8630	Plate – Mulch	1	21	1
92–8632	Washer	12	20	1
92–8647	Shield – Trailing	2	10	1
92–9569	Decal – Shroud	5	2	1
92–9570	Decal – Shroud	5	2	1
92–9665	Screw – Phillips Hd.	2	1	1
92–9692	Retainer	10	6	1
92–9693	Short Block	8	1	1
92–9695	Carburetor Assembly	11	*	1
92–9697	Kit – Float Valve, Body	11	10	1
321–48	Screw – Hex Hd. Cap	12	5	1
321–49	Screw – Hex Hd. Cap	12	*	1
321–50	Screw – Hex Hd. Cap	12	17	1
322–6	Screw – Hex Hd. Cap	2	9	6
3239–39	Nut – Lock	1	9	2
3256–24	Washer	4	13	1
3285–19	Pin – Groove	4	8	2
3290–459	Rivet – Plastic	8	11	2
3296–5	Nut	4	14	1
3296–29	Nut – Lock	2	11	6
3296–73	Nut – Lock	12	15	2
32144–4	Screw – Taptite	4	1	4
32144–85	Screw	3	22	2

*Not Illustrated

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								