

# LAWN-BOY®

## 21" SILVER SERIES WALK-BEHIND MOWER

MODEL NO. 10211-490001 & UP

MODEL NO. 10312-490001 & UP

---

## PARTS CATALOG

## PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

## IDENTIFICATION AND ORDERING

### MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


**NOTE:** Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

# TABLE OF CONTENTS

Description	Page	Description	Page
Mulch Plate & Wheel Assembly .....	1	Short Block Assembly .....	8
Cover Assembly .....	2	Crankshaft & Piston Assembly .....	9
Rear Axle Assembly .....	3	Recoil Starter Assembly .....	10
Gear Case Assembly .....	4	Carburetor Assembly .....	11
Engine Assembly .....	5	Handle Assembly .....	12
Blade Assembly .....	6	Rear Catcher Assembly .....	13
Shroud & Flywheel Assembly .....	7	Numeric Parts Index .....	14-15

## Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit .....	Model No. 89814	Leaf Bag Kit w/Chute .....	Model No. 89811
Leaf Bag .....	Model No. 89804	Mower & Feed Fertilizer	
Leaf Shredder Kit .....	Model No. 89860	Spreader .....	Model No. 52070

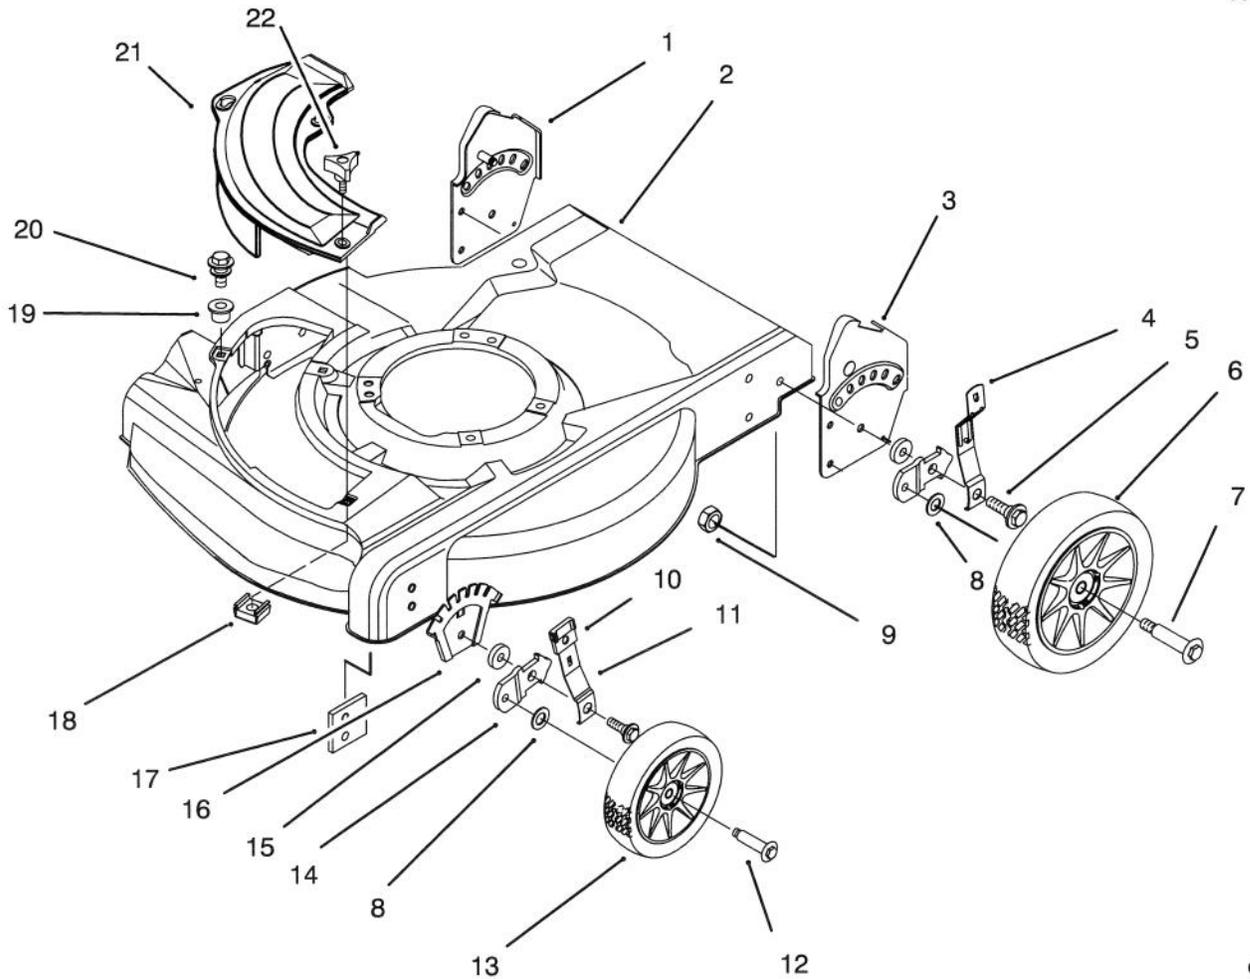


C-1998

## MULCH PLATE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-7742	Bracket - Handle R.H. (Model No. 10211 Only)	1
2	16-4359	Housing (Model No. 10211 Only)	1
3	92-7743	Bracket - Handle L.H. (Model No. 10211 Only)	1
4	92-1005	Arm - Spring (Model No. 10211 Only)	2
5	614672	Bolt - Shoulder Height Adj. (Qt'y (2) Model No. 10312 Only)	4
6	684777	Wheel & Tire Ass'y 8" (Model No. 10211 Only)	2
7	614650	Bolt - Shoulder (Model No. 10211 Only)	2
8	40-1940	Washer (Qt'y (2) Model No. 10312 Only)	4
9	3239-39	Nut - Lock (Model No. 10211 Only)	2

Ref. No.	Part No.	Description	No. Used
10	92-1008	Knob - Height Adjust	4
11	614687	Arm - Spring	2
12	92-1099	Bolt - Shoulder	2
13	684776	Wheel & Tire Ass'y 6"	2
14	614637	Bracket - Wheel Height Adj. (Qt'y (2) Model No. 10312 Only)	4
15	92-4890	Washer (Qt'y (2) Model No. 10312 Only)	4
16	92-4481	Plate - Height Adj.	2
17	92-7731	Plate - Baffle	2
18	613765	Nut - Cage (Model No. 10211 Only)	1
19	604604	Grommet - Plastic	2
20	614677	Screw - Sems Thr'd Form.	2
21	92-8630	Plate - Mulch	1
22	614682	Knob - Cover Plate	1

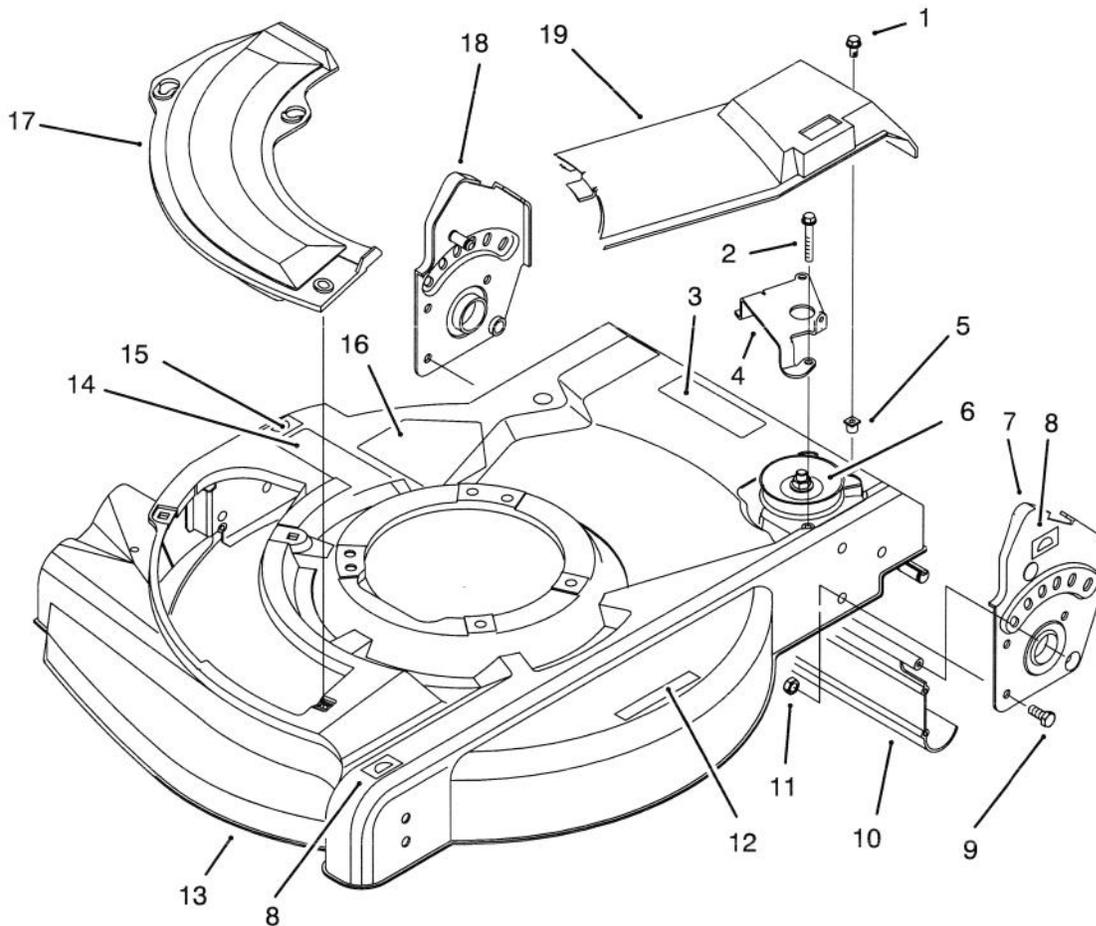


C-1999

## COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-9665	Screw - Phillips Hd. (Model No. 10312 Only)	1
2	4902040	Screw - Hex Hd. (Model No. 10312 Only)	2
3	92-4981	Decal - Warning	1
4	92-7728	Guide - Transmission (Model No. 10312 Only)	1
5	605120	Grommet (Model No. 10312 Only)	1
6	92-7735	Gear Case Assembly (Model No. 10312 Only)	1
7	92-7724	Bracket - Handle L.H. (Model No. 10312 Only)	1
8	92-2915	Decal - H.O.C.	2

Ref. No.	Part No.	Description	No. Used
9	322-6	Screw - Hex Hd. Cap	6
10	92-8647	Shield - Trailing	1
11	3296-29	Nut - Lock	6
12	71-1280	Decal - Warning	1
13	16-4369	Housing (Model No. 10312 Only)	1
14	92-1097	Decal - Discharge	1
15	92-2914	Decal - H.O.C.	2
16	39-5770	Decal - Danger	1
17	607560	Plate - Cover	1
18	92-7723	Bracket - Handle R.H. (Model No. 10312 Only)	1
19	614671	Cover - Drive (Model No. 10312 Only)	1

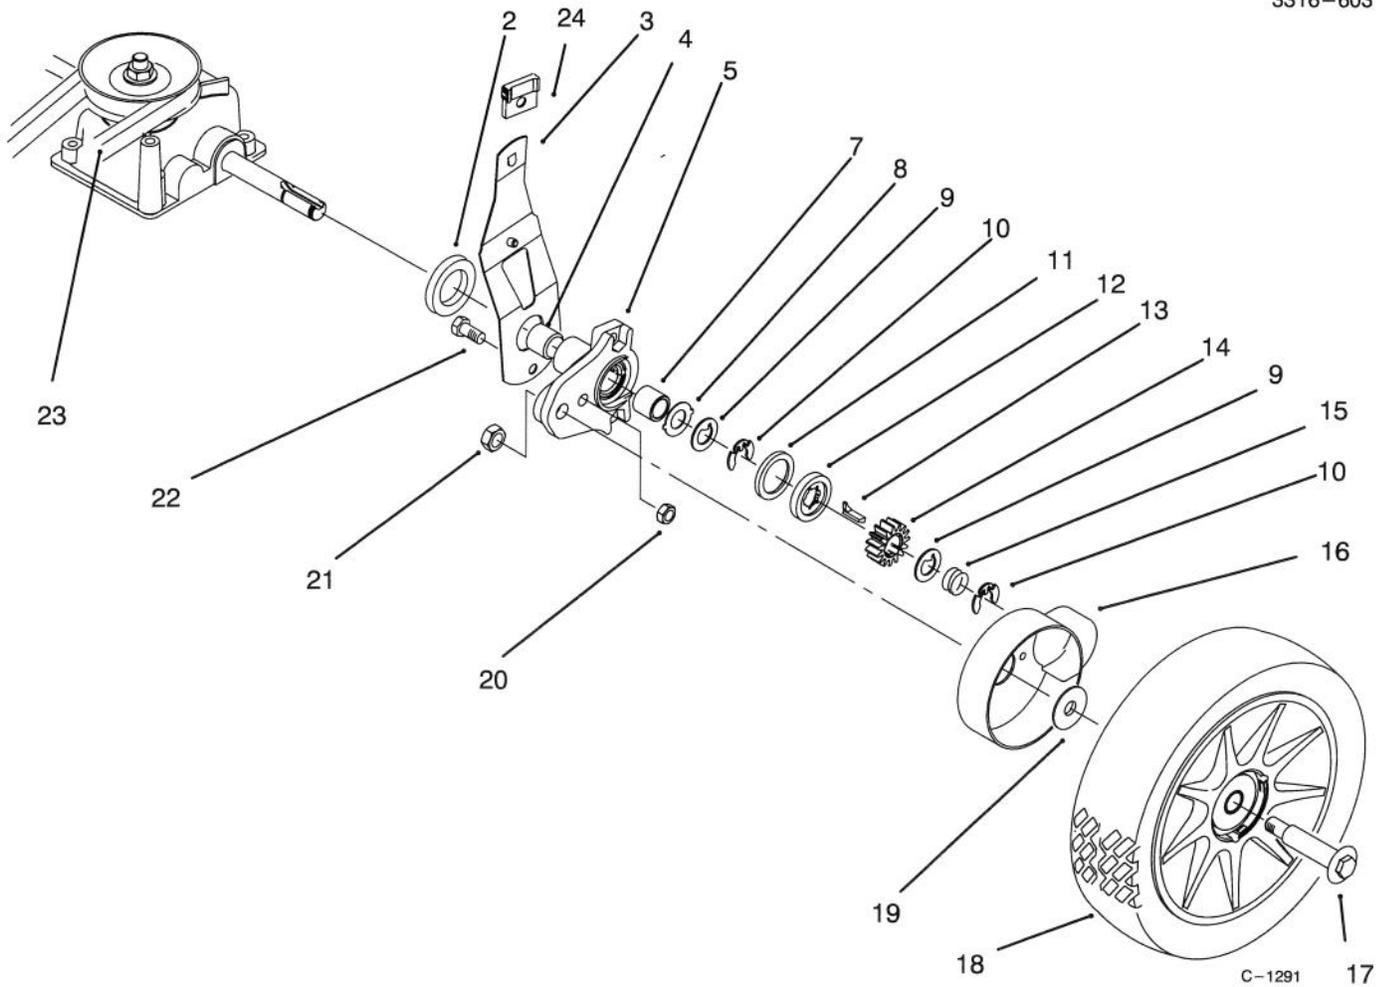


### REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	614447	Spacer - Axle Shaft	2
3	92-1004	Spring Arm Ass'y	2
4	70-9760	Bushing	2
5	92-7746	Pivot Arm Ass'y - Rear (Incl. Ref.#4, 6, & 7)	2
6	614442	Fitting - Grease	2
7	47-2900	Bushing	2
8	65-4730	Washer - Thrust Pivot Arm	2
9	65-4740	Washer - Thrust, Keyed	4
10	65-2720	Ring - Klip. Special	4
11	65-4710	Ring - Friction	2
12	65-4760	Washer - Clutch, Plastic	2

Ref. No.	Part No.	Description	No. Used
13	66-6050	Key - Rocking, LH	1
*	66-6040	Key - Rocking, RH	1
14	65-4750	Gear - Pinion	2
15	65-4720	Spring - Compression	2
16	614427	Cover Wheel	2
17	92-1057	Bolt - Wheel	2
18	92-1042	Wheel Ass'y - 8"	2
19	614426	Washer - Stepped	2
21	610358	Nut	2
22	32144-85	Screw	2
23	92-1043	V-Belt	1
24	92-1008	Knob	2

\*Not Illustrated

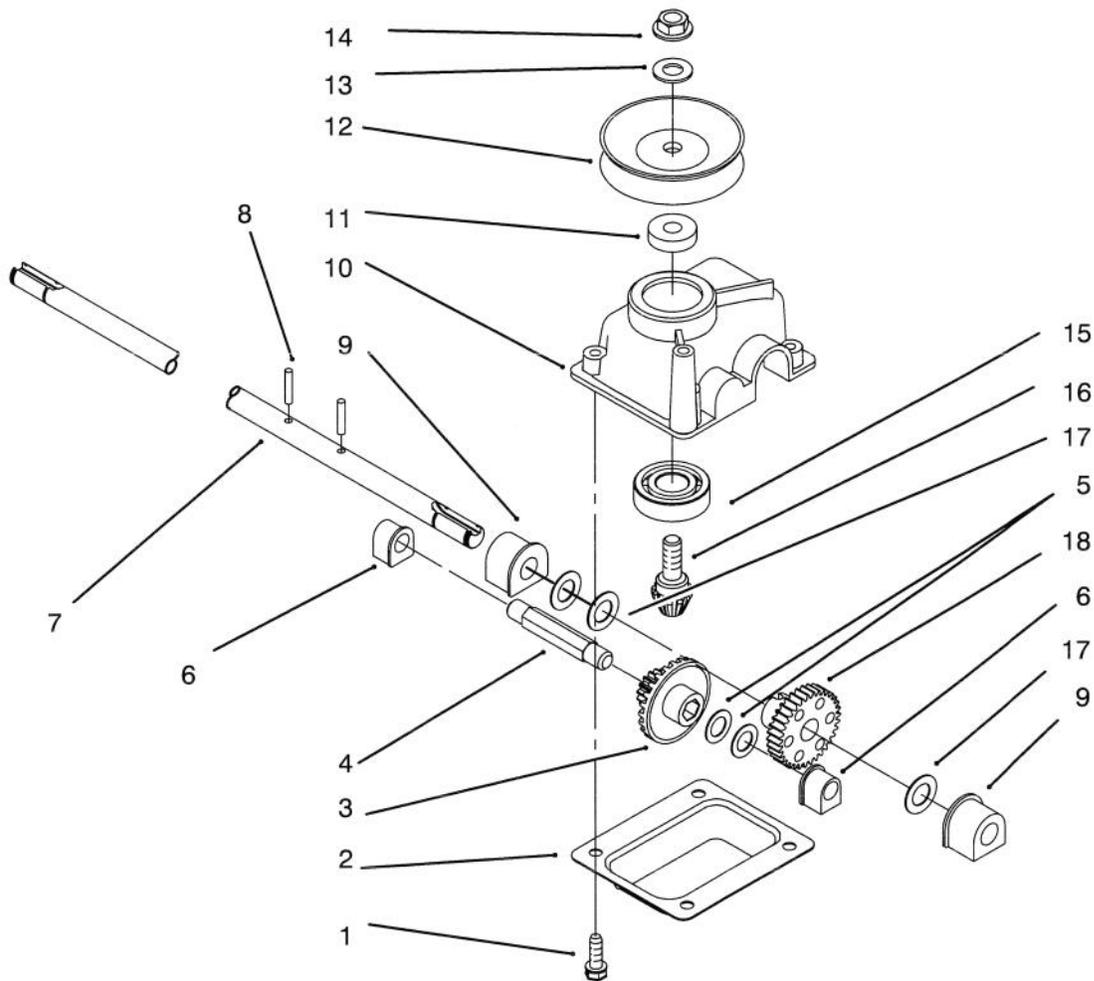


C-1292

## GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
7	614666	Shaft - Output	1
8	3285-19	Pin - Groove	2
9	60-8850	Bushing - Output	2


Ref. No.	Part No.	Description	No. Used
10	92-7727	Gearcase	1
11	62-6660	Spacer	1
12	614669	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	2
18	614596	Gear 34 Tooth	1

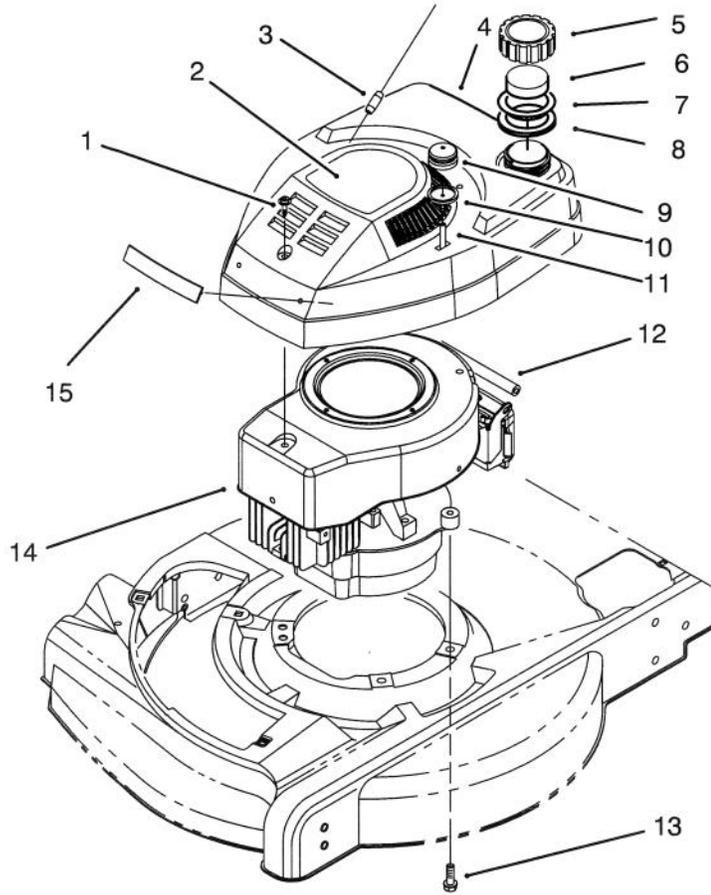

C-2000

## ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	614689	Screw – Sems	3	7	613311	Gasket	1
2	92-9569	Decal – Shroud (Model No. 10211 Only)	1	8	614271	Cover	1
2	92-9570	Decal – Shroud (Model No. 10312 Only)	1	9	66-7460	Bulb – Primer	1
3	92-1701	Stop – Rope	1	10	44-2750	Body – Primer	1
4	92-6380	Tank & Shroud	1	11	44-3174	Hose – Primer	1
5	684751	Gas Cap Assembly (Incl. Ref. #6-8)	1	12	612782	Line – Gas	1
6	609150	Baffle	1	13	92-1624	Screw – Engine	3
				14		Engine	1
				15	92-8615	Applique – Shroud	1

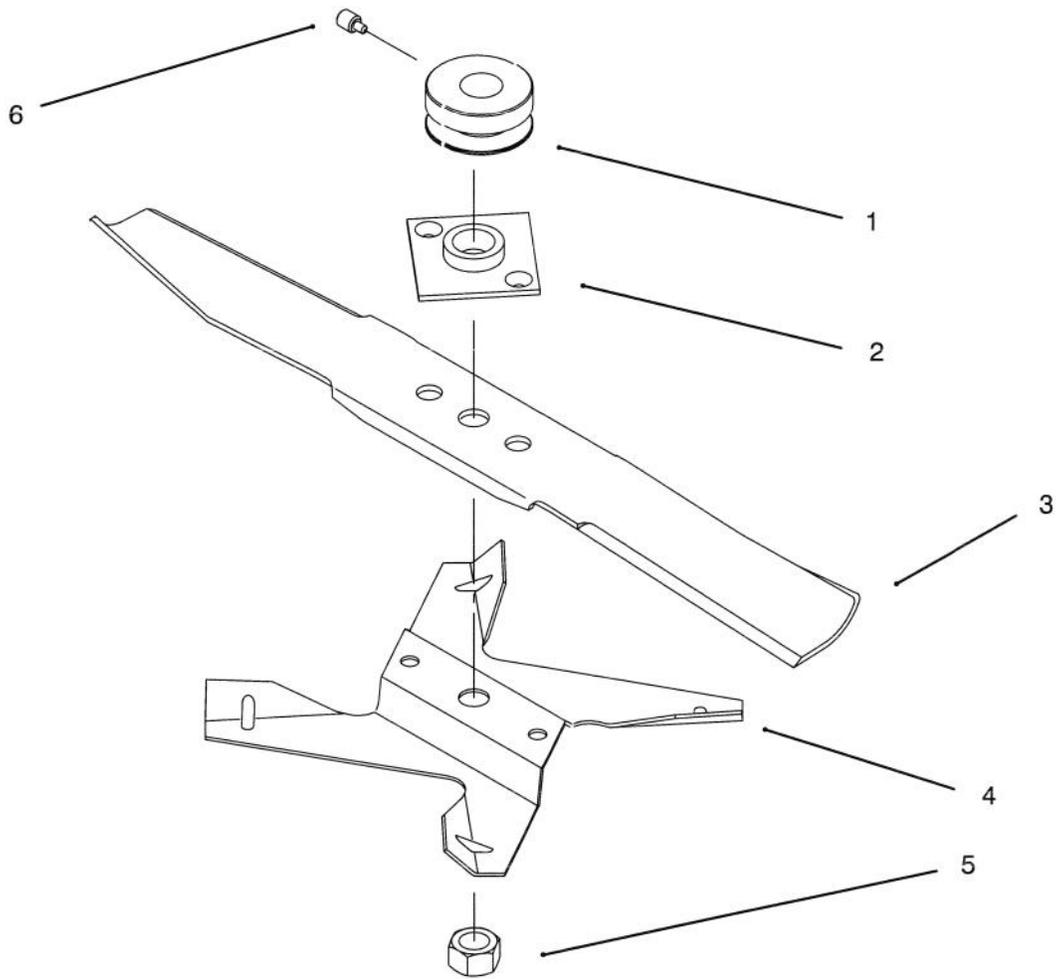


C-2001

### BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-6542	Pulley - Engine (Model No. 10312 Only)	1
2	677525	Plate & Collar	1
3	612543	Blade -21"	1

Ref. No.	Part No.	Description	No. Used
4	92-1630	Fan - Mulching	1
5	603164	Nut - Blade	1
6	613227	Screw - Set (Model No. 10312 Only)	1


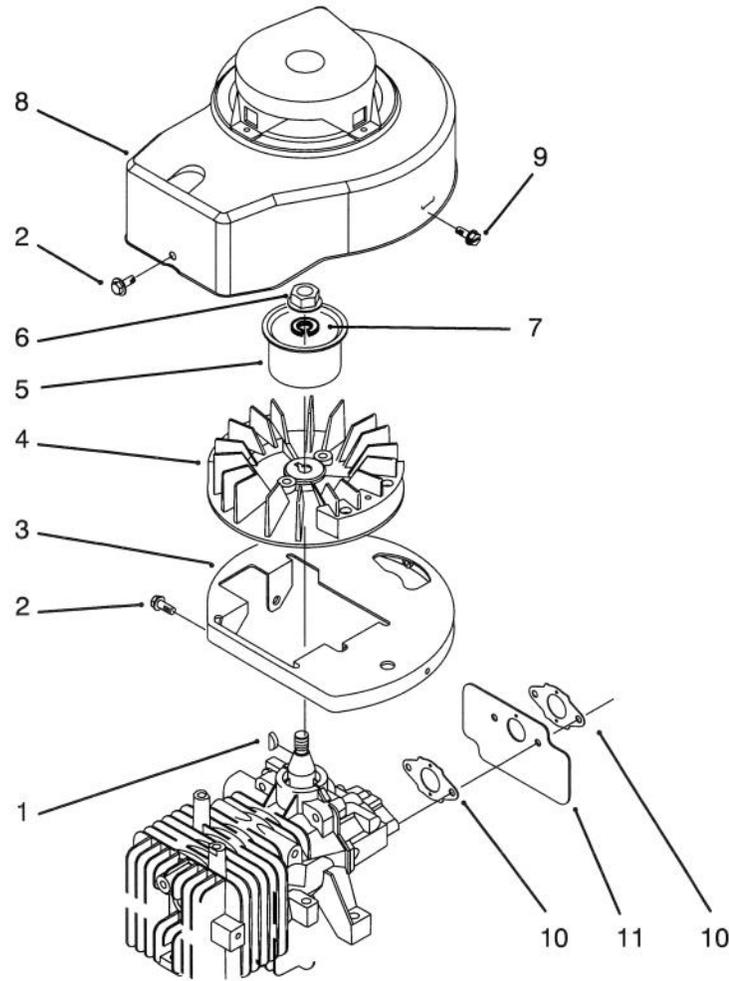


C-1847

## SHROUD & FLYWHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	607199	Key - Crankshaft	1
2	614702	Screw	3
3	614675	Base - Shroud	1
4	684743	Flywheel Assembly	1
5	614640	Hub - Starter	1
6	130743	Nut - Hex. Flange	1

Ref. No.	Part No.	Description	No. Used
7	316959	Washer - Lock	1
8	92-4946	Shroud Assembly	1
9	614699	Screw	3
10	92-4948	Gasket - Carburetor	2
11	92-4947	Shield - Carburetor	1

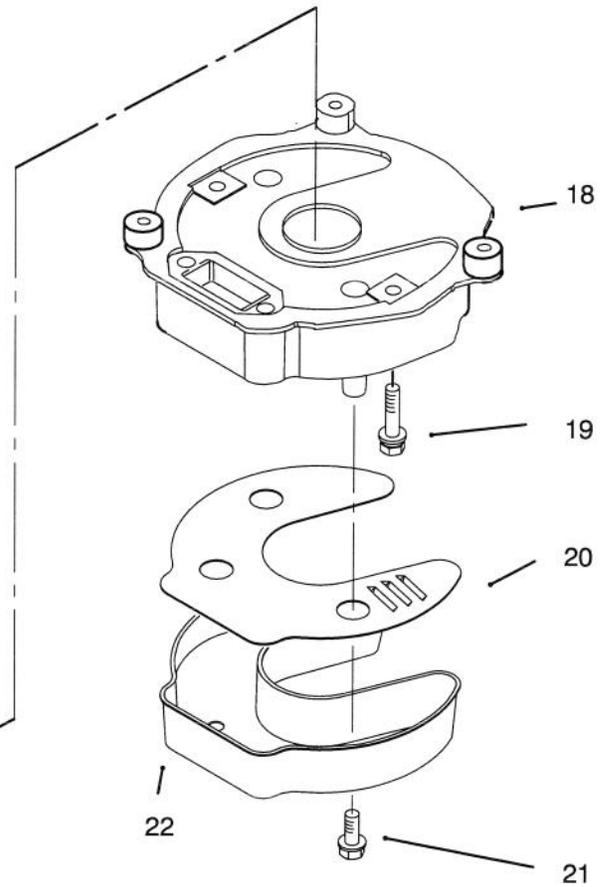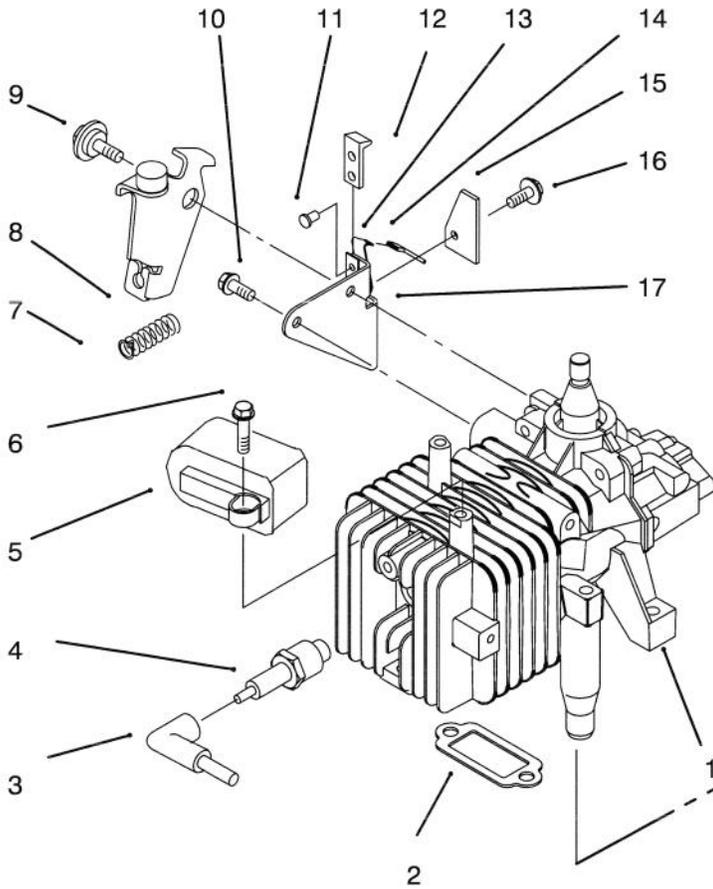


C-1296

## SHORT BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-9693	Short Block	1
2	92-6383	Gasket - Exhaust	1
3	684179	Wire - Plug (Includes)	1
*	681678	Cover & Terminal	1
4	614008	Plug - Spark	1
5	684049	CD Ignition (Incl. Ref. #3)	1
6	613208	Screw - Hex. Washer Hd.	2
7	66-5370	Spring - Compression	1
8	66-5380	Brake Plate Assembly	1
9	92-4939	Screw - Shoulder	1
10	614702	Screw	1

Ref. No.	Part No.	Description	No. Used
11	3290-459	Rivet - Plastic	2
12	92-2925	Strap - Insulation	1
13	60-9010	Strap - Ground	1
14	92-1156	Wire - Brake Switch Lead	1
15	53-4690	Stop - Ground Strap	1
16	12-5450	Screw - Thread Forming	1
17	14-6009	Mounting Plate Assembly	1
18	614654	Plate - Muffler	1
19	607601	Screw	4
20	614681	Baffle	1
21	609471	Screw	3
22	614674	Cover - Muffler	1

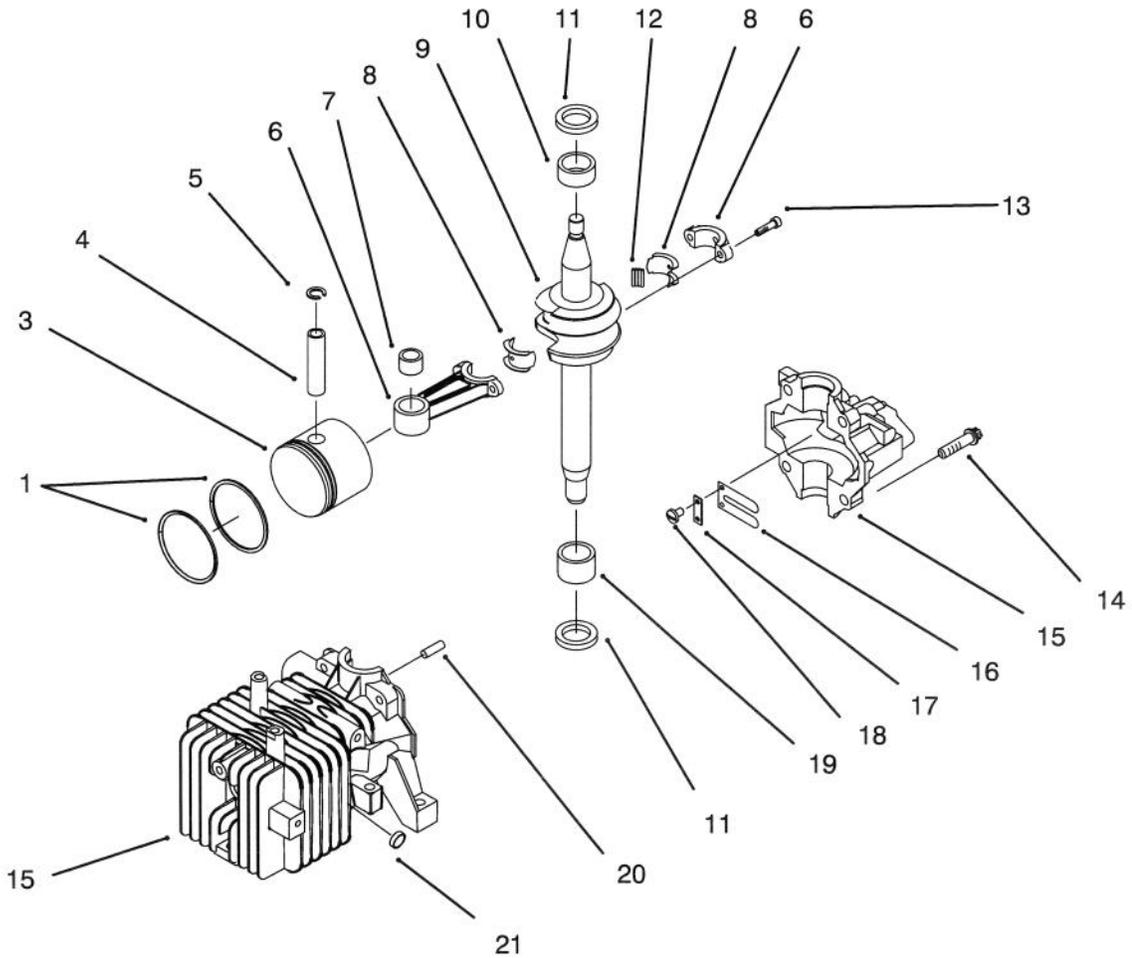


C-1295

## CRANKSHAFT & PISTON ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	681737	Set - Ring	1
3	92-4924	Piston	1
*	92-4925	Piston & Connecting Rod (Incl. Ref. #1 - 7)	1
4	606608	Pin - Wrist	1
5	303712	Ring - Retaining	2
6	92-4921	Connecting Rod Assembly	1
7	92-4927	Bearing	1
8	677982	Liner - Split (Set of 2)	1
9	92-6375	Crankshaft	1
10	681830	Bearing - Upper Main	1
11	611396	Seal - Oil	2

Ref. No.	Part No.	Description	No. Used
12	609754	Bearing - Needle	32
13	611393	Screw - Hex. Hd.	2
14	614636	Screw - Torx. Washer Hd.	4
15	684725	Cylinder & Crankcase Cover	1
16	602588	Reed - Carburetor	1
17	602587	Reed - Backup Plate	1
18	612872	Screw	2
19	681831	Bearing - Needle	1
20	609629	Dowel	1
21	609123	Plug - Core	4
*	610372	Sealer	1

\*Not Illustrated

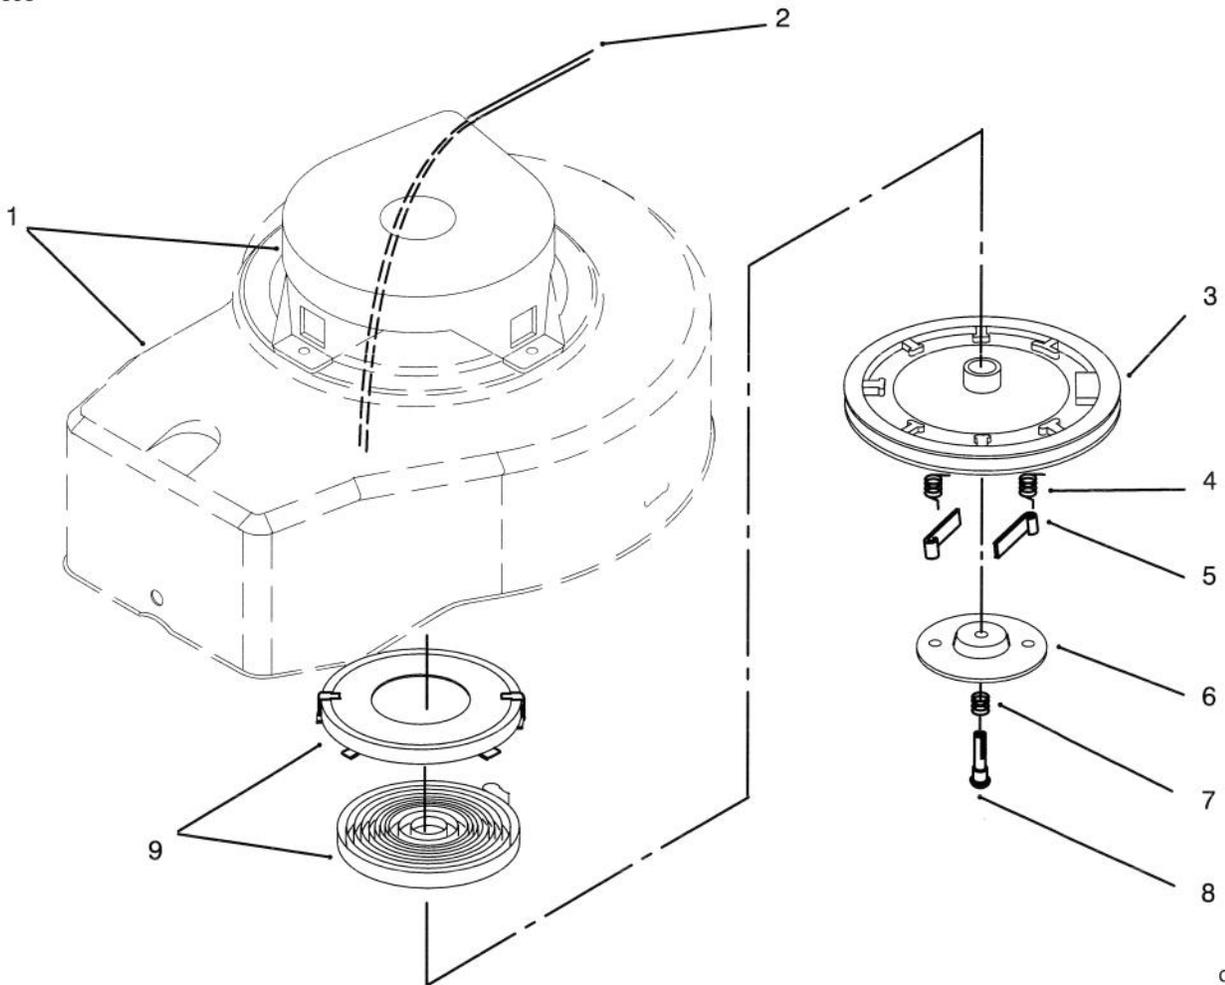


C-1309

## RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-4946	Housing Assembly	1
2	92-4928	Rope - Starter	1
3	92-4929	Pulley Assembly	1
4	92-4930	Spring - Dog	2
5	92-4931	Dog	2

Ref. No.	Part No.	Description	No. Used
6	92-9692	Retainer	1
7	92-4934	Spring	1
8	92-4933	Screw	1
9	92-4935	Spring Keeper Assembly	1

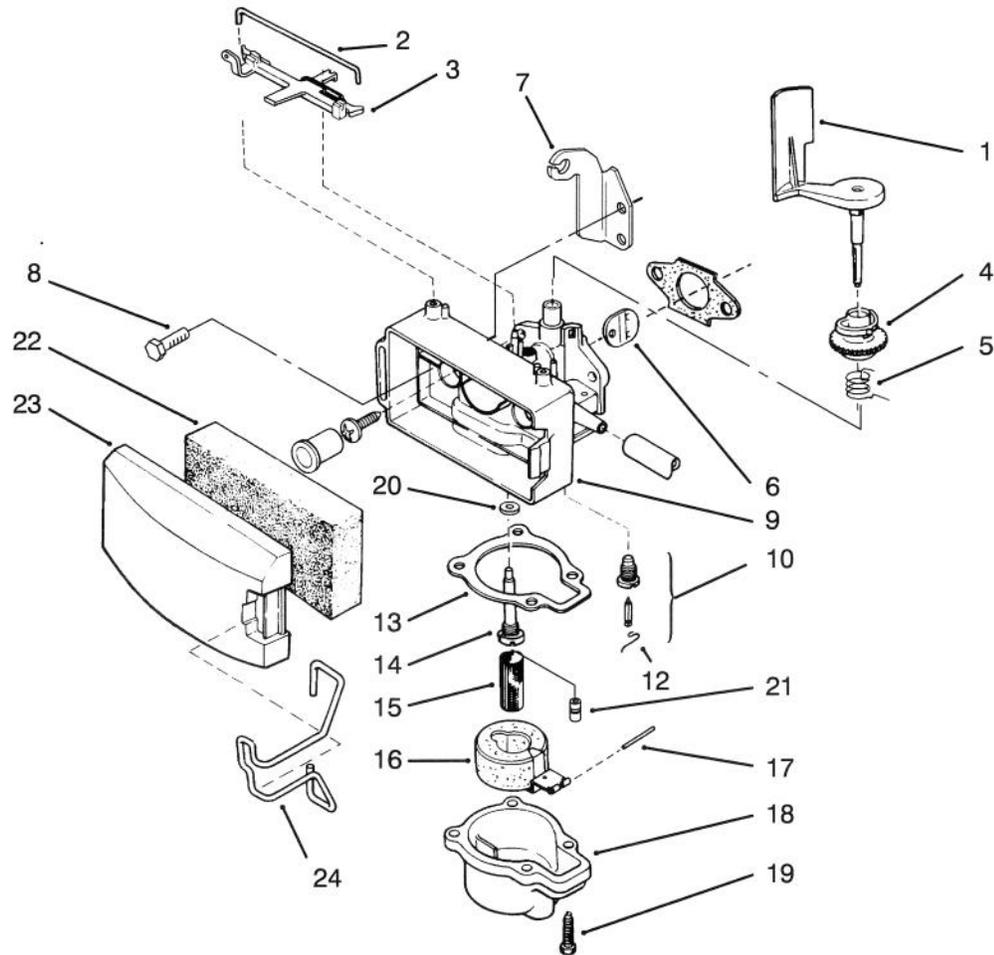


C-1835

## CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6376	Air Vane & Shaft	1	14	92-6371	Nozzle	1
2	610165	Retainer - Speed Control	1	15	611071	Filter - Fuel	1
3	92-4943	Lever - Speed Adjust	1	16	678113	Float & Arm Assembly	1
4	610834	Collar - Air Vane	1	17	92-6389	Pin	1
5	92-4944	Spring - Governor	1	18	92-6374	Float Chamber	1
6	92-6373	Disc - Throttle	1	19	608850	Screw	4
7	92-4949	Bracket - Throttle Control	1	20	612383	Washer	1
8	613269	Screw	2	21	92-6370	Main Jet	1
9	92-6377	Carburetor Body	1	22	609493	Filter	1
10	92-9697	Kit - Float Valve, Body & Seat (Incl. Ref. #12)	1	23	610728	Cover	1
12	603145	Spring	1	24	610383	Retainer	1
13	602850	Gasket	1	*	92-6385	Jet - High Altitude	1
				*	92-9695	Carburetor Assembly	1

\*Not Illustrated

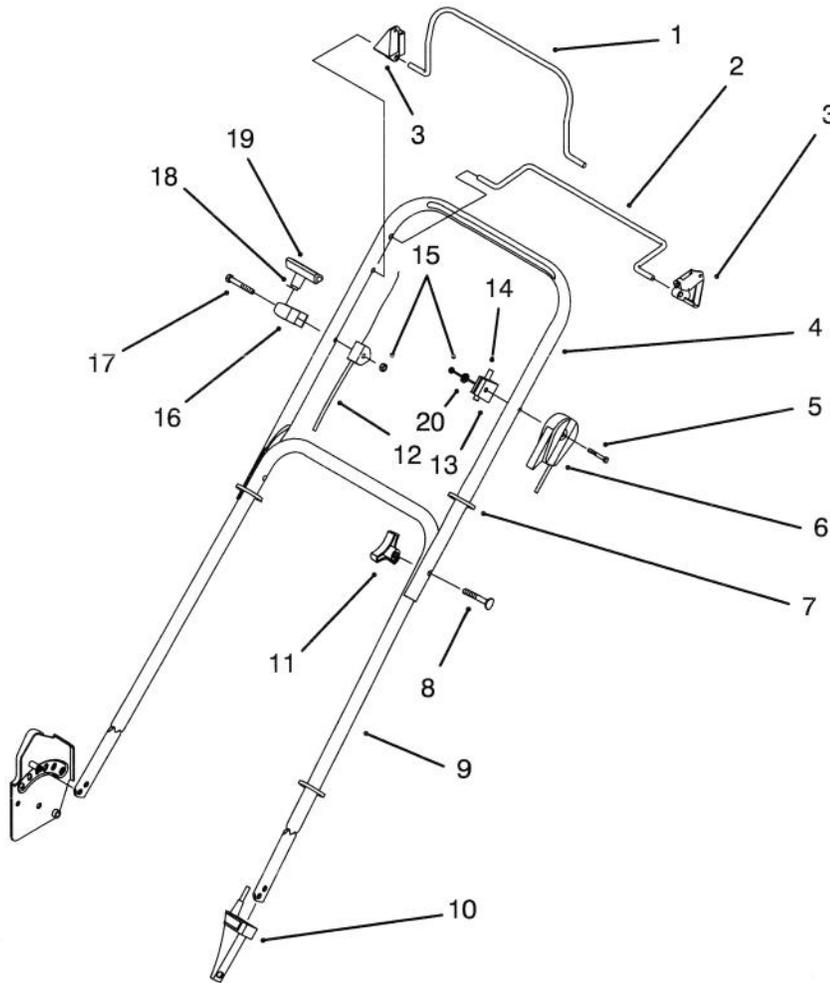


C-2002

## HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-1002	Bail - Flywheel Brake	1
2	92-1001	Bail - SP Control (Model No. 10312 Only)	1
3	92-5412	Stop - Pivot (Qt'y (1) Model No. 10211 Only)	2
4	92-7737	Handle - Upper	1
5	321-48	Screw - Hex Hd. Cap (Model No. 10211 Only)	1
*	321-49	Screw - Hex Hd. Cap (Model No. 10312 Only)	1
6	92-7734	Cable - Throttle	1
7	614249	Tie - Cable (Qt'y (1) Model No. 10211 Only)	3
8	614697	Screw - Handle	2

Ref. No.	Part No.	Description	No. Used
9	614643	Handle - Lower	1
10	614693	Anchor - Cable SP Lower (Model No. 10312 Only)	1
11	614243	Knob	2
12	92-7739	Cable - Flywheel Brake	1
13	92-7729	Anchor - Cable SP Upper (Model No. 10312 Only)	1
14	92-7726	Cable - Traction (Model No. 10312 Only)	1
15	3296-73	Nut - Lock	2
16	92-7720	Guide - Rope	1
17	321-50	Screw - Hex Hd. Cap	1
18	612825	Handle - Starter	1
19	612824	Clip - Rope Insert	1
20	92-8632	Washer (Model No. 10211 Only)	1

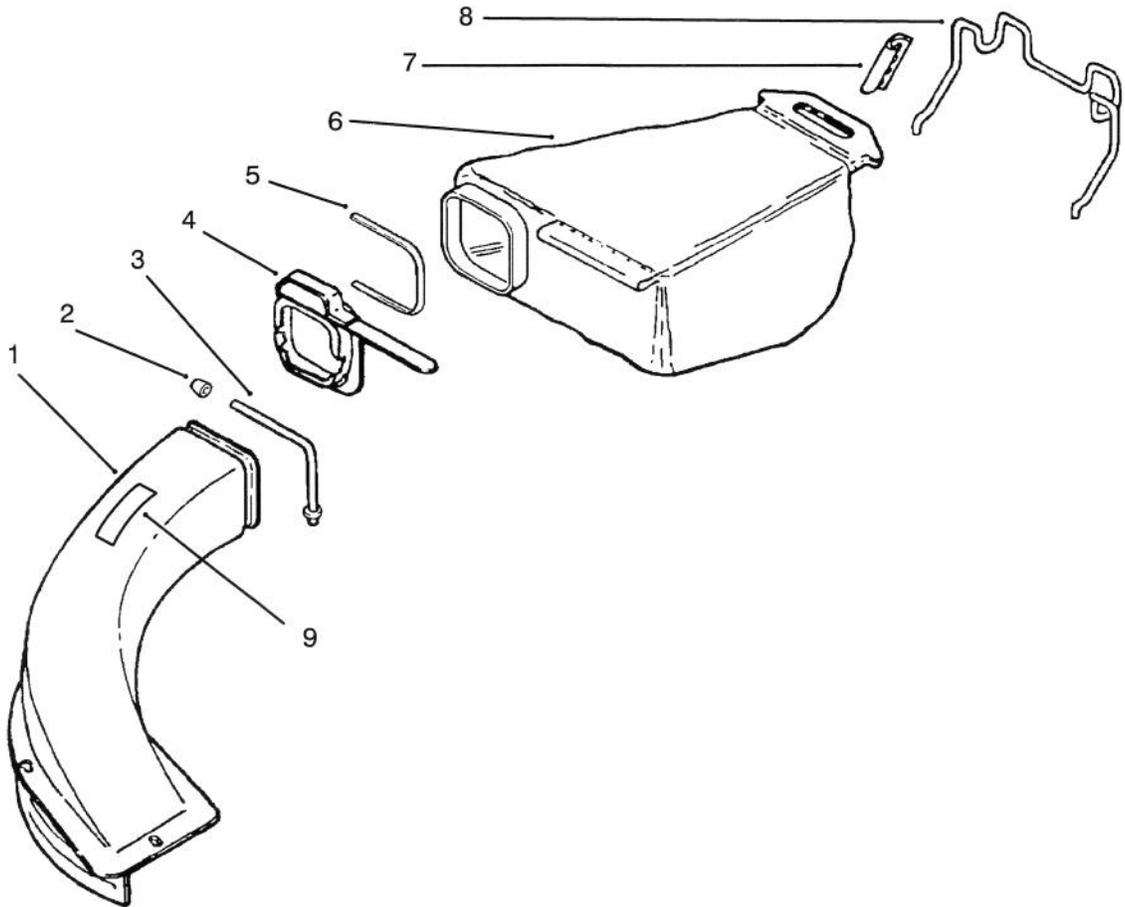

## REAR CATCHER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	684729	Chute & Support Assembly (Incl. Ref.# 2,3 & 9)	1
2	614589	Nut - Cap	1
3	614591	Chute Support	1
4	684727	Adaptor Assembly	1

Ref. No.	Part No.	Description	No. Used
5	614700	Tie Strap	1
*6	89801	Bag Assembly	1
7	613462	Hanger Clamp	2
8	613455	Wide Hanger	1
9	92-2919	Decal - Danger	1

\*Includes Ref.#5 and instruction sheet for installing bag to adapter assembly. Order via model #89801.

# LAWN-BOY PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
89801	Bag Assembly	13 *6 1	614671	Cover - Drive	2 19 1
130743	Nut - Hex. Flange	7 6 1	614672	Bolt - Shoulder Height Adj.	1 5 4
303712	Ring - Retaining	9 5 2	614674	Cover - Muffler	8 22 1
316959	Washer - Lock	7 7 1	614675	Base - Shroud	7 3 1
602587	Reed - Backup Plate	9 17 1	614677	Screw - Sems Thr'd Form.	1 20 2
602588	Reed - Carburetor	9 16 1	614681	Baffle	8 20 1
602850	Gasket	11 13 1	614682	Knob - Cover Plate	1 22 1
603145	Spring	11 12 1	614687	Arm - Spring	1 11 2
603164	Nut - Blade	6 5 1	614689	Screw - Sems	5 1 3
604604	Grommet - Plastic	1 19 2	614693	Anchor - Cable SP Lower	12 10 1
605120	Grommet	2 5 1	614696	Shaft - Intermediate	4 4 1
606608	Pin - Wrist	9 4 1	614697	Screw - Handle	12 8 2
607199	Key - Crankshaft	7 1 1	614699	Screw	7 9 3
607560	Plate - Cover	2 17 1	614700	Tie Strap	13 5 1
607601	Screw	8 19 4	614702	Screw	7 2 3
608850	Screw	11 19 4	614702	Screw	8 10 1
609123	Plug - Core	9 21 4	677525	Plate & Collar	6 2 1
609150	Baffle	5 6 1	677982	Liner - Split (Set of 2)	9 8 1
609471	Screw	8 21 3	678113	Float & Arm Assembly	11 16 1
609493	Filter	11 22 1	681678	Cover & Terminal	8 * 1
609629	Dowel	9 20 1	681737	Set - Ring	9 1 1
609754	Bearing - Needle	9 12 32	681830	Bearing - Upper Main	9 10 1
610165	Retainer - Speed Control	11 2 1	681831	Bearing - Needle	9 19 1
610358	Nut	3 21 2	684049	CD Ignition	8 5 1
610372	Sealer	9 * 1	684179	Wire - Plug	8 3 1
610383	Retainer	11 24 1	684725	Cylinder & Crankcase Cover	9 15 1
610728	Cover	11 23 1	684727	Adaptor Assembly	13 4 1
610834	Collar - Air Vane	11 4 1	684729	Chute & Support Assembly	13 1 1
611071	Filter - Fuel	11 15 1	684743	Flywheel Assembly	7 4 1
611393	Screw - Hex. Hd.	9 13 2	684751	Gas Cap Assembly	5 5 1
611396	Seal - Oil	9 11 2	684776	Wheel & Tire Ass'y 6	1 13 2
612383	Washer	11 20 1	684777	Wheel & Tire Ass'y 8	1 6 2
612543	Blade -21	6 3 1	4902040	Screw - Hex Hd.	2 2 2
612782	Line - Gas	5 12 1	12-5450	Screw - Thread Forming	8 16 1
612824	Clip - Rope Insert	12 19 1	14-6009	Mounting Plate Assembly	8 17 1
612825	Handle - Starter	12 18 1	16-4359	Housing	1 2 1
612872	Screw	9 18 2	16-4369	Housing	2 13 1
613208	Screw - Hex. Washer Hd.	8 6 2	36-4780	Washer - Thrust	4 17 2
613227	Screw - Set	6 6 1	36-4791	Washer	4 5 2
613269	Screw	11 8 2	38-7820	Bearing - Ball	4 15 1
613311	Gasket	5 7 1	39-5770	Decal - Danger	2 16 1
613455	Wide Hanger	13 8 1	40-1940	Washer	1 8 4
613462	Hanger Clamp	13 7 2	44-2750	Body - Primer	5 10 1
613765	Nut - Cage	1 18 1	44-3174	Hose - Primer	5 11 1
614008	Plug - Spark	8 4 1	47-2900	Bushing	3 7 2
614243	Knob	12 11 2	53-4690	Stop - Ground Strap	8 15 1
614249	Tie - Cable	12 7 3	55-3760	Pinion - 15 Tooth	4 3 1
614271	Cover	5 8 1	60-8750	Bushing	4 6 2
614426	Washer - Stepped	3 19 2	60-8850	Bushing - Output	4 9 2
614427	Cover Wheel	3 16 2	60-8890	Gear - Bevel Pinion	4 16 1
614442	Fitting - Grease	3 6 2	60-9010	Strap - Ground	8 13 1
614447	Spacer - Axle Shaft	3 2 2	62-6660	Spacer	4 11 1
614589	Nut - Cap	13 2 1	65-2720	Ring - Klip. Special	3 10 4
614591	Chute Support	13 3 1	65-4710	Ring - Friction	3 11 2
614596	Gear 34 Tooth	4 18 1	65-4720	Spring - Compression	3 15 2
614636	Screw - Torx. Washer Hd.	9 14 4	65-4730	Washer - Thrust Pivot Arm	3 8 2
614637	Bracket - Wheel Height Adj.	1 14 4	65-4740	Washer - Thrust, Keyed	3 9 4
614640	Hub - Starter	7 5 1	65-4750	Gear - Pinion	3 14 2
614643	Handle - Lower	12 9 1	65-4760	Washer - Clutch, Plastic	3 12 2
614650	Bolt - Shoulder	1 7 2	66-5370	Spring - Compression	8 7 1
614654	Plate - Muffler	8 18 1	66-5380	Brake Plate Assembly	8 8 1
614666	Shaft - Output	4 7 1	66-6040	Key - Rocking, RH	3 * 1
614668	Cover - Gear Case	4 2 1	66-6050	Key - Rocking, LH	3 13 1
614669	Pulley - Half	4 12 2	66-7460	Bulb - Primer	5 9 1

\*Not Illustrated

# LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
70-9760	Bushing	3	4	2	92-6375	Crankshaft	9	9	1
71-1280	Decal - Warning	2	12	1	92-6376	Air Vane & Shaft	11	1	1
92-1001	Bail - SP Control	12	2	1	92-6377	Carburetor Body	11	9	1
92-1002	Bail - Flywheel Brake	12	1	1	92-6380	Tank & Shroud	5	4	1
92-1004	Spring Arm Ass'y	3	3	2	92-6383	Gasket - Exhaust	8	2	1
92-1005	Arm - Spring	1	4	2	92-6385	Jet - High Altitude	11	*	1
92-1008	Knob	3	24	2	92-6389	Pin	11	17	1
92-1008	Knob - Height Adjust	1	10	4	92-6542	Pulley - Engine	6	1	1
92-1042	Wheel Ass'y - 8	3	18	2	92-7720	Guide - Rope	12	16	1
92-1043	V-Belt	3	23	1	92-7723	Bracket - Handle R.H.	2	18	1
92-1057	Bolt - Wheel	3	17	2	92-7724	Bracket - Handle L.H.	2	7	1
92-1097	Decal - Discharge	2	14	1	92-7726	Cable - Traction	12	14	1
92-1099	Bolt - Shoulder	1	12	2	92-7727	Gearcase	4	10	1
92-1156	Wire - Brake Switch Lead	8	14	1	92-7728	Guide - Transmission	2	4	1
92-1624	Screw - Engine	5	13	3	92-7729	Anchor - Cable SP Upper	12	13	1
92-1630	Fan - Mulching	6	4	1	92-7731	Plate - Baffle	1	17	2
92-1701	Stop - Rope	5	3	1	92-7734	Cable - Throttle	12	6	1
92-2914	Decal - H.O.C.	2	15	2	92-7735	Gear Case Assembly	2	6	1
92-2915	Decal - H.O.C.	2	8	2	92-7737	Handle - Upper	12	4	1
92-2919	Decal - Danger	13	9	1	92-7739	Cable - Flywheel Brake	12	12	1
92-2925	Strap - Insulation	8	12	1	92-7742	Bracket - Handle R.H.	1	1	1
92-4481	Plate - Height Adj.	1	16	2	92-7743	Bracket - Handle L.H.	1	3	1
92-4890	Washer	1	15	4	92-7746	Pivot Arm Ass'y - Rear	3	5	2
92-4921	Connecting Rod Assembly	9	6	1	92-8615	Applique - Shroud	5	15	1
92-4924	Piston	9	3	1	92-8630	Plate - Mulch	1	21	1
92-4925	Piston & Connecting Rod	9	*	1	92-8632	Washer	12	20	1
92-4927	Bearing	9	7	1	92-8647	Shield - Trailing	2	10	1
92-4928	Rope - Starter	10	2	1	92-9569	Decal - Shroud	5	2	1
92-4929	Pulley Assembly	10	3	1	92-9570	Decal - Shroud	5	2	1
92-4930	Spring - Dog	10	4	2	92-9665	Screw - Phillips Hd.	2	1	1
92-4931	Dog	10	5	2	92-9692	Retainer	10	6	1
92-4933	Screw	10	8	1	92-9693	Short Block	8	1	1
92-4934	Spring	10	7	1	92-9695	Carburetor Assembly	11	*	1
92-4935	Spring Keeper Assembly	10	9	1	92-9697	Kit - Float Valve, Body	11	10	1
92-4939	Screw - Shoulder	8	9	1	321-48	Screw - Hex Hd. Cap	12	5	1
92-4943	Lever - Speed Adjust	11	3	1	321-49	Screw - Hex Hd. Cap	12	*	1
92-4944	Spring - Governor	11	5	1	321-50	Screw - Hex Hd. Cap	12	17	1
92-4946	Housing Assembly	10	1	1	322-6	Screw - Hex Hd. Cap	2	9	6
92-4946	Shroud Assembly	7	8	1	3239-39	Nut - Lock	1	9	2
92-4947	Shield - Carburetor	7	11	1	3256-24	Washer	4	13	1
92-4948	Gasket - Carburetor	7	10	2	3285-19	Pin - Groove	4	8	2
92-4949	Bracket - Throttle Control	11	7	1	3290-459	Rivet - Plastic	8	11	2
92-4981	Decal - Warning	2	3	1	3296-5	Nut	4	14	1
92-5412	Stop - Pivot	12	3	2	3296-29	Nut - Lock	2	11	6
92-6370	Main Jet	11	21	1	3296-73	Nut - Lock	12	15	2
92-6371	Nozzle	11	14	1	32144-4	Screw - Taptite	4	1	4
92-6373	Disc - Throttle	11	6	1	32144-85	Screw	3	22	2
92-6374	Float Chamber	11	18	1					

\*Not Illustrated





